



PROFESSIONAL DIGITAL TWO-WAY RADIO

MOTOTRBO™

**XiR P8860R, XiR P8808R/XiR P8808Ri SERIES
PORTABLE RADIOS**

QUICK REFERENCE GUIDE

en-US

zh-CN



AUGUST 2023

© 2023 Motorola Solutions, Inc. All rights reserved.



MN000586A01-BC

Your Quick Reference Guide

This Quick Reference Guide covers the basic operation of the radio. Check with your dealer or system administrator because your radio may have been customized for your specific needs.

For more operational details and information, refer to the following User Guide:

User Guide

MN008334A01

Important Safety Information

RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios

Product Safety and RF Exposure Compliance



Caution: Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

ATTENTION!

This radio is restricted to Occupational use only. Before using the radio, read the RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios which contains important operating instructions for safe usage and RF energy awareness and control for Compliance with applicable standards and Regulations.

Computer Software Copyrights


The Motorola Solutions products described in this manual may include copyrighted Motorola Solutions computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola Solutions certain exclusive rights for copyrighted computer programs including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program.

Accordingly, any copyrighted Motorola Solutions computer programs contained in the Motorola Solutions products described in this manual may not be copied, reproduced, modified, reverse-engineered, or

¹ Not for Non-Keypad models.

distributed in any manner without the express written permission of Motorola Solutions. Furthermore, the purchase of Motorola Solutions products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola Solutions, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

Radio Controls

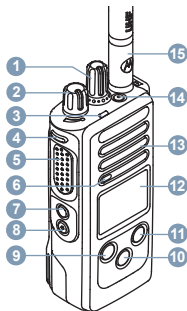

1. Channel Selector Knob
2. On/Off/Volume Control Knob
3. LED Indicator
4. Programmable Side Button 1
5. Push-to-Talk (PTT) Button
6. Microphone
7. Programmable Side Button 2
8. Programmable Side Button 3
9. Button A
10. Button B
11. Button C
12. Display¹
13. Speaker
14. Programmable Emergency Button
15. Antenna

Attaching the Battery



Note:

For optimal performance, charge a new battery 14 to 16 hours before initial use.

1. Align the battery with the rails on the back of the radio.
2. Slide the battery upwards until the latch snaps into place.
3. Lock the battery latch.

Attaching the Antenna

1. Turn off the radio.
2. Set the antenna in the receptacle and turn clockwise.

Turning the Radio On and Off

Rotate the **On/Off/Volume Control Knob** clockwise or counterclockwise until a click sounds.

Adjusting the Volume

Rotate the **On/Off/Volume Control Knob** clockwise or counterclockwise.

LED Indicators

Solid Red

Radio is transmitting.

Blinking Red

Radio has failed the self-test upon powering up, has moved out of range if Auto-Range Transponder System is configured, has Mute mode enabled, is detecting activity or retrieving Over-the-Air Programming transmissions over the air, is encountering charging errors, is encountering programming errors, is indicating a battery mismatch, is receiving an emergency transmission, is receiving call or data, is transmitting in low battery state, or is upgrading to a new Option Board firmware file.

Solid Green

Radio is powering up.

Blinking Green

Radio is scanning for activity.

Solid Yellow

Radio is monitoring a conventional channel.

Blinking Yellow

Radio has Flexible Receive List enabled, has yet to respond to a Call Alert, or radio programming is in progress.

Double Blinking Yellow

Radio has Auto Roaming enabled, has yet to respond to a Group Call Alert, is actively searching for a new site, is not connected to the repeater while in Capacity Plus, is locked, or all Capacity Plus channels are busy.

Display Icons

The following icons appear on the status bar at the top of the radio display. The icons are arranged left most in order of appearance or usage, and are channel-specific.



Emergency



Scan²



High Volume Data



Mute Mode



Tones Disabled

² Not available for Capacity Max.



Ring Only



Vibrate and Ring



Notification



Response Inhibit



Secure



Unsecure



Site Roaming



Option Board



Power Level



Sign In



Sign Out

NOTES

您的快速参考指南

本快速参考指南介绍对讲机的基本操作。由于您的对讲机可能已经针对您的具体需要进行了定制，因此请咨询您的经销商或系统管理员。

有关更多操作详情和信息，请参阅以下用户指南：

用户指南

MN008334A01

重要安全信息

便携式双向对讲机的射频能量辐射和产品安全指南

产品安全和射频辐射合规性说明



小心：在使用本产品之前，请仔细阅读随机附带的产品安全和射频辐射手册中关于安全使用对讲机的操作说明。

注意！


此对讲机仅限职业使用。在使用本对讲机之前，请阅读便携式双向对讲机的射频能量辐射和产品安全指南，其中包括针对安全使用及射频能量常识和控制的重要操作说明，以确保符合适用的标准和法规。

计算机软件版权

本手册中介绍的 Motorola Solutions 产品可能包括存储在半导体存储器或其他介质中的受版权保护的 Motorola Solutions 计算机程序。美国和其他国家/地区的法律为 Motorola Solutions 保留某些受版权保护的计算机程序的专权利，包括但不限于以任何形式拷贝或复制受版权保护的计算机程序的权利。

因此，在未经 Motorola Solutions 明确书面许可的情况下，不得以任何形式对本手册中介绍的 Motorola Solutions 产品所包含的任何受版权保护的 Motorola Solutions 计算机程序进行拷贝、复制、修改、反向工程或分发。此外，购买 Motorola Solutions 的产品未以禁止反言或其他方式，直接或暗示授予 Motorola Solutions 的版权、专利或者专利申请许可，产品销售过程中法律运用所引起的普通非专有许可除外。

对讲机控件

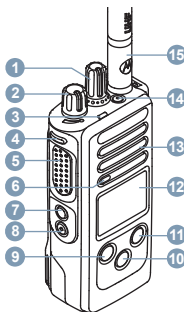

1. 信道选择旋钮
2. 开/关/音量控制旋钮
3. LED 指示灯
4. 侧边可预设按钮 1
5. 通话按键 (PTT) 按钮
6. 麦克风
7. 侧边可预设按钮 2
8. 侧边可预设按钮 3
9. 按键 A
10. 按键 B
11. 按键 C
12. 显示屏¹
13. 扬声器
14. 可预设紧急呼叫按钮
15. 天线

安装电池



注释：

为了获得最佳性能，初次使用前新电池充电时间应为 14 到 16 小时。

1. 将电池与对讲机背面的电池滑轨对齐。
2. 将电池往上滑动，直到电池锁卡入到位。
3. 锁上电池锁。

安装天线

1. 关闭对讲机。
2. 将天线插入插孔中并顺时针转动。

¹ 不适用于非键盘机型。

打开和关闭对讲机

顺时针或逆时针旋转**开/关/音量控制旋钮**，直到听到一声“咔嗒”声。

调节音量

顺时针或逆时针旋转**开/关/音量控制旋钮**。

LED 指示灯

呈红色长亮

对讲机正在传输信号。

呈红色闪烁

对讲机开机自检失败，已移至范围以外（如果配置了自动范围应答机系统），已启用“静音”模式，正在无线检测活动或正在无线检索无线编程发射信号，出现充电错误，出现编程错误，指示电池不匹配，正在接收紧急呼叫发射信号，正在接收呼叫或数据，正在低电池电量状态下发射，或正在升级到新的选件板固件文件。

呈绿色长亮

对讲机正在开机。

呈绿色闪烁

对讲机正在扫描活动。

呈黄色长亮

对讲机正在监听某个传统信道。

呈黄色闪烁

对讲机已启用灵活接收列表，尚未响应呼叫提示，或正在进行对讲机编程。

呈黄色双闪

对讲机已启用自动漫游功能，尚未响应组呼提示，正在主动搜索新站点，在智能信道共享模式下未连接至中继器，已锁定，或者所有智能信道共享信道都处于繁忙状态。

显示屏图标

以下图标出现在对讲机显示屏顶部的状态栏中。图标按出现或使用顺序排列在最左侧，并且是信道特定图标。



紧急呼叫



扫描²



大批量数据



静音模式



禁用提示音



仅响铃



振动和响铃



通知



响应抑制

² 不适用于 Capacity Max。



安全



不安全



站点漫游



选件板



功率级别



登录



注销

NOTES

www.motorolasolutions.com/mototrbo

Motorola Solutions Malaysia Sdn. Bhd.
Plot 2A, Medan Bayan Lepas,
Mukim 12, S.W.D.
11900 Bayan Lepas, Penang,
Malaysia.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2014 and 2023 Motorola Solutions, Inc. All rights reserved.

