

PROFESSIONAL DIGITAL TWO-WAY RADIO

# **MOTOTRBOTM**

XIR P8868T, XIR P8800T/XIR P8800TI SERIES PORTABLE RADIOS

## **QUICK REFERENCE GUIDE**

en-US zh-CN









#### Your Quick Reference Guide

This Quick Reference Guide covers the basic operation of the radio. Check with your dealer or system administrator because your radio may have been customized for your specific needs.

For more operational details and information on warnings and safety, refer to the following User Guide:

4-Rutton Portable Radios

MN000579A01

#### Important Safety Information

RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios

#### Product Safety and RF Exposure Compliance



Caution: Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

#### ATTENTION!

This radio is restricted to Occupational use only. Before using the radio, read the RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios which contains important operating instructions for safe usage and RF energy awareness and control for Compliance with applicable standards and Regulations.

For a list of Motorola Solutions-approved antennas, batteries, and other accessories, visit the following website:

http://www.motorolasolutions.com


#### **Computer Software Copyrights**

The Motorola Solutions products described in this manual may include copyrighted Motorola Solutions computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola Solutions certain exclusive rights for copyrighted computer programs including, but not limited to, the

exclusive right to copy or reproduce in any form the copyrighted computer program.

Accordingly, any copyrighted Motorola Solutions computer programs contained in the Motorola Solutions products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola Solutions. Furthermore, the purchase of Motorola Solutions products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola Solutions, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

#### Radio Controls

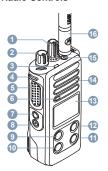

- 1 Channel Selector Knob
- 2 On/Off/Volume Control Knob
- LED Indicator
- 4 Programmable Side Button 1
- 5 Push-to-Talk (PTT) Button
- 6 Microphone
- 7 Programmable Side Button 2
- 8 Programmable Side Button 3
- 9 Button A
- 10Button B
- 11 Button C
- 12Button D
- 13 Display1
- 14Speaker
- 15Programmable Emergency Button
- 16Antenna

Not for Non-Keypad models.

#### Attaching the Battery



**Notice:** For optimal performance, charge a new battery 14 to 16 hours before initial use.

- 1 Align the battery with the rails on the back of the radio.
- 2 Slide the battery upwards until the latch snaps into place.
- 3 Lock the battery latch.

#### Attaching the Antenna

- 1 Turn off the radio.
- 2 Set the antenna in the receptacle and turn clockwise.

#### Powering On/Off the Radio

Rotate the **On/Off/Volume Control Knob** clockwise or counterclockwise until a click sounds.

#### Adjusting the Volume

Rotate the On/Off/Volume Control Knob clockwise or counterclockwise.

#### LED Indicators

#### **Blinking Red**

Radio has failed the self-test upon powering up, has moved out of range if Auto-Range Transponder System is configured, has Mute mode enabled, is receiving an emergency transmission, or is transmitting in low battery state.

#### **Double Blinking Red**

Radio is receiving Over-the-Air Programming file transfer such as Option Board firmware file, Network Frequency file, or Option Board Codeplug file, or is upgrading to a new Option Board firmware file.

#### Solid Green

Radio is powering up.

#### **Blinking Green**

Radio is scanning for activity, is receiving a call or data, is detecting activity over the air, or is retrieving Over-the-Air Programming transmissions.

#### **Double Blinking Green**

Radio is receiving a privacy-enabled call or data.

## **Display Icons**

The following icons appear on the status bar at the top of the radio display. The icons are arranged left most in order of appearance or usage, and are channel-specific.

<u> </u>	Emergency
<b>Z</b> ,	Scan <sup>2</sup>
1	High Volume Data
<b>≪</b> ×	Mute Mode
	Tones Disabled

Not available for Capacity Max.

	Ring Only
<u>}#</u>	Vibrate and Ring
*	Notification
<u> </u>	Response Inhibit
0-m	Secure
0 <del>/</del> ń	Unsecure
φ	Site Roaming
Ö	Option Board
or	Power Level



Sign Out

### NOTES

#### 您的快速参考指南

本快速参考指南介绍了对讲机的基本操作。由于您的对讲机可能已经针对您的具体需要讲行了定制,因此请咨询您的经销商或系统管理员。

有关更多操作详细信息以及警告和安全相关信息,请参阅以下用户指南:

4 按钮便携式对讲机

MN000579A01

#### 重要安全信息

#### 便携式双向对讲机的射频能量辐射和产品安全手册

#### 产品安全和射频辐射说明



**警告:** 在使用本产品之前,请仔细阅读随机附带的产品安全和射频辐射手册中关于安全使用对讲机的操作说明。

#### 注意!

此对讲机仅限职业应用。在使用本对讲机之前,请阅读便携式双向对讲机 的射频能量辐射和产品安全于册,其中包括安全操作说明以及射频能量信 息和控制,以确保符合适用的标准和法规。

要获得经 Motorola Solutions 核准的天线、电池和其他附件的清单,请访问以下网站:

http://www.motorolasolutions.com


#### 计算机软件版权

本手册所介绍的 Motorola Solutions 产品可能包括存储于半导体存储器或 其他介质中的有版权的 Motorola Solutions 计算机程序。美国和其他国家/ 地区的法律保护 Motorola Solutions 的某些有版权的计算机程序的专有权 利,其中包括但不限于以任何形式拷贝或复制有版权的计算机程序的专有 权利。

因此,在未经 Motorola Solutions 书面允许的情况下,不允许以任何形式对本手册所介绍的 Motorola Solutions 产品所包含的任何有版权的

Motorola Solutions 计算机程序进行拷贝、复制、修改、反向工程或分 发。另外,购买 Motorola Solutions 的产品并不能被认为是直接或者暗示 或以禁止反言或其它方式获得了 Motorola Solutions 的版权许可、专利或 者专利申请,产品销售过程中法律运用所引起的普通非专有性许可证除外。

### 对讲机控件

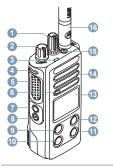

- 1 信道选择旋钮
- 2 开/关/音量控制旋钮
- 3 LED 指示灯
- 4 侧边可预设按钮 1 5 通话按键 (PTT)
- 6 麦克风
- 7 侧边可预设按钮 2
- 8 侧边可预设按钮3
- 9 按键 A 10按键 B
- 11按键 C
- 12按键 D
- 12 按键 D
- 13並小用 14扬声器
- 15可预设紧急呼叫按钮
- 16天线

#### 安装电池



**说明**: 为了获得最佳性能,初次使用前新电池充电时间应为 14 到 16 小时。

- 1 将电池与对讲机背面的滑轨对齐。
- 2 将电池往上滑动, 直到电池锁卡入到位。
- 3 锁上电池锁。

<sup>1</sup> 不适用于非键盘机型。

## **安装天线** 1 关闭对讲机。

**2** 将天线插入插孔中并顺时针转动。

## 打开/关闭对讲机

顺时针或逆时针旋转**开/关/音量控制旋钮**,直到听到一声"咔嗒"声。

## 调节音量

顺时针和逆时针旋转开/关/音量控制旋钮。

## LED 指示灯

## 红灯闪烁

对讲机开机自检失败: 已移至范围以外(如果配置了自动范围应答机系统); 已启用"静音"模式;正在接收紧急呼叫发射信号;或者正在低电池电量状态下发射。

## 红灯双闪

对讲机正在接收无线编程无线传输(例如选件板固件文件、网络频率文件或选件板 Codeplug 文件)或正在升级到新的选件板固件文件。

#### 绿灯长亮

对讲机正在开机。

#### 绿灯闪烁

对讲机正在扫描活动;正在接收呼叫或数据;正在无线检测活动;或者正在无线检索无线编程发射信号。

#### 绿灯双闪

对讲机正在接收加密呼叫或数据。

### 显示屏图标

以下图标出现在对讲机显示屏顶部的状态栏中。图标按出现或使用顺序排列在最左侧,并为信道特定图标。



紧急呼叫



扫描2



大批量数据



静音模式



禁用提示音



仅响铃



响铃并振动



通知



响应抑制

<sup>&</sup>lt;sup>2</sup> 不适用于 Capacity Max。

<sup>, 12,13 7 7 2 2 2 2 2 1 1 1</sup> 

O-m	安全
0/4	不安全
φ	站点漫游
o	选件板
或	功率级别
20	登录
o <u>s</u>	注销

## www.motorolasolutions.com/mototrbo

Motorola Solutions Malaysia Sdn. Bhd. Plot 2A, Medan Bayan Lepas, Mukim 12, S.W.D. 11900 Bayan Lepas, Penang, Malaysia.

Printed in Malaysia

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2014 and 2017 Motorola Solutions, Inc. All rights reserved.

