



ASTRO® APX™ 1000i Digital Portable Radios Quick Reference Card

RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios

ATTENTION!

This radio is restricted to Occupational use only. Before using the radio, read the RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios which contains important operating instructions for safe usage and RF energy awareness and control for Compliance with applicable standards and Regulations.

Radio Controls

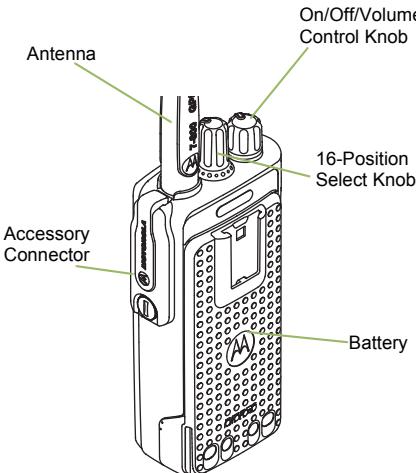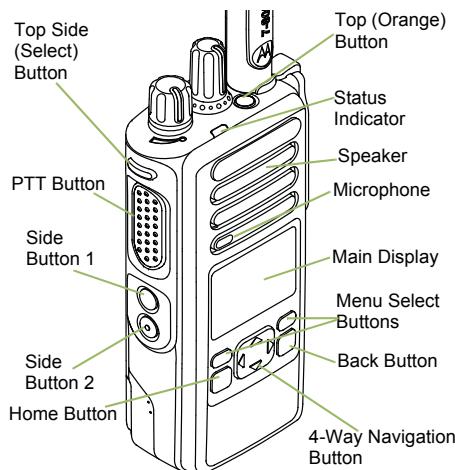

Turning the Radio On/Off

- On** – Rotate the On/Off/Volume knob clockwise.
- Off** – Rotate the On/Off/Volume knob counterclockwise.

Selecting Zones and Channels

- Zone** – Select the required zone using the radio menu.
- Channel** – Turn the Channel knob or select the required channel using the radio menu.

Receiving and Transmitting

- 1 Select zone or channel.
- 2 Listen for a transmission.
OR
Press and hold the **Volume Set** button.
- 3 Adjust the volume, if necessary.
- 4 Press the **PTT** button to transmit; release to receive.

Sending an Emergency Alarm

- 1 Press and hold the **Emergency** button*.
- 2 The display shows **Emergency** and the current zone/channel. You hear a short, medium-pitched tone, and the LED blinks red momentarily.
- 3 When acknowledgment is received, you hear four beeps; alarm ends; and radio exits emergency.

* Default timer of Emergency button press to activate Emergency is 300 milliseconds. This timer is programmable, see **Emergency Operation** in the user guide for details.

To exit emergency at any time, press and hold the **Emergency** button.



PMLN7944A



English

Sending an Emergency Call

- 1 Press the **Emergency** button.
- 2 Press and hold the **PTT** button. Speak clearly into the microphone.
- 3 Release the **PTT** button to end call.

To exit emergency at any time, press and hold the **Emergency** button.

Sending a Silent Emergency Call

- 1 Press the **Emergency** button.
- 2 The display does not change; the LED does not light up, and there is no tone.
- 3 Silent emergency continues until you:
Press and hold the **Emergency** button to exit emergency state.
OR
Press and release the **PTT** button to exit the Silent Emergency Alarm mode and enter regular dispatch or Emergency Call mode.

To exit emergency at any time, press and hold the **Emergency** button.

Display Status Icons

 Receiving a call or data.

 Transmitting a call or data.

 Blinks when the battery is low.

	The more stripes, the stronger the signal strength for the current site (trunking only).
	Direct radio-to-radio communication or connected through a repeater. On = Direct. Off = Repeater.
	This channel is being monitored.
	L = Radio is set at Low power. H = Radio is set at High power.
	Scanning a scan list.
	Blinking dot = Detects activity on the Priority-One Channel during scan. Steady dot = Detects activity on the Priority-Two Channel during scan.
	The vote scan feature is enabled.

Menu Navigation

