

- 1 External Antenna Connector
- 2 Emergency Button
- 3 Programmable Rotary Knob
- 4 Earpiece
- 5 Programmable Side Key
- 6 Push-To-Talk Button (PTT)
- 7 Soft Key
- 8 Send Key
- 9 Speaker (under keypad)
- 10 Speaker Control Key
- 11 Side Connector
- 12 Bottom Connector
- 13 Battery Latch
- 14 Keypad Backlight Sensor
- 15 Bottom Microphone
- 16 Alphanumeric Keypad
- 17 Four Way Navigation Key
- 18 On-Off/End/Home Key
- 19 Menu Key
- 20 Color Display
- 21 Top Microphone
- 22 LED Status Indicator
- 23 Antenna

LED Status Indicator




Indicator	Status
Solid green	In use Repeating call
Blinking green	In service
Solid red	Out of service
Blinking red	Connecting to a network Entering DMO
Solid orange	Transmit Inhibit in service Channel busy (DMO)/occupied by another call
Blinking orange	Incoming private or phone call
No indication	Idle Switched off

Battery Capacity Information




Information	Description
Green icon	Full (50% – 100% capacity)
Yellow icon	Middle (20% – 50% capacity)
Red icon	Low (10% – 20% capacity)
Empty icon	Very low (5% – 10% capacity)
Low battery message	Less than 5% capacity

Installing the Battery

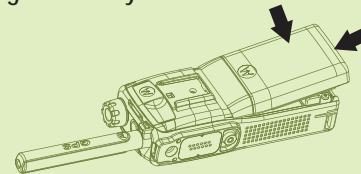

Remove the battery from its protective white paper box. Insert the battery top into the compartment as illustrated. Carefully press the battery bottom downward until it clicks into place. Before using your terminal for the first time, charge the battery for 4 hours to ensure the battery is initialised to its full capacity.

Attaching the Antenna

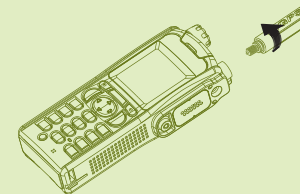

Turn the terminal off before attaching the antenna. Align the bottom of the antenna and the screw-in base on the top of the terminal. Turn clockwise until snug. Do not force.

Unlocking the Terminal

Your terminal may be locked at power up. To unlock the terminal after powering on, enter the code at the prompt. The unlock code is originally set to 0000. Your Service Provider may change this number before you receive your terminal.

Unlocking/Locking Keys

To unlock/lock the keypad, press the Menu button and then *.

How to Hold Your Terminal

The terminal has two microphones: a top microphone for Simplex dispatcher/private calls and a bottom microphone for Duplex telephone-like calls. When using low audio, hold your terminal as you would a telephone. Speak into the bottom microphone. Listen via the earpiece. Keep antenna at least 2.5 centimetres from your head and body.



When using high audio, hold terminal in a vertical position with its top microphone 5 to 10 centimetres away from your mouth. Speak into the top microphone. Listen via the terminal's internal speaker. Keep antenna at least 2.5 centimetres from your head and body.



Looking After Your Terminal

Never leave your terminal or battery in extreme temperatures (over 60 °C) - for example, behind windscreen in very hot, direct sunlight. Do not immerse your terminal in water. To clean your terminal, use a moistened or antistatic cloth. Do not use a dry or electrostatically charged cloth.

More Information on the Terminal

Visit the Motorola Web site at: <http://www.motorolasolutions.com/tetraterminals>

Motorola Online

MTP850 FuG Feature User Guide and related documentation
Available at: <https://emeaonline.motorolasolutions.com/>

Open Source Software Legal Notices

Available at: <https://emeaonline.motorolasolutions.com/>
and on Customer Programming Software (CPS) DVD



This document is copyright protected. Duplications for the purpose of the use of Motorola products are permitted to an appropriate extent. Duplications for other purposes, changes, additions or other processing of this document are not permitted. Only this electronically-saved document is considered to be the original. Duplications are considered merely copies. Motorola Solutions, Inc., and its subsidiaries and affiliates do not vouch for the correctness of such kinds of copies.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.
© 2013 Motorola Solutions, Inc. All rights reserved.

68015000282-D



Icons

Icon	Description
	In Service (TMO)
	No Service (TMO)
	Signal Strength
	Direct Mode (DMO)
	Gateway Communication Mode (DMO)
	Repeater Communication Mode (DMO)
	Repeater Mode
	Emergency Mode
	Talkgroup Scrolling
	Scan (TMO)
	Battery Level
	All/Simplex/Duplex Ring Muted
	Vibrate Only/Vibrate with Ring
	Low/High Audio
	Earpiece Connected

Icon	Description
	Speaker Off
	Man Down Active/Man Down Alert
	Man Down Failure
	New Message Has Arrived
	New Message(s)
	Packet Data
	GPS
	WAP
	End-to-End Encryption
	High RF Power
	RUI Logon
	RUI Packet Data
	Call Out
	RMS
	WAP Box

Turning the Terminal On/Off

To power the terminal on/off, press and hold On/Off Key.

Using the Terminal Menu

To enter the menu, press the Menu Key.
To scroll through the menu, press the Up or Down Navigation Key.
To select a menu item, press Select or the Right Navigation Key.
To return to previous level, press Back or the Left Navigation Key.
To exit the menu items, press the Home Key.

Selecting Trunked/Direct Mode Operation

From the Home display press Optns, select Trunked Mode or Direct Mode.

Selecting Repeater Mode Operation

In the Repeater Mode your terminal is used to extend the DMO range by retransmitting received information.
From the Home display press Optns, select Repeater Mode.

Making a TMO/DMO Group Call

Enter TMO or DMO. From the Home display navigate to the desired group. Press Select (if configured). Press and hold the PTT. Wait for the talk permit tone (if configured) and talk. Release the PTT to listen.

Making a TMO/DMO Emergency Group Call

Enter TMO or DMO. Press and hold the Emergency Button. Emergency alarm is sent automatically. Press and hold the PTT. Wait for the talk permit tone (if configured) and talk. Release the PTT to listen.
If using Hot Mic feature, wait for the Emgcy Mic On message to appear on the display and talk without pressing the PTT.
To exit Emergency Mode, press and hold Exit soft key.

Making a Simplex Private Call

From the Home display dial a number. Press and release the PTT. The ringing sounds. The called party answers. Wait for the called party to finish speaking. Press and hold the PTT. Wait for the talk permit tone (if configured) and talk. Release the PTT to listen. Press the End Key to terminate the call.

Making a Duplex Private Call/Phone/PABX Call

From the Home display dial a number. Press and release the Send Key. The ringing sounds. The called party answers. Press the End Key to terminate the call.

Sending a New Message

Press the Menu Key and select Messages > New Message. Write your message. Select Send. Select your message recipient. Select Send, or press the Send Key to send the message.

Sending a Status Message

Select the desired group, then press the Menu Key and select Messages > Send Status. Select a status and press the Send Key or PTT.