




Controls and Indicators

www.motorolasolutions.com

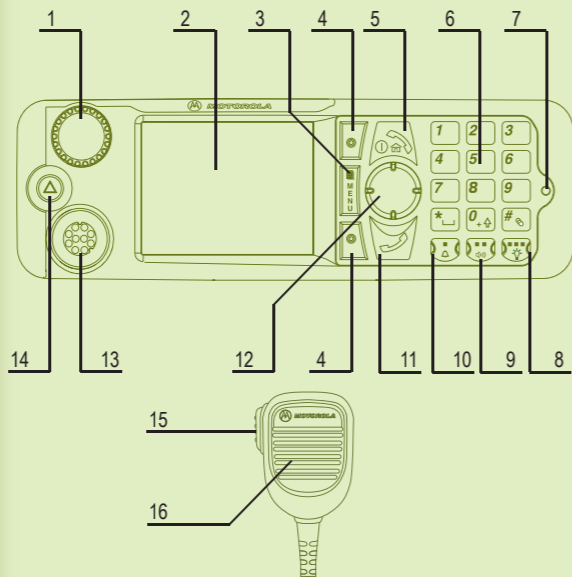


- 1 Rotary Knob/On Push Button
- 2 Color Display
- 3 Menu Key
- 4 Soft Key
- 5 On-Off/End/Home Key
- 6 Alphanumeric Keypad
- 7 LED Status Indicator
- 8 Backlight Key
- 9 Speaker Control Key
- 10 External Alarm Key
- 11 Send Key
- 12 Four Way Navigation Key
- 13 Mobile Microphone Port
- 14 Emergency Button
- 15 Push-To-Talk Button (PTT)
- 16 Microphone

### LED Status Indicator



Indicator	Status
Solid green	In use
Flickering green	In service
Solid red	Out of service
Flickering red	Connecting to a network Entering DMO
Solid orange	Transmit Inhibit in service Channel busy in DMO
Flickering orange	Incoming private or phone call
No indication	Switched off

### Home Display

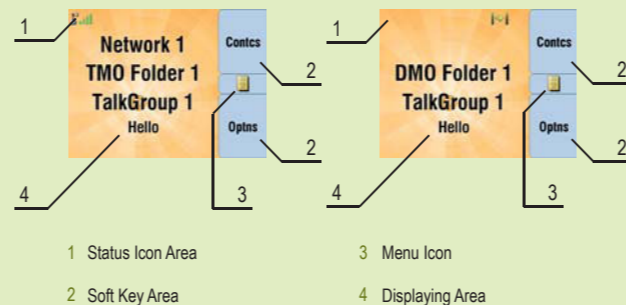

### Unlocking/Locking Keys

To lock/unlock the keypad, press the Menu button and then \*.

### Unlocking the Terminal

Your terminal may be locked after turning on. To unlock the terminal enter the code at the prompt.

The unlock code is originally set to 0000. Your Service Provider may change this number before you receive your terminal.

### Soft Keys

Press a soft key to select the option that appears in the screen directly next to the respective key.

In the home display Contcs is displayed next to the upper soft key. Pressing the key enters the contact list.

### Menu Key

Press the Menu button to enter:

- the menu (when there is no ongoing activity). The menus allow you to control your terminal settings. Menus are organized in a hierarchy. The menu options provide access to a further list of options called a sub-menu.

- the context sensitive menu (when the context sensitive icon is on) to view a list of items for the current menu.

### Rotary Knob

The Service Provider can program the Rotary knob to one of the following uses:

1. Dual Control - the knob is used as both a Volume control and to scroll through Lists. Press the knob to toggle between Volume and List (default programming).

2. List Control - the knob is used to scroll lists (for example talkgroups) or menu items. In this case volume can be controlled only via menu or via external accessories (if present).

3. Volume Control - the knob is used only as a volume control. Turn clockwise to increase the audio volume level. Press and hold the Rotary knob to lock it, press and hold it again to unlock. On turning off the Rotary knob is also unlocked.

### Emergency Button

Press and hold this button to enter Emergency Operation.

When the terminal is turned off, press and hold this button to turn the terminal on in Emergency Operation (if configured by your Service Provider).

### Looking After Your Terminal

To clean your control head, use a moistened or antistatic cloth. Do not use a dry or electrostatically charged cloth.

Getting Started

www.motorolasolutions.com

