



Handset

- 1 Display
- 2 Menu Key
- 3 Soft Key
- 4 Send Key
- 5 Alphanumeric Keypad
- 6 Function Key - Horn and Lights
- 7 Function Key - Speaker On/Off
- 8 On-Off/End/Home Key
- 9 Navigation Key
- 10 Function Key - Backlight
- 11 Earpiece
- 12 Upper Push-To-Talk Button (PTT)
- 13 Lower Push-To-Talk Button (PTT)
- 14 Microphone
- 19 Micro USB Port

Cradle

- 15 Rotary Knob
- 16 Hook
- 17 Emergency Button
- 18 LED Status Indicator

LED Status Indicator

Indicator	Status
	In use
	In service
	Out of service
	Connecting to a network Entering DMO
	Transmit Inhibit in service Channel busy in DMO
	Incoming private or phone call
	Switched off Covert Mode

Unlocking/Locking Keys

To lock/unlock the keypad, press the Menu button and then *.

Unlocking the Radio

Your radio may be locked after turning on. To unlock the radio enter the code at the prompt.

The unlock code is originally set to 0000. Your Service Provider may change this number before you receive your radio.

Soft Keys

Press a soft key to select the option that appears in the screen directly next to the respective key.

In the home display Contacts is displayed next to the right soft key. Pressing the key enters the contact list.

Menu Key

Press the Menu button to enter:

- the menu (when there is no ongoing activity). The menu allows you to control your radio settings. The menu is organized in a hierarchy. The menu options provide access to a further list of options called a sub-menu.

- the context sensitive menu (when the context sensitive icon is on) to view a list of items for the current menu.

Navigation Key

Press Up, Down, Left or Right navigation key for list scrolling, while moving around the menu hierarchy, or for alphanumeric text editing.

From the home screen, press to activate one of the following:

- Down - enters Recent Calls menu item.
- Up - changes My Groups talkgroup folder.
- Left and Right - toggle through the talkgroups.

Rotary Knob

The Service Provider can program the Rotary knob to one of the following uses:

1. Dual Control - the knob is used as both a Volume control and to scroll through Lists. Press the knob to toggle between Volume and List (default programming).
2. List Control - the knob is used to scroll lists (for example talkgroups) or menu items. In this case volume can be controlled only via menu or via external accessories (if present).
3. Volume Control - the knob is used only as a volume control. Turn clockwise to increase the audio volume level. Press and hold the Rotary knob to lock it, press and hold it again to unlock. On turning off the Rotary knob is also unlocked.

Emergency Button

Press and hold this button to enter Emergency Operation. When the radio is turned off, press and hold this button to turn the radio on in Emergency Operation (if configured by your Service Provider).

Looking After Your Control Head

To clean your control head, use a moistened or antistatic cloth. Do not use a dry or electrostatically charged cloth.

