

* The LED indication and flashing pattern can be configured in the Customer Programming Software (CPS).


LED Message and Status Indicators

| Indication | Message LED | Status LED | Charging Status |
|-----------------|---------------------------------------|--|---------------------------|
| Solid green | Not applicable | In use | Fully Charged |
| Blinking green | Not applicable | In service | 90% Charged |
| Solid red | Not applicable | Out of service* | Rapid Charge |
| Blinking red | Not applicable | Connecting to a network Entering DMO | Faulty or Invalid Battery |
| Solid orange | Not applicable | Transmit Inhibit in service Channel busy in DMO | Not applicable |
| Blinking orange | Not applicable | Not applicable | Battery waiting to charge |
| Blinking blue | Message/Call Out received or missing* | Not applicable | Not applicable |
| No indication | Not applicable | Pager powered off | Not applicable |

Battery Capacity Information


| Information | Description |
|-------------|------------------------------|
| | Full (80% – 100% capacity) |
| | Middle (60% – 80% capacity) |
| | Low (25% – 60% capacity) |
| | Very low (5% – 25% capacity) |
| | Less than 5% capacity |

Removing the Battery Cover

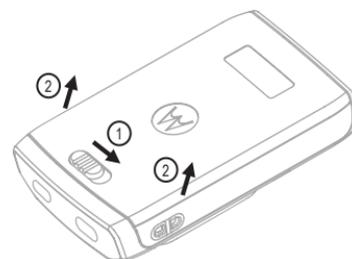


- Slide the **Lock** key to the left to unlock the battery cover.
- Lift up the battery cover.

Attaching the Battery Cover

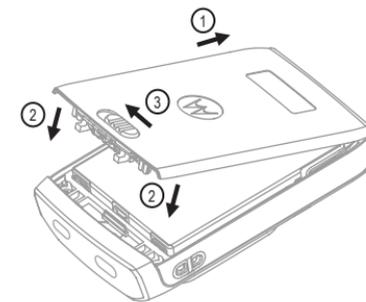

- Insert the bottom part of the battery cover into the slot.
- Press down the top part of the battery cover.
- Slide the **Lock** key to the right to lock the battery cover.

Installing the Battery

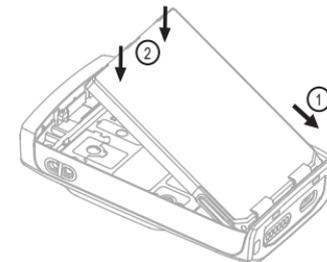

- Insert the bottom part of the battery into the compartment.
- Press down the top part of the battery into the compartment until it clicks.

Looking After the Pager

Never leave the pager or battery in extreme temperatures (over +85 °C), for example, behind a windscreen in direct sunlight. The pager is **not** submersible (compliant with the IP54 standard, only when the battery cover is attached). To clean the pager, use a moistened or antistatic cloth.

More Information on the Radio

Visit the Motorola Solutions Web site at:
<http://www.motorolasolutions.com/>

Learning Experience Portal

User documentation available at:
<https://learning.motorolasolutions.com/>

Open Source Software Legal Notices

Available in Customer Programming Software Plus (CPS Plus) DVD.



This document is copyright protected. Duplications for the purpose of the use of Motorola Solutions products are permitted to an appropriate extent. Duplications for other purposes, changes, additions or other processing of this document are not permitted. Only this electronically-saved document is considered to be the original. Duplications are considered merely copies. Motorola Solutions, Inc., and its subsidiaries and affiliates do not vouch for the correctness of such kinds of copies.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.
© 2017 and 2021 Motorola Solutions, Inc. All rights reserved.



MN003455A01-AC



Icons

| Icon | Description |
|------|-------------------------|
| | In Service (TMO) |
| | No Service (TMO) |
| | Signal Strength |
| | High RF Power |
| | Direct Mode (DMO) |
| | Trunked Mode (TMO) |
| | Battery Level |
| | Battery Charging |
| | All Ring Muted |
| | Vibrate Only |
| | Vibrate then Ring |
| | High Audio |
| | New Message Has Arrived |

| Icon | Description |
|------|--|
| | Unread (New) Message |
| | Unread (New) Protected Message |
| | Message Protected |
| | Location |
| | Graceful Service Degradation Mode (GSDM) |
| | User Profile |

Turning the Pager On/Off

To turn the pager on/off, press and hold the **Power** button.

Changing to Sleep or Wake Mode

To change the pager to sleep/wake mode, press the **Power** button. When the pager is in sleep mode, the display is turned off and the keypad is locked.

Using the Pager Menu

To enter the menu, press the **Menu** key.
To scroll through the menu, press the **Up** or **Down Navigation** key.
To select a menu item, press **Select** or the **Left** soft key.
To return to the previous level, press **Back** or the **Right** soft key.
To exit the menu, press and hold the **Menu** key.

Adjusting the Volume in Idle Mode

When the Pager displays the idle screen, press the **Up** or **Down Navigation** key to adjust the volume.

Using the Programmable Buttons

The **Up** and **Down Navigation** keys also function as programmable buttons. When the Pager displays the idle screen, press and hold the **Up** or **Down Navigation** key to apply the function of the programmable button (if configured).

Selecting Trunked/Direct Mode Operation

From the Home Screen, enter the **Menu**. Scroll to and select **Networks** → **Trunked Mode** or **Direct Mode**.

Receiving Call Out Messages

To accept, press the **Left** soft key.
To reject, press the **Right** soft key.
To temporarily mute the Call Out alert indication, press the **Mute** button.
To see more options, press the **Menu** key.