 
 
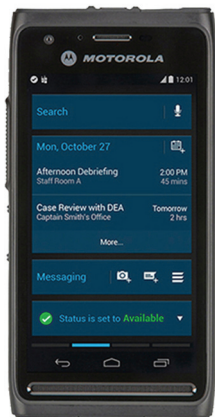 


LEX L10 MISSION CRITICAL HANDHELD QUICK START GUIDE

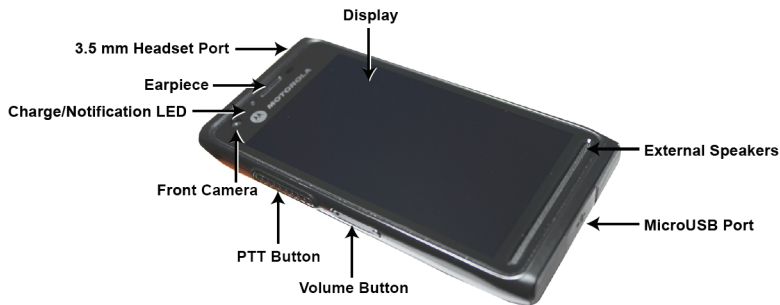

LEX L10

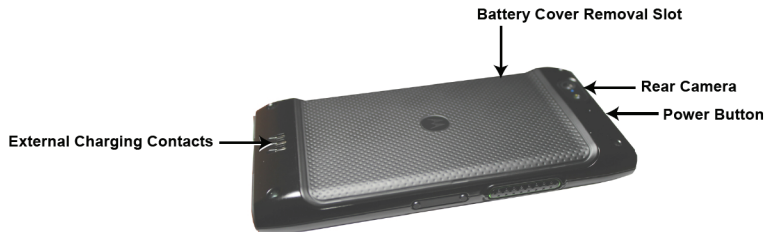

Welcome

The LEX L10 is a state-of-the-art device that delivers many features and benefits in a mission critical environment. This includes Push-to-Talk and remote radio control that enable enhanced communication on the move.

An electronic version of the LEX L10 User Guide can be downloaded to the device. Tap the **Motorola Techdocs** application icon, tap the download icon, and then select the LEX L10 Mission Critical Handheld User Guide.

BEFORE USING THIS device, READ the LEX L10 Regulatory Guide (p/n MN001458A01) included with the product package.

Getting Started

 
NOTE: The LEX L10 may be delivered to you with SIM card and microSD card already installed, activated and ready for use. In this case, ignore steps 2 and 3.

To get started, perform the following steps:

1. Remove the screen protection film from the screen.
2. Install the private and/or public SIM card(s).
3. Install the microSD card (if applicable).
4. Install the battery.
5. Install the battery cover.
NOTE: Ensure all battery cover snaps are fully engaged.
6. Charge the battery.

Removing the Screen Protection Film

To enable proper operation of the LEX L10, the screen protector must be removed before use.

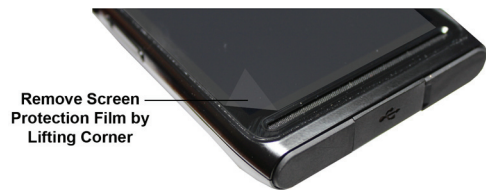

Removing the Battery Cover

 
To remove the battery cover:

1. Hold the LEX L10 firmly as shown.
2. Using the battery cover removal slot, gently lift the battery cover up and away from the LEX L10.



Installing microSD Card

1. Slide the card into the card holder slot with contacts facing down.
2. Push the card into the slot until it is fully seated and locked into place.

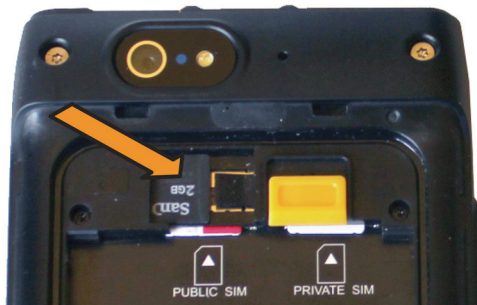

Installing Public / Private SIM Cards

1. Slide the SIM card into the SIM card holder with the contacts facing down. Note the card notch position.

2. Push the SIM card into the holder until it is fully seated and flat.
3. You should hear a click when the SIM card is fully in place.



Installing the Battery

To install the battery:

1. Remove the battery from the packaging.

2. Insert the battery (bottom first) into the battery compartment with the battery contacts facing the bottom of the LEX L10.



3. Press the top of battery into place.
4. Press the battery cover into place.
NOTE: Ensure all battery cover snaps are fully engaged.

Charging the Battery

To charge the battery:

 
1. Plug the USB cable into the USB charger.
2. Plug the USB charger into an AC wall outlet.
3. Lift the rubber flap that covers the USB port on the bottom of the LEX L10.

NOTE: Ensure rubber flaps for USB port and headset jack are firmly seated when those connectors are not in use.


4. Plug the microUSB connector into the USB port.



5. The charge and notification LED turns solid red, indicating the battery is charging. When the battery is fully charged, the LED turns solid green.

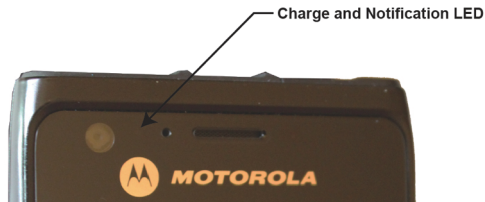

Powering On / Off

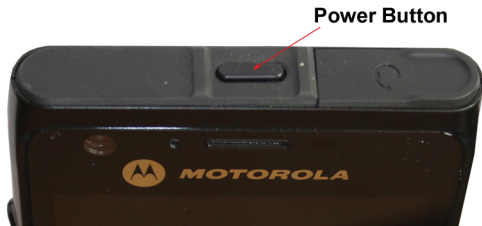 


Using the Front Panel Keys



- **Back:** Press to display the previous screen. Closes the keyboard if the on-screen keyboard is open.
- **Home:** Press to display the **Home** screen.
- **Recent Apps:** Press to display a list of recently used applications.



Locking and Securing Unlocking the Screen

 
1. Press the **Power** button to wake up the LEX L10.
2. Slide  off the screen.

Lock the Screen

Press and release the **Power** button.


Setting Password and Security

1. On the **Home** screen, tap  >  > **Security** > **Screen lock**.
2. Choose a screen lock method.

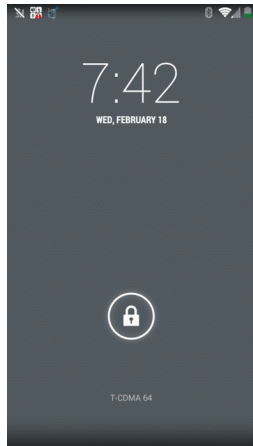

The Home Screen

 The Motorola Solutions Home Experience (MHx) is the engine that drives the user interface of the LEX L10. The **Home** screen is completely customizable depending on the specifications for your agency. Each organization may have a different **Home** screen. Contact your technical support for more information. This screenshot shows an example of a **Home** screen.

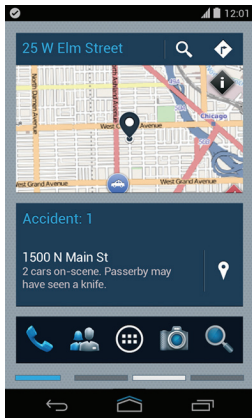

Adding Widgets to the Home Screen

1. On the **Home** screen, press and hold an empty area.
2. Tap **Widgets**.
3. Press and hold the desired widget, drag it to the **Home** screen, and then release it.

Removing Widgets from Home Screen

1. Press and hold the widget until it enlarges - **X Remove** is displayed on the screen.
2. Drag the item over **X Remove** until it turns red and release. The item is removed from the **Home** screen.

Switching Public / Private Phone Modes

To switch between public and private carrier modes:



1. Press and hold the **Power** button for at least two seconds.
2. When a dialog box appears, tap **Service switch** - the LEX L10 restarts.

Pair the LEX L10 with LMR Radio

This feature allows the LEX L10 to pair with and remotely control a P25 Land Mobile Radio (LMR).

NOTE: When pairing with APX radio models, a Mission Critical Wireless option must be enabled on the radio.

To pair the LEX L10 with a radio:

1. On the radio, turn on the Bluetooth feature.
2. From the **Home** screen, tap  >  .

3. Place the blue pairing point on the radio close (no more than 2.5 cm) to the blue pairing point on the LEX L10.



- If the pairing process is successful, the radio sounds an incremental-pitched tone to indicate paired.
- If the pairing process fails, the radio sounds a short, low pitched tone.



Once a successful pairing is established, the Bluetooth Connection screen is displayed for a few seconds, followed by the **Radio Services** application screen.

Connecting to a WiFi Network

To connect the LEX L10 to WLAN Network:

1. On the **Home** screen, tap .
2. Tap  and set the **WiFi** option to **ON**.
3. Tap a WiFi network and enter Username and Password information if required.
4. Wait until the WiFi network displays **Connected**.

Motorola Solutions, Inc.
1301 E. Algonquin Rd.
Schaumburg, IL 60196-1078, U.S.A.
<http://www.motorolasolutions.com>

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. The Bluetooth trademarks are owned by their proprietor and used by Motorola Solutions, Inc. under license. All other trademarks are the property of their respective owners.

© 2015 Motorola Solutions, Inc. All Rights Reserved.



MN001457A01-A - March 2015

