

# **APX<sup>™</sup> N30**

## **QUICK START GUIDE**

en-US





**SEPTEMBER 2022** © 2022 Motorola Solutions, Inc. All rights reserved.

#### Important Safety Information

RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios


#### ATTENTION!



Caution:

This radio is restricted to Occupational use only. Before using the radio, read the RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios which contains important operating instructions for safe usage and RF energy awareness and control for Compliance with applicable standards and Regulations.

## Radio Overview

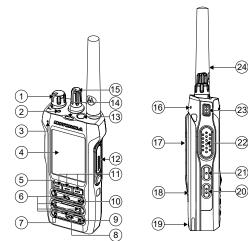

- 1 On/Off/Volume Control knob 2 Status LED
- 14 Top Light Bar 15 Channel Selector knob

| <ol> <li>3 Digital Mic 2</li> <li>4 Display</li> <li>5 Home button</li> <li>6 4-Way Navigation buttons</li> <li>7 Programmable button 1 (P1)</li> <li>9 Specker</li> </ol> | 16 Digital Mic 1<br>17 Belt Clip Bracket<br>18 Battery<br>19 Charging Contacts<br>20 2-Dot Programmable button |  |
|--|--|--|
| <ul> <li>8 Speaker</li> <li>9 Programmable button 2 (P2)</li> </ul>  | 21 1-Dot Programmable button   |  |
| 9 Programmable button 2 (P2)<br>10Notification button  | 22 Push-to-Talk (PTT) button   |  |
| 11 Menu Select buttons   | 23 3-Dot Programmable button<br>24 Antenna   |  |
| 12Accessory Connector  |  |  |

## Turning the Radio On or Off

Ensure that the battery is fully charged before the first use.

#### Turning the Radio On

13Top (Orange) button

Turn the On/Off/Volume Control knob clockwise until it clicks

#### Turning the Radio Off

Turn the On/Off/Volume Control knob counterclockwise until it clicks.

### Selecting Zones and Channels

Rotate the Channel Selector knob to the desired Channel.

## Accessing Radio Call Activities

Perform one of the following actions:

- · To call, press and hold the PTT button.
- To listen, release the PTT button.
- To adjust volume, turn the On/Off/Volume Control knob.
- To monitor, press the programmed Monitor button and listen.

## Sending an Emergency Alarm

1 Press and hold the Top (Orange) button.

Your radio shows the following indications:

- A tone sounds.
- The red I ED illuminates.
- The display shows Top (Orange) and the current zone/channel.
- When acknowledgment is received, you hear four beep tones: alarm ends; and radio exits emergency
- 2 Press and hold the Top (Orange) button to exit emergency.

## Sending an Emergency Call

- 1 Press the Top (Orange) button.
- 2 Press and hold the PTT button to speak.
- 3 Release the PTT button to end call.
- 4 Press and hold Top (Orange) button to exit emergency.

## Sending a Silent Emergency Call

- 1 Press the Top (Orange) button.
- 2 Silent emergency continues until you perform one of the following:
  - Press and hold the Top (Orange) button to exit emergency state.
  - Press and release the PTT button to exit the Silent Emergency Alarm mode and enter regular dispatch or Emergency Call mode.

## Status Icons



Battery Level



Received Signal Strength Indicator (RSSI)



**RSSI** Receiving

| 123             | RSSI Transmitting                                   | *  | Bluetooth®          |
|-----------------|---|----|---------------------|
| ⇒               | Direct Mode   | (Î | Wi-Fi Strength      |
|                 | Monitor   | Ζ. | Blinking/Steady Dot |
| <b>7</b> H      | Power Level High                                    | ¥  | Vote Scan           |
| ť               | Power Level Low                                     | *  | Bluetooth Connected |
| Z               | Scan  |    |                     |
| Ø               | Secure Operation                                    |    |                     |
| <b>X</b><br>AES | Advanced Encryption Standard (AES) Secure Operation |    |                     |
|                 | Global Positioning System (GPS)                     |    |                     |
|                 | User Login Indicator (IP Packet Data)               |    |                     |
|                 |   |    |                     |



Data Activity

NOTES

Printed in



https://learning.motorolasolutions.com/User\_Documentation

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2022 Motorola Solutions, Inc. All rights reserved.

