

Mobile Release 5.14.10



# MTH800

# FEATURE USER GUIDE



March 2014



© 2014 Motorola Solutions, Inc. All rights reserved.



6802972C35-V



# Contents

<b>List of Figures.....</b>	<b>11</b>
<b>List of Tables.....</b>	<b>13</b>
<b>Chapter 1: General Information.....</b>	<b>15</b>
Safety Information.....	15
Copyrights.....	15
Icon Conventions.....	16
Using this Guide.....	16
Feature and Service Availability.....	17
<b>Chapter 2: Getting Started.....</b>	<b>19</b>
Product Technical Information.....	19
Before Power On.....	19
Attaching the Antenna.....	19
Installing the Battery.....	20
Removing the Battery.....	20
Charging the Battery.....	21
Charging Indicators.....	21
Low Battery Indication.....	21
Controls and Indicators.....	22
Display.....	25
Configurable Idle Screen.....	25
Status Icons.....	26
Powering On the Radio.....	29
Unlocking Your Radio.....	30
Unblocking Your Radio.....	30
Locking/Unlocking the Keys/Buttons.....	30
Holding Your Radio.....	30
Setting Flip Display.....	31
Entering TMO / DMO Mode.....	31
Transmit Inhibit Mode.....	32
Selecting Talkgroups.....	32
Talkgroup Icon Selection.....	33
Using Timed Talkgroup Change.....	33
Activating Talkgroup Scanning.....	33
Broadcast Call.....	34
Ambience Listening (AL) Call.....	34
One-Touch Button Feature.....	34
Terminal Temporary Disable/Enable.....	35
Terminal Permanent Disable.....	36
High/Low Audio Toggle.....	36
Using High Audio.....	36
Using Low Audio.....	36
During the Call.....	36
Writing Text.....	37
Selecting Text Entry Modes.....	37
Selecting Text Entry Methods and Languages.....	37
Text Entry Icons.....	37
Keys Usage.....	38

Writing in iTAP Alphanumeric.....	40
Writing in TAP Alphanumeric.....	40
Word Locking.....	41
Adding Words to the Dictionary.....	41
Home Display Text Message.....	41

## **Chapter 3: Modes.....43**

Using Networks.....	43
Trunked Mode Operation.....	43
Entering TMO Mode.....	44
Selecting Talkgroups.....	44
Making Group Calls in TMO.....	44
Receiving Group Calls in Idle.....	44
Receiving Group Calls during Ongoing Group Calls.....	44
Dynamic Group Number Assignment (DGNA).....	45
DGNA Reception.....	45
DGNA Auto Select Group.....	45
DGNA Auto Reselect Group.....	45
Viewing DGNA Talkgroups.....	45
Broadcast Calls Initiated by Users.....	45
Initializing Broadcast Calls.....	46
Phone and PABX Calls.....	46
Private Call.....	46
Making Private Calls.....	46
Assistance Call.....	46
Call Modification.....	47
Local Site Trunking.....	47
Entering Local Site Trunking.....	47
Exiting Local Site Trunking.....	48
Direct Mode Operation.....	48
Entering DMO Mode.....	48
Selecting Talkgroups.....	48
Making Group Calls in DMO.....	49
Receiving Group Calls in Idle.....	49
Private Call.....	49
Making Private Calls.....	49
Private Call With Presence Check.....	50
Talkgroup for Individual Calls.....	50
Communication through Repeaters.....	50
Communication through Gateways.....	50
Selecting DMO Group Call Options.....	51
Transmit Inhibit Mode.....	51
Emergency Operations.....	52
Emergency Group Call.....	53
Making Emergency Group Calls.....	53
Receiving Emergency Group Calls.....	53
Non-Tactical Emergency.....	54
Emergency Individual Calls (Private or MS-ISDN).....	54
Emergency Alarm.....	54
Emergency SDS Status.....	54
Emergency Hot Microphone.....	54
Alternating Hot Microphone.....	55
Silent Emergency Mode.....	55
Invisible Emergency.....	56
Emergency Mode by Dialing.....	56

Disaster Alert.....	56
Initializing Disaster Alert Calls.....	56
Exiting Emergency Operations.....	56

## **Chapter 4: GPS Location Service..... 59**

Enhancing GPS Performance.....	60
Enabling GPS.....	60
GPS Icon.....	60
GPS Different Location Displays.....	60
Viewing Your Position.....	61
Changing GPS Accuracy.....	61
GPS – Things to Keep in Mind.....	61

## **Chapter 5: Main Menu..... 63**

Scrolling through the Menu.....	63
Menu Icons.....	63
Messages.....	65
New Message.....	65
Sending Messages to Private/Phone.....	65
Sending Messages to Groups.....	65
Sending Store and Forward Messages.....	65
Delivery Report.....	66
Viewing Delivery Reports.....	66
Configuring Delivery Reports.....	66
Inbox.....	67
Entering the Inbox.....	67
Receiving New Messages.....	67
Using Submenus in the Inbox and the Outbox.....	67
Embedded Number.....	68
Storing Numbers from Messages.....	68
Calling Numbers in Messages.....	68
Making Group Calls on theTalkgroup of the Message Sender.....	68
Immediate Message.....	69
Outbox.....	69
CO Box.....	69
RMS Box.....	69
WAP Box.....	69
Templates.....	70
Sending User-Defined Templates.....	70
Setting User-Defined Templates.....	70
Predefined Templates.....	70
Viewing Predefined Templates.....	70
Sending Predefined Templates.....	70
Status Messages.....	71
Viewing a Status Message Number.....	71
Sending Status Messages.....	71
Targeted Status Messages.....	71
Sending Targeted Status Messages.....	71
Contacts.....	72
Creating Contacts.....	72
Editing Contacts.....	73
Deleting Numbers.....	73
Deleting Contacts.....	73
Checking Capacity.....	73

Dialing through the Contact List.....	74
Browser.....	74
Security.....	74
PIN Protect.....	74
Protecting the Radio with a PIN Code.....	74
Unblocking Your Radio.....	74
Changing PIN Codes.....	75
Keylock Setup.....	75
Keypad Lock Notification.....	75
Setting Automatic Keylock Delay.....	75
Setting Keylock on Startup.....	76
Air Encryption.....	76
Viewing the Air Encryption State.....	76
Air Encryption Key Deletion.....	76
K Validity.....	76
Verifying K Validity.....	77
SCK (Air Interface Encryption Class 2).....	77
TMO SCK.....	77
DMO SCK.....	77
Changing DMO SCK.....	77
Verifying TMSCK Validity.....	77
Verifying DMSCK Validity.....	78
Covert Mode.....	78
Activating the Covert Mode.....	78
Setting to Vibrate in the Covert Mode.....	78
SDS Remote Control.....	79
Setting SDS Remote Control.....	79
Setup.....	79
Vibrate.....	79
Setting Default Vibrate.....	79
Setting Detail Vibrate.....	79
Ring Style.....	80
Setting Ring Style.....	80
Set Volume.....	80
Setting Volume.....	80
Language.....	81
Setting Language.....	81
Data Setup.....	81
Setting Data Function.....	81
Audio.....	81
Audio Profiles.....	81
Audio Toggle.....	81
Setting Audio Toggle.....	82
Volume Adjustment Mode.....	82
Setting Volume Adjustment Mode.....	82
Tones.....	82
Keypad Tone.....	82
Setting Keypad Tone.....	82
All Tones.....	82
Setting All Tones.....	83
Talk Permit.....	83
Setting Talk Permit.....	83
Clear to Send.....	83
Setting Clear to Send.....	83
Periodic Alert.....	83
Setting Periodic Alert.....	83

D-PTT Tones.....	84
Setting D-PTT Tones.....	84
Display.....	84
Setting Flip Display.....	84
Setting Font Level.....	84
Setting Large Idle Font.....	85
Setting Extra Zoom.....	85
Setting Extended Status Icons.....	85
Setting Screen Saver.....	85
Setting Backlight.....	86
Setting Wallpaper.....	86
Setting Contrast.....	86
Time and Date.....	86
Setting Time and Date on the Display.....	87
Setting the Time Format.....	87
Setting the Time Manually.....	87
Setting the Date Format.....	87
Setting the Date Manually.....	88
Setting Time Offset.....	88
Setting Automatic Updates for the Time and Date .....	88
Energy Economy.....	88
Enabling Energy Economy.....	88
Viewing the Energy Economy Status.....	88
Book On.....	89
Editing Book On Settings.....	89
Rotary Knob.....	89
Setting Rotary Knob Mode.....	89
Setting Rotary Lock.....	89
Setting In Keypad Lock.....	90
Setting Rotary Knob Wrap Around.....	90
Setting Rotary Knob Scroll Range.....	90
Setting Rotary Knob Talkgroup Selection.....	90
Setting Rotary Knob Function Keys.....	91
Group Setup.....	91
Scan.....	91
Activating Talkgroup Scanning.....	91
Setting Talkgroups in the Active Scan List.....	91
Setting Scan Lists.....	92
Deleting Talkgroups from Scan Lists.....	92
My Groups.....	92
Favorites.....	92
Favorite Folders.....	92
Favorite Talkgroups.....	93
Favorite Contact Numbers.....	93
Making Private Calls to Favorite Contact Numbers.....	93
Adding Folders to Favorites.....	93
Adding Contact Numbers to Favorites.....	94
Adding Talkgroups to Favorites.....	94
Managing Folders in Favorites.....	94
Deleting Items from Favorites Folder.....	94
Deleting All Items from Favorite Folders.....	95
My Info.....	95
Viewing and Modifying Personal Information.....	95
Recent Calls.....	95
Viewing Recent Calls.....	95
Calling from Recent Calls.....	96

Storing Recent Calls to Contacts.....	96
Deleting Recent Calls.....	96
RUI.....	97
Logging On.....	97
Logging Off.....	97
Networks.....	97
Selecting Network Operation Mode.....	97
Selecting Your Network.....	98
Using the Select Net Registration.....	98
Using the Foreign Network Registration.....	98
Using Any Network.....	98
Using the Migrate To Registration.....	98
Location.....	99
Viewing Your Position.....	99
Changing GPS Accuracy.....	99
Packet Data.....	99
Viewing Data Statistics.....	99
Viewing Encryption Status.....	100

## **Chapter 6: Features..... 101**

Private Call.....	101
Making Private Calls.....	101
Radio Messaging System (RMS).....	101
RMS Icons.....	102
Sending an RMS Status.....	102
One-Touch Dial.....	102
Talkgroup Dialing by Index.....	102
Viewing the Talkgroup Speed Number.....	103
Selecting Talkgroups by Index.....	103
Phone and PABX Calls.....	103
Making Phone or PABX Calls.....	103
Phone/PABX Speed Dial.....	103
Using the Phone/PABX Speed Dial.....	103
DTMF Overdial.....	104
Short Number Dial.....	104
RUA/RUI.....	104
WAP.....	105
WAP Browser.....	105
Entering the Browser.....	105
Entering Browser Menu Panes.....	105
Tips for Browsing.....	105
Creating Bookmarks through the Navigate Pane.....	105
Creating Bookmarks through the Bookmarks Pane.....	106
Using Bookmarks.....	106
Creating Hotkeys.....	106
Using Hotkeys.....	106
Saving Pages.....	106
Selecting Saved Pages.....	107
Disabled Packet Data Service.....	107
Disabled Browser Entry.....	107
Keys Usage.....	107
Browser Menu Panes Overview.....	108
Navigate Pane.....	109
Advanced.....	109
Bookmarks Pane.....	110



Working with the Options Pane for Selected Bookmarks.....	110
Working with the Saved Pages Folder.....	110
History Pane.....	110
Navigating to Recently Visited URLs.....	110
Tools Pane.....	111
Options Pane.....	111
Image Pane.....	111
Text Input Pane.....	111
WAP Push.....	112
New WAP Messages.....	112
Viewing WAP Messages.....	112
Call-Out.....	112
Types of Call-Out Alerts.....	113
Call-Out Modes Interaction.....	113
Call-Out Service Phases.....	113
Shadow Groups (Address Bundle).....	114
<b>Appendix A: Tones.....</b>	<b>115</b>
<b>Appendix B: LED Indications.....</b>	<b>117</b>
<b>Appendix C: Troubleshooting.....</b>	<b>119</b>
<b>Appendix D: Maintenance.....</b>	<b>123</b>
Storage.....	123
Extending Battery Life.....	123
Battery Charging Temperature.....	123
Battery Charging Rules.....	124
Additional Battery Warnings/Cautions.....	124
Looking after Your Radio.....	124



## List of Figures

Figure 1: Trunked Mode Operation .....	43
Figure 2: Direct Mode Operation .....	48
Figure 3: Call-Out Message .....	113



## List of Tables

Table 1: Special Notations .....	17
Table 2: Product Technical Information .....	19
Table 3: Battery Icons .....	21
Table 4: Controls and Indicators .....	23
Table 5: Display .....	25
Table 6: Colors of the Soft Key Area .....	25
Table 7: Status Icons .....	26
Table 8: Talkgroup Icon .....	33
Table 9: One-Touch Button Features .....	34
Table 10: During the Call .....	37
Table 11: Text Entry Screen Icons .....	38
Table 12: Keys Usage .....	38
Table 13: Other Keys .....	39
Table 14: Different Location Displays .....	60
Table 15: Menu Icons .....	63
Table 16: Inbox Icons .....	67
Table 17: Outbox Icons .....	69
Table 18: Contact Types .....	72
Table 19: RMS Icons .....	102
Table 20: Browser Keys Usage .....	107
Table 21: Browser Menu Panes .....	108
Table 22: Additional Menu Panes .....	109
Table 23: Browser Text Input Icons .....	111
Table 24: Radio Tones .....	115
Table 25: LED Indications .....	117
Table 26: Displayed Messages .....	119



# Chapter 1

## General Information

### Safety Information

---

#### **RF Energy Exposure and Product Safety Guide For Two-Way Radios**

##### **ATTENTION!**

---

Before using this product, read the RF Energy Exposure and Safety Guide that ships with the radio which contains important operating instructions for safe usage and RF energy awareness and control for Compliance with applicable standards and regulations.

### Copyrights

---

The Motorola products described in this document may include copyrighted Motorola computer programs. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this document may not be copied or reproduced in any manner without the express written permission of Motorola.

© 2014 Motorola Solutions, Inc. All Rights Reserved.

No part of this document may be reproduced, transmitted, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without the prior written permission of Motorola Solutions, Inc.

Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal nonexclusive, royalty-free license to use that arises by operation of law in the sale of a product.

#### **Disclaimer**

Please note that certain features, facilities, and capabilities described in this document may not be applicable to or licensed for use on a particular system, or may be dependent upon the characteristics of a particular mobile subscriber unit or configuration of certain parameters. Please refer to your Motorola contact for further information.

#### **Trademarks**

MOTOROLA, MOTO, MOTOROLA SOLUTIONS, and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.

## European Union (EU) Waste of Electrical and Electronic Equipment (WEEE) directive



The European Union's WEEE directive requires that products sold into EU countries must have the crossed out trashbin label on the product (or the package in some cases).

As defined by the WEEE directive, this cross-out trashbin label means that customers and end-users in EU countries should not dispose of electronic and electrical equipment or accessories in household waste.

Customers or end-users in EU countries should contact their local equipment supplier representative or service centre for information about the waste collection system in their country.

## Open Source Software (OSS) Legal Notices

For details on OSS Legal Notices visit Motorola Online ([emeaonline.motorolasolutions.com](http://emeaonline.motorolasolutions.com)) or browse the CPS Plus disc.

## Icon Conventions

---

The following graphic icons, which help identify situations or settings crucial to proper radio operation and user safety, are used throughout this document:



**Danger:** The signal word DANGER with the associated safety icon indicates information that, if disregarded, will result in death or serious injury.



**Warning:** The signal word WARNING with the associated safety icon indicates information that, if disregarded, could result in death or serious injury, or serious product damage.



**Caution:** The signal word CAUTION with the associated safety icon indicates information that, if disregarded, may result in minor or moderate injury, or serious product damage.

**Caution:** The signal word CAUTION may be used without the safety icon to state potential damage or injury that is not related to the product.



**Important:** IMPORTANT statements contain information that is crucial to the discussion at hand, but is not CAUTION or WARNING. There is no warning level associated with the IMPORTANT statement.



**Note:** NOTE contains information more important than the surrounding text, such as exceptions or preconditions. They also refer the reader elsewhere for additional information, remind the reader how to complete an action (when it is not part of the current procedure, for instance), or tell the reader where something is located on the screen. There is no warning level associated with a note.



**Suggestion:** SUGGESTION indicates a recommendation from Motorola that does not require to be followed, but might be helpful. There is no warning level associated with SUGGESTION.

## Using this Guide

---

The following special notations are used throughout the text to highlight certain information or items:



**Table 1: Special Notations**

Example	Description
MENU key or EMERGENCY button	Capital letters indicate a name of a key or button.
<i>Entering TMO</i> tone	Italic words indicate a name of the tone.
<b>Powering Off</b>	Bold words indicate the soft menu items, MMI strings, or messages displayed on the radio.
<b>Setup → Tones → All Tones</b>	Bold words with the arrow between indicate navigation structure in the menu items.

## Feature and Service Availability

---

This guide describes all available radio features and services. Your service provider may have customized your radio to optimize its use for your individual needs. Check with you service provider to find out the differences from this guide.



# Chapter 2

## Getting Started

This chapter contains basic information on how to use the radio.

## Product Technical Information

---

**Table 2: Product Technical Information**

Description	Value		
Maximum Voltage	4.2 V		
Maximum Current	0.5 A		
Maximum RF Power	1 W		
Maximum Speaker Load	0.5 W at 8 $\Omega$		
Antenna Impedance	50 $\Omega$		
Operating Temperature Range	-30 °C to +60 °C		
Operating Time	Duty Cycle	800 mAh	1500 mAh
	05/05/90	> 12 h	> 20 h
	05/35/60	> 8 h	> 16 h



**Note:** The communication system determines the radio transmit and receive time (operating cycle time). During overload, or beyond the systems specifications at high ambient temperatures, the thermal control cuts down the RF power output, which reduces the radio coverage range.

## Before Power On


---

Read this section before you power on your radio for the first time.

## Attaching the Antenna

**Procedure:**


- 1 Insert the screw-in base of the antenna into the antenna terminal on the top of the radio.
- 2 Turn clockwise until snug.

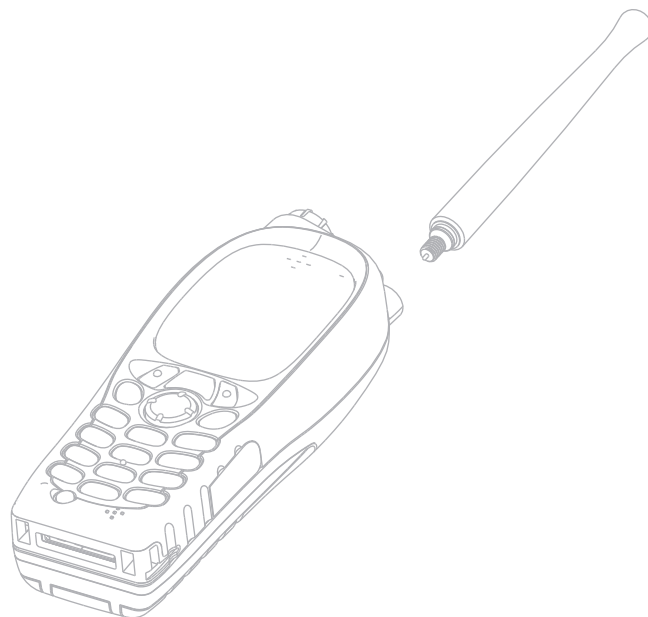

## Installing the Battery

**Procedure:**

- 1 Remove the battery from its protective case.
- 2 If necessary, remove the battery cover.
- 3 Insert the battery top into the compartment as illustrated.

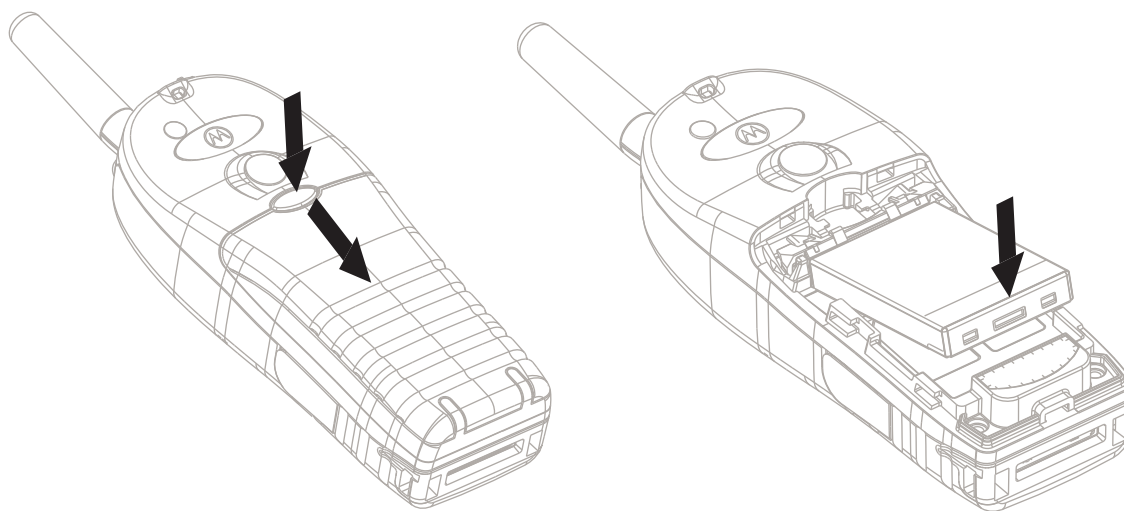

- 4 Carefully press the battery bottom downward until it clicks into place.

**Related Links**

[Removing the Battery](#) on page 20

## Removing the Battery

**Prerequisites:** Turn off the radio.

**Procedure:**

- 1 Push the latch.
- 2 Lift the battery out.

**Related Links**

[Installing the Battery](#) on page 20

## Charging the Battery

Depending on a charger type, you can charge a battery alone or/and a battery attached to a radio.

Charging a battery attached to a radio can be done with the radio either turned on or off. Charging with the radio turned off is recommended since this is more efficient (the battery charges faster).



**Important:** Motorola approved chargers provide optimum performance. Other chargers may not fully charge your Motorola Lithium-Ion battery or may reduce the life of the battery.

**Prerequisites:**

Do not charge the battery in a hazardous area.

**Procedure:**

- 1 Connect the charger to an appropriate power source (100–240 V, 12 V), according to the specification of the charger.
- 2 Perform one of the following actions:
  - Desktop chargers – insert the battery or the radio with the battery attached into the appropriate socket of the charger. Ensure that the battery/radio made good connection with the charger and that the LED on the charger is indicating that charging is in progress
  - Travel chargers and car chargers – connect the charger to the radio with the battery attached. Ensure that the charger is firmly connected to the radio and that the radio display is indicating that charging is in progress.









**Post requisites:** The battery may heat up during charging. After charging, make sure that the battery and the radio are within the operating temperature range before using the radio.

## Charging Indicators

When your radio is turned on while charging, it displays an icon of the battery in charging.

When your radio is turned off while charging, it displays the icon of the battery in charging and backlights the display.

**Table 3: Battery Icons**


Battery Capacity				Battery Charge Progress			
							
Empty	Low	Middle	Full	Empty	Low	Middle	Full
5%–10%	10%–20%	20%–90%	90%–100%	5%–10%	10%–20%	20%–90%	90%–100%

## Low Battery Indication



The radio indicates low battery level by playing an audible alert when the battery charge falls to a preset level. The low battery alert can be programmed by your service provider to 5, 10, or 20 per cent of remaining capacity. The default setting is 5 per cent. The service provider also configures how frequently the alert repeats.

## Controls and Indicators

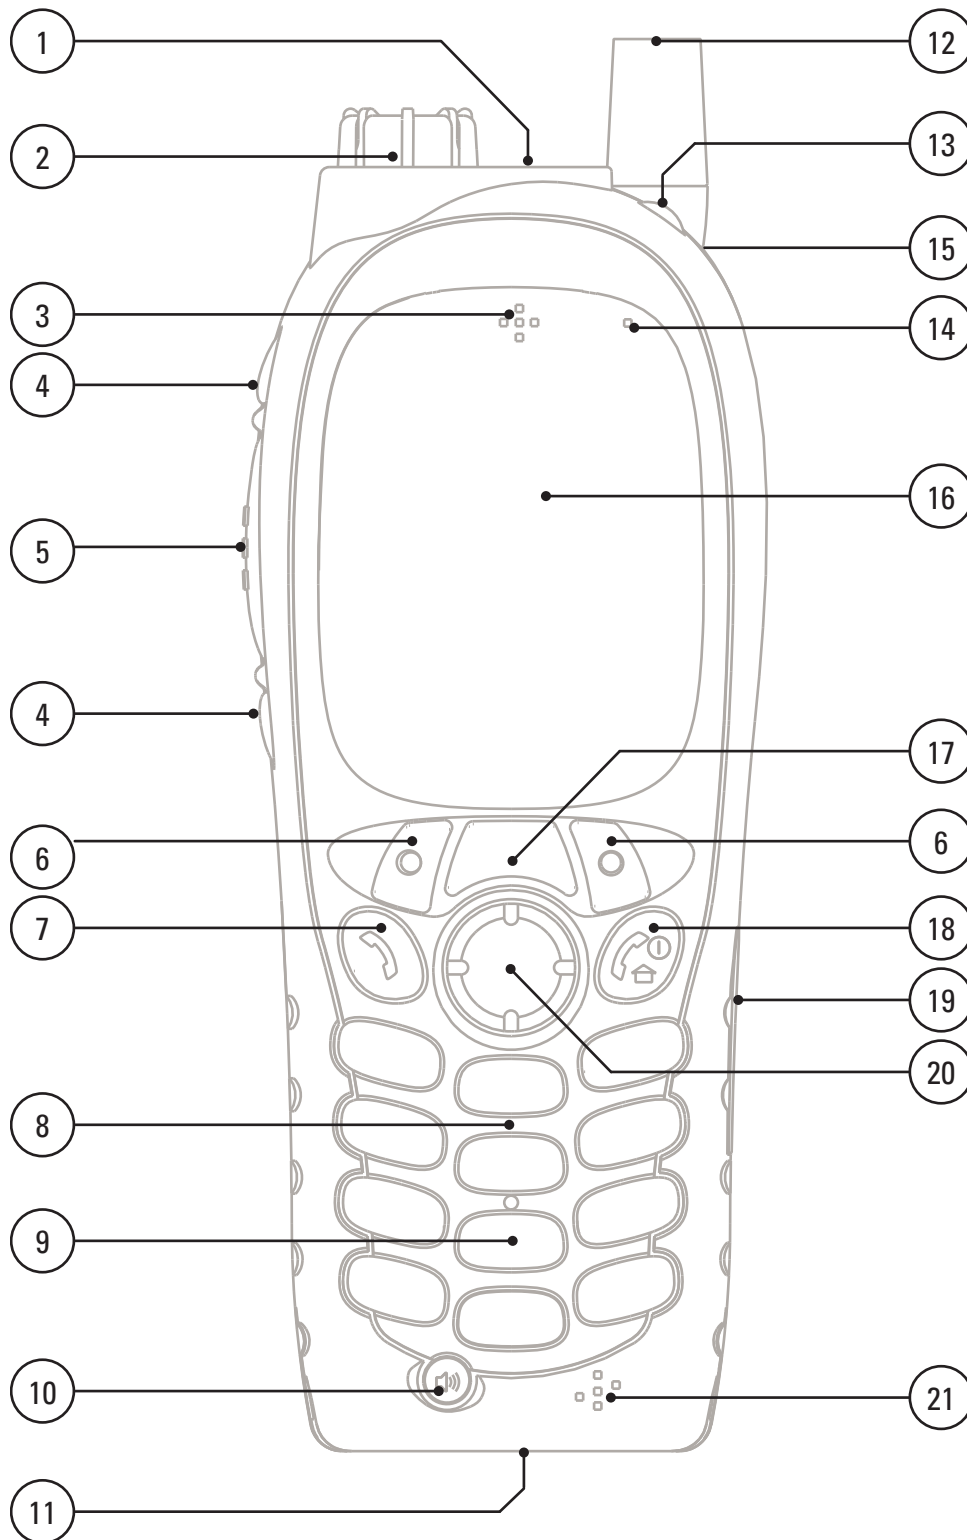



---



**Table 4: Controls and Indicators**

Annotation	Description
1	<p>EMERGENCY button</p> <p>Press and hold EMERGENCY button to enter Emergency operation. When your radio is off, press and hold to power on in Emergency Mode.</p>
2	<p>ROTARY KNOB</p> <ul style="list-style-type: none"> <li>• Rotate to set the volume.</li> <li>• Press and rotate to select a different talkgroup.</li> <li>• Press and hold the ROTARY KNOB to lock/unlock it. Powering off also unlocks a locked ROTARY KNOB.</li> </ul>
3	EARPIECE
4	<p>SIDE button</p> <p>The ROTARY KNOB and SIDE buttons programming are paired. When the ROTARY KNOB is set to <b>Volume</b> or <b>Dual</b>, the SIDE buttons support the One-Touch Button feature. By default, the upper SIDE button is set to Backlight feature and the lower SIDE button is set to Screen Saver feature.</p> <p> <b>Note:</b> The required time to press and hold SIDE button to activate an One-Touch Button feature is set as default to 0,1 second.</p>
5	<p>PTT (Push-To-Talk)</p> <ul style="list-style-type: none"> <li>• Press and hold to talk in simplex calls or to initiate a group call, release it to listen.</li> <li>• Press to send status and text messages.</li> </ul>
6	<p>SOFT key</p> <p>Press left or right SOFT key, to select the option that appears on the screen directly above the them.</p>
7	<p>SEND key</p> <p>Press to initiate or answer duplex calls, or send messages.</p>
8	SPEAKER (under keypad)
9	<p>KEYPAD</p> <p>Use the keypad to enter alphanumeric characters for dialing, contact entries, and text messages.</p> <p>Your radio supports the One-Touch Button feature that allows you to activate commonly used features by pressing and holding assigned key (0-9, * and #).</p> <p> <b>Note:</b> The required time to press and hold assigned key to activate an One-Touch Button feature is set as default to 1 second.</p>
10	<p>SPEAKER CONTROL key</p> <p>Press the SPEAKER CONTROL key to activate the earpiece <b>Speaker LOW</b> or speaker <b>Speaker HIGH</b>.</p>

*Table continued...*

Annotation	Description
	<b>Note:</b> In an Emergency Group Call, the speaker is activated regardless of the speaker setting.
11	ACCESSORY CONNECTOR
	Provides connection for accessories and cable for data transfer.
	<b>Note:</b> It is recommended to turn off the radio before connecting accessories.
12	ANTENNA
13	LED
14	TOP MICROPHONE
	Activated during Simplex, high audio calls such as Group Calls.
15	EXTERNAL ANTENNA CONNECTOR
	Used with the digital car kit to connect the RF signal to the external antenna.
16	DISPLAY
	Provides alphanumeric text and images within 65,536 colors and 130 x 130 pixels with backlight, scalable fonts, and contrast.
17	MENU key
	<ul style="list-style-type: none"> <li>• From the home screen, press to enter the main menu.</li> <li>• Used to enter the context-sensitive menu.</li> </ul>
18	ON/OFF/END/HOME key
	<ul style="list-style-type: none"> <li>• Press and hold to turn on/off your radio.</li> <li>• Press to end calls.</li> <li>• Press to return to the home screen.</li> </ul>
19	AUDIO ACCESSORY CONNECTOR
	Provides connection for audio accessories.
	<b>Note:</b> It is recommended to turn off the radio before connecting accessories.
20	NAVIGATION key
	Press up, down, left or right NAVIGATION key for list scrolling, while moving around the menu hierarchy, or for alphanumeric text editing.
	From the home screen, press to activate one of the following:
	<ul style="list-style-type: none"> <li>• down NAVIGATION key — enters <b>Recent Calls</b> menu item.</li> <li>• up NAVIGATION key — changes <b>My Groups</b> talkgroup folder.</li> <li>• left and right NAVIGATION key — toggles through the talkgroups.</li> </ul>
21	BOTTOM MICROPHONE
	<b>Note:</b> A detailed list of compatible accessories is included in <i>Accessory Leaflet</i> , part number: 6802972C31. To obtain the document, contact your service provider.



## Display

This section presents the radio's default home screen elements.



**Table 5: Display**

Annotation	Description
1	Status icon area
2	Text display area
3	SOFT key area
4	MENU/Context sensitive icon

The color of the SOFT key area changes according to the mode the radio is in.

**Table 6: Colors of the SOFT Key Area**

Color	Mode or State
Light blue	Normal TMO and DMO Modes
Light red	Emergency Mode or Disaster Alert Call
Olive	Local Site Trunking Mode
Yellow	Call Out — Standby
Red	Call Out — Alert
Green	Call Out — Accepted
Blue	Radio Messaging Service (RMS)

### Related Links

[Display](#) on page 84

[Display](#) on page 84

[Setting Time and Date on the Display](#) on page 87

## Configurable Idle Screen

Your service provider can configure the information that is displayed on the home screen below the status icon area. Depending on the radio configuration and services supported, the following information can be displayed:












- Network alias
- Range alias
- Talkgroup alias
- Time and date
- Home mode display
- RMS/FMS
- ISSI
- Radio status
- Audio profile name

## Status Icons














Status icons appear when your radio is engaged in certain activities or when you have activated certain features.

The icons can appear in normal or large size. To manually enable/disable large status icons, go to **Menu** → **Setup** → **Display** → **Extended Status Icons**.

















**Table 7: Status Icons**

Icon	Description
Trunked Mode Operation	
	In Service
	No Service
	Signal Strength – The more bars, the stronger the signal.
	Migration — Displayed when your radio is registered to the foreign network.
	Broadcast Call — Displayed when the radio is in the Broadcast Call.
	Scan — Indicates talkgroup scanning is activated in the radio.
	Priority Scan — Indicates that priority scanning is activated in the radio.
	Data Connected — Displayed when the data connection is idle (standby).
	Data Transmit/Receive — Displayed when the data connection is active. Number 1, 2, 3, or 4 indicates how much bandwidth is used during transmission (25%, 50%, 75%, or 100%).
Direct Mode Operation	
	Direct Mode Call — Displayed when the radio is receiving a Direct Mode call. The more bars, the stronger the signal.
	Direct Mode — Displayed when the radio is in Direct Mode (radio-to-radio communication).











*Table continued...*

Icon	Description
	<p>DMO Gateway Communication Mode — Indicates that gateway is selected. The icon has the following states:</p> <ul style="list-style-type: none"> <li>• Solid — while the radio is synchronized with the gateway.</li> <li>• Blinking — while the radio is not synchronized or during attachment.</li> <li>• No icon — during a radio to radio and repeater call.</li> </ul>
	<p>DMO Repeater Communication Mode — Displayed when the <b>Repeater</b> or <b>GW + Rep</b> option in DMO Mode is selected. This icon has the following states:</p> <ul style="list-style-type: none"> <li>• Solid — while the radio has detected the repeater (for example when the radio receives a presence signal).</li> <li>• Blinking — while the radio has not detected the repeater or during attachment.</li> <li>• No icon — during a radio to radio and gateway call.</li> </ul>
General Icons	
	<p>All Tones Off and Duplex and Simplex Ring Muted — Indicates that all alert tones are off and both duplex and simplex ring volume is set to 0.</p> <ul style="list-style-type: none"> <li>• Volume is set to 0 (when <b>Volume Adj. Mode</b> is set to <b>Common</b>).</li> <li>• Both simplex and duplex ring volume is set to 0 (when <b>Volume Adj. Mode</b> is set to <b>Individual</b>).</li> </ul>
	<p>Simplex Ring Muted — Indicates that simplex ring volume is set to 0 and duplex ring volume is set to more than 0.</p>
	<p>Duplex Ring Muted — Indicates that duplex ring volume is set to 0 and simplex ring volume is set to more than 0.</p>
	<p>Vibrate On — Indicates that the radio vibrates to alert you of an incoming call.</p>
	<p>Vibrate then Ring — Indicates that the radio vibrates and rings to alert you of an incoming call.</p>
	<p>Low Audio — Indicates that the audio mode is changed to low.</p>
	<p>High Audio — Indicates that the audio mode is changed to high.</p>
	<p>Audio Profile Selected — Indicates that an audio profile associated with a particular icon is active. The icons can be either solid or blinking. For details on audio profiles available on the radio, contact your service provider.</p>
	<p>Earpiece Connected — Indicates that the earpiece is connected.</p>
	<p>GPS Icon</p> <ul style="list-style-type: none"> <li>• Solid - the radio has a location fix</li> <li>• Blinking - the radio is acquiring a location fix. This is an optional setting and may not be enabled on your radio.</li> </ul>
	<p>RUI Logged on — Indicates that you are logged on into the radio.</p>

*Table continued...*

Icon	Description
	RUI Pseudo Log On — Indicates that you are in pseudo logged on state.
	RUI Packet Data — Indicates Pseudo Log On state when the Packet Data feature is activated and active data session is in progress.
	RUI Packet Data — Indicates Pseudo Log On state when the Packet Data feature is activated and the external device sets up data connection with the radio.
	Battery Strength — Shows the charge of your battery.
	Battery Charging — Indicates that the battery is charging.
	Emergency — Appears while the radio is in Emergency Operation.
	Disaster Alert Call — Appears while the radio is in the Disaster Alert Call.
	List Scrolling — Displayed to indicate that the ROTARY KNOB is in list scrolling mode.
	New Message Has Arrived — Indicates a new message just arrived.
	New Message(s) in Inbox — Indicates that you have unread messages in your <b>Inbox</b> .
	Unread (New) WAP Message — Indicates that new page was loaded to the browser.
	Call-Out — Indicates Call-Out alert.
	Call-Out Alert Arrived — Indicates a receipt of a new Call-Out message.
	Call-Out Alert Unread — Indicates unread alert in the <b>CO Box</b> .
	<p>End-to-End Encryption (E2EE) Solid, when the E2EE is enabled</p> <ul style="list-style-type: none"> <li>• for the selected talkgroup,</li> <li>• for the highlighted private number,</li> <li>• for the manually entered private number,</li> <li>• when transmitting voice in Group Calls,</li> <li>• when transmitting voice in Simplex Private Calls.</li> </ul> <p>Blinking, when the End-to-End Encryption is enabled</p> <ul style="list-style-type: none"> <li>• when receiving voice in Group Calls,</li> <li>• when receiving voice in Simplex Private Calls,</li> <li>• during encrypted Duplex Private Calls.</li> </ul>
	<p>SDS End-to-End Encryption Solid, when the E2E status of an SDS message, or the E2E status of a message recipient address.</p>

*Table continued...*

Icon	Description
	In High Security mode, when your radio processes only the encrypted information, this icon is always visible in when you are in the messages menu (for example, <b>Inbox</b> ).
	Unread (New) WAP Message — Indicates that you have not entered <b>WAP Box</b> since last WAP message was received (Blinks when the priority is high).
	WAP Message Icon — Displayed next to the priority in the message list view.
	WAP Message Time — Displayed next to the create date in the message list view.
	WAP Message Expiration — Displayed next to the expiry date in the message list view.
	WAP Message Title Icon — Displayed next to the title along with the text in the message list view.
	Keys Locked — Indicates that keys are locked.
	<p>Non Secured Call — Air Encryption Unavailable Blinking, indicates that Air Encryption is not available when the radio:</p> <ul style="list-style-type: none"> <li>• Is in the Local Site Trunking Mode.</li> <li>• Attempts to connect to a gateway.</li> </ul>
	<p>Not Secured Call — Air Encryption Unavailable Alternately blinking, indicates that Air Encryption is not available when the radio:</p> <ul style="list-style-type: none"> <li>• Is in TMO Mode.</li> <li>• Communicates through a gateway.</li> </ul>
	<p>Not Secured Call — Air Encryption Unavailable Blinking, indicates that Air Encryption is not available in DMO Mode. The icon appears after the PTT button is pressed.</p>
	<p>Remote Control Indicates that the radio is being remotely controlled and some commands are being executed in the background. For example, when the radio is controlled via special SDS messages or triggered to send a GPS location report. The icon is not visible in the Extra Zoom Mode.</p>

### Related Links

[Air Encryption](#) on page 76

## Powering On the Radio

### Procedure:

- 1 Press and hold ON button.
- 2 Your radio performs a self-check and registration routine.
- 3 After successful registration, your radio is in service.



**Note:** Your radio powers on without visible and audible notification if Covert Mode is activated.

## Unlocking Your Radio

---

Your radio may be locked at power up. To unlock it after powering on, enter the code at the prompt. Your radio enters the default home display.



**Note:** The unlock code is originally set to 0000. Your service provider may change this number before you receive your radio.

### Related Links

[PIN Protect](#) on page 74

[Changing PIN Codes](#) on page 75

[Writing Text](#) on page 37

## Unlocking Your Radio

**Prerequisites:** You blocked your radio by entering incorrect PIN code for three times (by default).

### Procedure:

- 1 Radio displays **Unit Blocked** Enter **PUK**.
- 2 Enter 8–digit PUK (Personal Unblocking Key) number.



**Note:** The PUK is an eight-digit master code provided by your service provider.

- 3 Enter the new PIN code twice.

## Locking/Unlocking the Keys/Buttons

---

Press MENU key and \* key.



**Note:** The EMERGENCY button is not locked. Entering Emergency Mode unlocks all keys.

### Related Links

[Keylock Setup](#) on page 75

## Holding Your Radio

---

The radio has two microphones: a top microphone for simplex dispatcher/private calls and a bottom microphone for duplex telephone-like calls.


Also, the radio is equipped with an internal speaker for high audio (located at the middle of the unit) and an internal earpiece for low audio (located at the top of the unit). The audio can be routed either to the speaker or the earpiece using the Audio Toggle menu (MENU → **Setup** → **Audio** → **Audio Toggle**) or the assigned One-Touch Button.



**Note:** When possible, it is recommended to speak into the top microphone.

## Simplex Calls

When using high audio, hold the radio a vertical position with its top microphone 5 centimeters to 10 centimeters away from your mouth. Speak into the top microphone. Listen through the internal speaker. Keep the antenna at least 2.5 centimeters from your head and body.

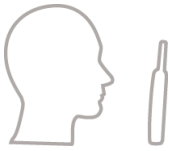

## Duplex Calls

When using low audio, hold your radio as you would a telephone. Speak into the bottom microphone. Listen via the earpiece. Keep the antenna at least 2.5 centimeters from your head and body.



## Lapel/Shoulder Use

For Group and Private Calls turn your head towards your shoulder/lapel, and speak directly into the top microphone. Listen through the internal speaker.

## Speakerphone Use

Place your radio 30 centimeters to 60 centimeters away from you. In a noisy environment, you move the radio closer to you for better transmission.

## Setting Flip Display

---

### When and where to use:

The feature is useful for a user who has to wear the radio on a shoulder, belt, or lapel and at the same time wishes to read the display upside down.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Display** → **Flip Display**.
- 3 Select one of the following:
  - **On** – to activate this feature.
  - **Off** – to deactivate this feature.

## Entering TMO / DMO Mode

---

### Procedure:

- 1 From the home screen, press **Optns**.
- 2 Select **Trunked Mode / Direct Mode**.

### Related Links

[Selecting Network Operation Mode](#) on page 97

[Networks](#) on page 97

## Transmit Inhibit Mode

---

The Transmit Inhibit Mode is a mode in which the radio sends no radio transmissions. It is recommended to activate the mode in RF sensitive areas, for example hospitals, airplanes, where safety can be jeopardized due to transmission radiation.

To activate, select **MENU** → **More . . .** → **Networks** → **TXI Mode** → **Activate**.

In this mode, the radio does not transmit under any circumstances except for the Emergency Calls. All the functions and keys which cause transmission, for example registration to the network, changing talkgroup or folder, sending SDS messages, or pressing the PTT button are disabled. Any transmission trial causes the radio to display **Not Allowed In TXI Mode** notification and to play a tone.

Your radio can still receive:

- Group calls.
- Messages — stored in the **Inbox**.
- Private call attempts — stored in the **Missed Calls** list, without the option to respond.

When no danger to safety exists anymore (for example, you leave the RF sensitive area), you can deactivate the Transmit Inhibit Mode and the radio returns to standard operation.

You can deactivate the mode by selecting **MENU** → **More . . .** → **Networks** → **TXI Mode** → **Deactivate**, pressing One-Touch button, or implicitly when initiating an Emergency Call.



**Note:** RF Transmissions from the radio are prevented under the following conditions:

- TXI Mode is activated.
- Battery is removed.
- The radio is turned off.

On entering or exiting the transmit inhibit mode, when the radio is camped on a cell, it sends a specially designated SDS status message. This SDS message indicates to the SwMI that the radio is entering or exiting transmit inhibit mode.

Mobility procedures that do not require the radio to send an uplink transmission are performed except for cell reselection.

In transmit inhibit mode the radio joins group calls for any group that the radio is monitoring, but the transmitting on that call is still prohibited.

The radio also displays any incoming SDS messages to the user. The missed call feature is active in the transmit inhibit mode and allows checking what calls were missed. However, the radio attempts to prevent call setup retransmission from being recorded as separate calls.

If you initiate an emergency call, the radio immediately leaves transmit inhibit mode and attempts to start the emergency call if the radio is in service.

If the radio is turned off in the transmit inhibit mode, on turning on the radio asks whether to exit the transmit inhibit mode. If you choose **No**, the radio turns off.

## Selecting Talkgroups

---

From the home screen, use one of the following methods:

- Press left or right **NAVIGATION** key. Press **Select** to confirm.



- Select **Optns** → **TG by abc**. Enter a talkgroup name and select the talkgroup name from the list.
- Select **Optns** → **TG by Folder**. Select a folder and then a talkgroup name.
- Press **ROTARY KNOB** and rotate it until the required talkgroup name is displayed. Press **Select** to confirm.



**Note:** If the **ROTARY KNOB** mode is set to **Scroll**, then you do not need to press it to enter the scrolling mode.




**Note:** Your radio can have an access up to three levels of the folder structure.

## Talkgroup Icon Selection

---

**Table 8: Talkgroup Icon**

Icon	Description
	Displayed when the talkgroup is from a different network than the one currently selected.

## Using Timed Talkgroup Change

---

This feature allows you to switch a selected talkgroup between the currently selected talkgroup and a predefined talkgroup (TMO or DMO), making the predefined talkgroup the selected talk group for a predefined time by using a One-Touch button. After the timer expires, your radio returns to the previously selected talkgroup.

**Prerequisites:** Timed Talkgroup Change is assigned to a One-Touch button.

**Procedure:**

- 1 Press and hold and hold the One-Touch button.
- 2 Your radio switches the selected talkgroup to the predefined talkgroup for a predefined amount of time.

During the predefined time the radio initiates or joins group communication (SDS, status SDS, or call) on the predefined talkgroup as the selected talkgroup.

Your service provider can assign a function to the second press of the One-Touch button to:

- Return to previously selected talkgroup
  - Restart the predefined time
  - No action
- 3 When the timer expires (potentially after being restarted a number of times) the radio switches to the previously selected talkgroup.

## Activating Talkgroup Scanning

---

**When and where to use:** If you want to monitor any TMO Group Call in the defined talkgroup list.

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Group Setup** → **Scan** → **Scanning**.
- 3 Select **Select List** and then a list name.

Your radio displays list name **Selected**.

**4 Select Scanning → On.**

Your radio is scanning on the predefined scan list.

**Related Links**

[Scan](#) on page 91

## Broadcast Call

---

The Broadcast Group Call (also called Site Wide Call) is a high-priority group call from the console operator (or dispatcher) to all users located at one or more sites. The radios are configured to monitor a Broadcast Call, but you cannot talk back. The call can be received as a normal Broadcast Call or an Emergency Broadcast Call. The Broadcast Call preempts an ongoing Group Call that has the same or lower call priority.

## Ambience Listening (AL) Call

---

This feature allows a dispatcher to make a special call that allows listening to the conversations and background noises within the range of a particular radio's microphone. The call is set up without any indication to the affected radio, and any lower priority ongoing voice call may be preempted.

After accepting the call, the radio transmits in a simplex call without any action from or indication to the user. The Ambience Listening Call automatically ends when you initiate any voice call, switch to Emergency or TXI Mode, or send Emergency Alarm.

## One-Touch Button Feature

---

The One-Touch Button feature allows for quick activation of functions by pressing and holding keys or buttons assigned to those functions.

**Table 9: One-Touch Button Features**

Feature	Description
Backlight Toggle	Toggles the backlight settings.
Change Audio Profile	Change to the specific audio profile.
Change Talkgroup	Changes the talkgroup to the programmed one by your service provider.
Covert Mode	Turns on/off the Covert Mode.
Display Time	Displays universal time on the home screen.
Double Push PTT	Sends the D- PTT tone to the currently used talkgroup.
Extra Zoom On/Off	Turns on/off Extra Zoom.
Flip Display	Rotates the display by 180 degrees.
GPS Report	Sends a message with the radio's GPS location to a dedicated address.
Hi/Low Audio	Toggles high/low audio.

*Table continued...*

Feature	Description
Initiate Call-Out Fallback Alert	Sends Call-Out Fallback Alert.
PABX Call	Initiates a PABX call to a predefined entry in the contact list.
Phone Call	Initiates a phone call to a predefined entry in the contact list.
Previous Talkgroup	Changes the selected talkgroup of the radio to the talkgroup (DMO or TMO) that was selected previously.
Private Call	Initiates a private call (simplex or duplex) to a predefined entry in the contact list or to the last group call originator.
Rotary Switches Lock/Unlock	Locks/unlocks the Rotary Switches.
RUA/RUI Log On/Off	Asks for the credential or logs off the radio.
Screen Saver Activation	Turns on/off the Screen Saver feature.
Scroll Audio Profiles	Scrolls through all available audio profiles.
Sending Predefined Message	Sends a predefined message to a dedicated address.
Sending Status	Sends a dedicated status message to a dedicated address.
Sending User Defined Message	Sends a user defined message to a dedicated address.
Speaker Enable/Disable Per Call	Enables the loudspeaker for a duration of the ongoing call..
Timed Talkgroup Change	Makes a predefined talkgroup the selected talk group for a specified amount of time. While using the predefined talkgroup, the second press of the One-Touch Button results in: returning to the previously selected talkgroup, restarting the predefined time, or no action (depending on configuration). After the timer expires, the radio returns to the previously selected talkgroup.
TMO / DMO Switch	Toggles between TMO and DMO modes.
TMO Talkgroup Scan	Turns on/off the Talkgroup Scan feature in TMO Mode.
Transmit Inhibit Mode (TXI)	Turns on/off the Transmit Inhibit Mode.
Volume Down	<ul style="list-style-type: none"> <li>• Press to decrease the volume by one level.</li> <li>• Press and hold to continuously decrease the volume to its minimum level.</li> </ul>
Volume Up	<ul style="list-style-type: none"> <li>• Press to increase the volume by one level.</li> <li>• Press and hold to continuously increase the volume to its maximum level.</li> </ul>

Your service provider can assign one-touch functions only to the side buttons and keypad keys.



**Note:** If the One-Touch Button feature is enabled, the One-Touch Dial is disabled. If no feature is assigned to a button, your radio displays an **Unassigned Button** message.

## Terminal Temporary Disable/Enable

Your radio is provided with a feature that allows your service provider to disable it temporarily in case it is stolen. When your radio is disabled or is powered up in disabled state, it looks and acts like it is turned off.

If your radio is found, your service provider can enable it again over the air. After your radio is enabled, you may resume normal operation.

## Terminal Permanent Disable

---

Your radio is provided with a feature that allows your service provider to disable it permanently in case it is stolen or lost. When your radio is disabled permanently, it becomes inoperable. After a Permanent Disable your service provider cannot enable your radio. It is recommended to Permanent Disable your radio only when you do not expect to recover it. If it is recovered then a Permanent Disable radio can be reactivated by returning it to Motorola.



**Note:** This is a selling feature.

## High/Low Audio Toggle

---

The user is able to switch from the external earpiece to the main speaker using SPEAKER CONTROL key and is not required to disconnect the external earpiece or PHF.

The states of the routed audio are:

- **Speaker HIGH** — indicates that audio is routed to the main speaker.
- **Speaker LOW** — indicates that audio is routed to the earpiece or PHF earpiece, and not to the main speaker.

## Using High Audio

**When and where to use:** Use it when placing and receiving a Group, Phone and Private calls.

**Procedure:**

- 1 Hold your radio in a vertical position with its top microphone 5–10 centimeters away from your mouth.
- 2 Speak into the top microphone and listen through the internal speaker.  
Keep the antenna at least 2,5 centimeters from your head and body.

## Using Low Audio

**When and where to use:** Use it when placing and receiving a Phone, PABX, and Duplex Private calls.

**Procedure:**

- 1 Hold your radio as you would a telephone.
- 2 Speak into the bottom microphone and listen through the earpiece.  
Keep the antenna at least 2,5 centimeters from your head and body.

## During the Call

---

During the call, label of the right SOFT key indicates the next possible change. Accessory default setup is:

**Table 10: During the Call**

Soft Key Label	Audio Setting
Spkr	Audio goes to the main speaker ( <b>Speaker HIGH</b> is displayed)
Erpce	Audio goes to the earpiece ( <b>Speaker LOW</b> is displayed)
PHF	Audio goes to the Personal Hands Free ( <b>Speaker LOW</b> is displayed)

## Writing Text

Every time that you see text entry screen, refer to this section.

### Related Links

[Unlocking Your Radio](#) on page 30

## Selecting Text Entry Modes

**Prerequisites:** Your radio displays the text entry screen.

### Procedure:

- 1 Press MENU → **Entry Mode**.
- 2 Select one of the following:
  - **Primary** — for entering alphanumeric characters.
  - **Numeric** — for entering numbers only.
  - **Symbol** — for entering symbols only.
  - **Secondary** — for entering alphanumeric characters (this mode is optional and you have to add it to the list). It is convenient when you use one language, and sometimes wish to switch to another one.



**Note:** In the text entry screen, you can also press # key repeatedly to toggle through the entry modes.

## Selecting Text Entry Methods and Languages

**Prerequisites:** Your radio displays the text entry screen.

### Procedure:

- 1 Press MENU → **Entry Setup**.
- 2 Select one of the following:
  - **TAP** — Enter letters, numbers, and symbols by pressing an alphanumeric key one or more times.
  - **iTAP** — Let the radio predict each word as you press an alphanumeric key.



**Note:** You can use these methods in the languages programmed in the radio.

## Text Entry Icons

In the text entry screen, icons tell you which text entry mode and method you are using. A character counter displayed on the text entry icon, indicates the amount of characters that can be entered.

Press the # key to toggle through the text entry modes.

**Table 11: Text Entry Screen Icons**

Primary Icon	Secondary Icons	Description
		TAP — no capitals
		TAP — capitalise first letter only
		TAP — all capitals
		iTAP — no capitals
		iTap — capitalise first letter only
		iTap — all capitals
Numeric Icon	Description	
	Enter numbers.	
Symbolic Icon	Description	
	Enter punctuation and symbols.	

## Keys Usage

List of keys and characters in Alphanumeric Mode (TAP/iTAP).

**Table 12: Keys Usage**

Key	Alphanumeric Mode (TAP/iTAP)	Symbol Mode
0 to 9 keys	Numeric Mode: <ul style="list-style-type: none"> <li>Press to enter digit at insertion point.</li> <li>Press and hold any numeric key to enter TAP alphanumeric mode.</li> <li>To exit TAP alphanumeric mode, press and hold any numeric key.</li> </ul>	
0 key	Press to cycle through single shift, caps lock, and lower case.	+ - * / \ [ ] = < > \$ #
1 key	. , ? ! 0 1 @ ' ' - ( ) / : _ ; + & % * = < > € £ \$ ¥ ¤ [ ] { } \ ~ ^ ` i \$ #	
2 key	A B C 2 a b c 2	@ _ \
3 key	D E F 3 d e f 3	/ ; ;

*Table continued...*

Key	Alphanumeric Mode (TAP/iTAP)	Symbol Mode
4 key	G H I 4 g h i 4	” & ’
5 key	J K L 5 j k l 5	()[]{}
6 key	M N O 6 m n o 6	! @ ~
7 key	P Q R S 7 p q r s 7	= < >
8 key	T U V 8 t u v 8	€ £ \$ ¥ ¢
9 key	W X Y Z 9 w x y z 9	# % *

**Table 13: Other Keys**

Key	Description
Any numeric key	<ul style="list-style-type: none"> <li>In TAP press any key to reject word completion and continue with text entry. A new completion will be displayed, if available, after the time-out for TAP expires.</li> <li>Press and hold to enter Numeric mode from TAP or iTAP alphanumeric.</li> </ul>
* key	<ul style="list-style-type: none"> <li>Press to insert a space.</li> <li>In TAP press to dismiss a word completion and insert a space.</li> <li>Enter a newly created word into the user dictionary.</li> <li>Press and hold to enter a carriage return.</li> </ul>
# key	<ul style="list-style-type: none"> <li>Press once to cycle through all entry modes (<b>Symbol</b>, <b>Numeric</b>, <b>Primary</b>, and <b>Secondary</b> (if configured)).</li> <li>Press and hold to return to the default entry mode.</li> </ul>
<b>Select</b>	Press to select the highlighted choice and place it in the main text area.
<b>Delete</b>	<ul style="list-style-type: none"> <li>Press once to delete the last entered character.</li> <li>Press and hold to clear the entire main text area.</li> </ul>
Up NAVIGATION key	<ul style="list-style-type: none"> <li>In TAP press to reject word completion and scroll up.</li> <li>In TAP press to change previously entered small letter to capital.</li> </ul>
Down NAVIGATION key	<ul style="list-style-type: none"> <li>In TAP press to reject word completion and scroll within the text area.</li> <li>In TAP press to change previously entered capital letter to small.</li> </ul>
Left NAVIGATION key	<ul style="list-style-type: none"> <li>Press to navigate to the left. Press and hold to repeat.</li> <li>In TAP, if a word completion is available, press to reject the completion.</li> </ul>

*Table continued...*

Key	Description
Right NAVIGATION key	<ul style="list-style-type: none"> <li>Press to navigate to the right. Press and hold to repeat.</li> <li>In TAP if a word completion is available, press to accept the word.</li> </ul>
MENU	If a context-sensitive menu is active, opens the Context Sensitive Menu.

## Writing in iTAP Alphanumeric

**Prerequisites:** Your radio displays the text entry screen.

**When and where to use:** It allows you to write quicker. For example, try to write **David 232!**

**Procedure:**

- 1 Press MENU → **Entry Setup** → **Prim..**
- 2 Select **iTAPEnglish** and press **Back**.
- 3 Press MENU → **Entry Mode**.
- 4 Select **Primary**.
- 5 Press 3 key.

The alternative row opens and shows **D E F 3**.

- 6 Continue entering the letters by pressing one key for each letter. Press 2, 8, 4, and 3 keys.



**Note:** Automatic shift to upper case is used at the beginning of a message, after punctuation followed by space, or for the first letter of a word created as a new contact entry.

The alternative row highlights **David**.

- 7 Press \* key.
- 8 Press 2 key and scroll the alternative row by pressing right NAVIGATION key to reach **2**.

It automatically changes the entry mode to **Numeric**.

- 9 Press 3 and 2 keys.
- 10 Press and hold 1 key until **0** at the end changes to ..

The alternative row highlights **232..**

- 11 Scroll the alternative row by pressing the right NAVIGATION key to reach the required symbol.
- 12 Press **Select**.

You have entered **David 232!**

## Writing in TAP Alphanumeric

**Prerequisites:** Your radio displays the text entry screen.

**Procedure:**

- 1 Press MENU → **Entry Setup** → **Seco..**
- 2 Select **TAPEnglish** and press **Back**.
- 3 Press MENU → **Entry Mode**.
- 4 Select **Secondary**.
- 5 Press the key labeled with the desired character, once for the first character, twice for the second, and so on.

**Example:**

To enter letter s, press 7 key four times. To enter number 7, press the 7 key five times. If you do not press a key for a few seconds, the character is accepted, and the cursor moves to the next position.



## Word Locking

**Prerequisites:** Your radio displays the text entry screen.

**When and where to use:** To add the words that are not in the dictionary.

**Procedure:**

- 1 Press MENU → **Entry Setup**.
- 2 Select **iTAPEnglish**.
- 3 Try to enter the word. Scroll the alternate line for a word option. Each option is successively highlighted and partially locked.
- 4 Enter the second part of the word. The first part remains unchanged (locked). The newly entered letters are highlighted and then locked while you scroll to the next word option.
- 5 Press \* key. The word is placed in the text area with a space and automatically added to the dictionary.

## Adding Words to the Dictionary

Each language comes with its own dictionary. You can create words (including alphanumeric abbreviations). Once you enter a word followed by space, it is automatically stored in the dictionary and appears as a choice whenever you press the same key combination in the future.

## Home Display Text Message

---

Your radio is provided with a feature that allows your service provider to send special text messages to the display. The message stays on the home screen until a new message is received. Power cycle your radio to replace the Home Display message to the predefined one.



# Chapter 3

## Modes

This chapter contains information on available modes that the radio can operate in.

### Using Networks

---

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Networks**.
- 3 Select one of the following:
  - **Trunked Mode**
  - **Direct Mode**
  - **TXI Mode**


Your radio switches to the selected mode.

### Trunked Mode Operation

---

Trunked Mode Operation requires the switching and management infrastructure. This operation mode enables various voice and data communication types (for example, group calls, short data service messages) and access to the infrastructure-related features (for example, packet data).

**Figure 1: Trunked Mode Operation**

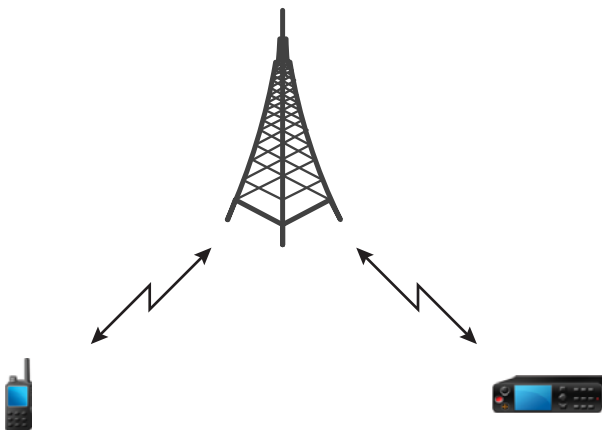

## Entering TMO Mode

### Procedure:

- 1 From the home screen, press **Optns**.
- 2 Select **Trunked Mode**.

## Selecting Talkgroups

From the home screen, use one of the following methods:

- Press left or right NAVIGATION key. Press **Select** to confirm.
- Select **Optns** → **TG by abc**. Enter a talkgroup name and select the talkgroup name from the list.
- Select **Optns** → **TG by Folder**. Select a folder and then a talkgroup name.
- Press ROTARY KNOB and rotate it until the required talkgroup name is displayed. Press **Select** to confirm.



**Note:** If the ROTARY KNOB mode is set to **Scroll**, then you do not need to press it to enter the scrolling mode.



**Note:** Your radio can have an access up to three levels of the folder structure.

## Making Group Calls in TMO

The Group Call is received by all members of the selected group who have their units turned on and are in range.

### Procedure:

- 1 Press and hold the PTT button.
- 2 Wait for the *Talk Permit* tone (if configured) and then speak into the microphone. Release the PTT button to listen.



**Note:** To cancel making a group call, do one the following actions before the talk permit is granted (depending on your service provider's settings):

- Release the PTT button.
- Press the END key (default).

When the call is canceled, your radio displays **Call Cancelled** message (if configured by your service provider).

## Receiving Group Calls in Idle

### Procedure:

- 1 The radio receives a Group Call.



**Note:** The incoming Group Call is signalled by a *Receiving Group Call* tone.

- 2 To respond, press and hold the PTT button.

## Receiving Group Calls during Ongoing Group Calls

While in active Group Call, your radio receives a Group Call with a higher priority.

One of the following occurs:

- Your radio is forced to end the current group call and automatically join the incoming one.
- Your radio displays incoming group call screen with options:
  - **Join** — ends current Group Call and starts the incoming one.

- **End** — cancels the incoming Group Call.

## Dynamic Group Number Assignment (DGNA)

DGNA allows the network operator to dynamically manage talkgroups on your radio over the air interface. Using DGNA, the network operator can:

- Add talkgroups.
- Attach or select newly added talkgroups.
- Delete talkgroups.
- Modify parameters of existing talkgroups.

All the above operations are performed by transmitting data to your radio.

## DGNA Reception

When a DGNA message is received, your radio plays a tone and displays a message **Talkgroup list updated**. If enabled by your service provider, your radio displays all added and deleted talkgroup list.

When your service provider deletes (de-assigns) the currently selected talkgroup, depending on the settings, the radio can perform one of the following actions:

- Enter the “No Group” state – the radio does not attach to any talkgroup automatically.
- Attach to the last selected TMO talkgroup. If the last selected TMO talkgroup is not available (it was deleted), the radio enters the “No Group” state.
- Attach to a default talkgroup configured by your service provider. If the default talkgroup is not available (it was deleted), the radio enters the “No Group” state.

At each talkgroup change, an appropriate notification is shown on the display.

If the DGNA message is received to delete all talkgroups, your radio displays **All Talkgroups Deleted**. To exit the DGNA display, you can use the **Back**SOFT key or the **END** key.

## DGNA Auto Select Group

If the DGNA Auto Select is configured, whenever your radio receives a DGNA, it switches to the added talkgroup.

## DGNA Auto Reselect Group

If the DGNA Auto Reselect is configured, whenever a talkgroup assigned by the network operator via DGNA is deassigned without the user action, the radio returns to the previously selected group.

## Viewing DGNA Talkgroups

**Prerequisites:** Your radio receives the DGNA message.

**Procedure:**

- 1 To view the added talkgroups details press **View**.
- 2 Scroll through the list to select required talkgroup.
- 3 To select the DGNA group, press **Attach**.

## Broadcast Calls Initiated by Users

This feature allows you to make a Broadcast Call from the radio that is initiated on the predefined talkgroup. Your service provider predefines the alias and the priority of the Broadcast Call.



**Note:** If the type of the encryption is defined by the SIM Card, the Broadcast Call is always clear. Otherwise if the radio uses other encryption service the type of the encryption used for that Call is up to the encryption settings of that service.



**Note:** This feature is not supported on the Dimetra infrastructure.

## Initializing Broadcast Calls

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Services** → **Broadcast**.

Your radio displays the predefined alias and the Broadcast Call icon.

- 3 To start the call press the PTT button.

## Phone and PABX Calls

The Phone Call allows you to call a landline telephone number or a cellular mobile phone number. The Private Automatic Branch Exchange (PABX) Call allows you to call local (office) extension numbers.

## Private Call

The Private Call, also called point-to-point, or individual call, enables calling between two individuals. No other radio can hear the conversation. This call type can be carried out in two ways:

- Duplex call (if the system allows), in TMO Mode. Both parties can speak at the same time.
- Simplex call, in TMO or DMO Mode. Only one party can speak at a time.

When a DMO Private Call takes place, radios not involved in this call receive the channel busy indication. The radios are identified using its radio numbers.

### Related Links

[Emergency Individual Calls \(Private or MS-ISDN\)](#) on page 54

## Making Private Calls

### Procedure:

- 1 From the home screen, enter a number.
- 2 If **Private** is not the first type of call presented, press **Ctype** repeatedly to select it.
- 3 When you are in the following mode:
  - a TMO — For simplex calls, press and release the PTT button. You hear a ringing tone. Otherwise, press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen. For duplex calls, press and release the **SEND** key. You hear a ringing tone.
  - b DMO — Only simplex calls are available. Press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen.
- 4 To end the call, press the **END** key.

## Assistance Call

This feature allows you make a private call to ask for assistance during normal and non-critical situations.



**Note:** Your service provider can configure the number, priority, and the type of the call (simplex or duplex).

You can start an Assistance Call in one of the following way:

- Dial a predefined number and press **SEND** key.
- **Menu** → **More . . .** → **Services** → **Assistance Call**

## Call Modification

Call Modification is a feature that allows your service provider to modify the call in order to optimize it and adjust to a current situation.

Modification can cover:

- Call priority — modified during call setup.
- Call type — modified during call setup.
- Call encryption — modified during an ongoing call (but not in the transmission phase).

When the call is modified, your radio displays **Call Modified** message.

When a recently modified call requires the PTT button to transmit, your radio displays **Call Modified Use PTT**.

All modifications are made by your service provider and the radio only follows them. You have no influence on ongoing call modifications.

When call priority is changed to emergency:

- The display indicates that an Emergency Group Call has been received.
- The radio plays a special audio alert.



**Note:** If a Group Call is modified into an Emergency Group Call, no emergency related features are triggered.

If call modification requested by your service provider cannot be followed by the radio (due to its settings), the radio rejects it and displays **Service Not Available** message.

## Local Site Trunking

---

This mode is also called as Fallback Mode and it allows more than one radio from the same site to communicate when the link between the site and the network central controller fails. Entering and exiting Local Site Trunking (that is, returning to System Wide Services) is done automatically. In this mode some services are unavailable.



**Note:** Your service provider can disable this mode.

## Entering Local Site Trunking

When your radio receives a Local Site Trunking indication from the system, the following occurs:

- Your radio plays an Entering Local Site Trunking tone.
- Display shows the **Local Area Service** message.
- Display icons and soft keys turn olive.



**Note:** Noticeable only on the color display.

- Any call in progress is dropped upon entering Local Site Trunking Mode.

If configured by your service provider, this message/alert is periodically repeated to remind you that your radio is still operating in Local Site Trunking Mode. The following features are available:

- Registration
- Attachment
- Group Call
- Emergency Call
- Emergency Alarm



**Note:** Your service provider can turn on/off all the visual and audio indications, when you enter Local Site Trunking Mode.

## Exiting Local Site Trunking

When the link with the central network controller is reestablished, your radio exits Local Site Trunking, and the following occurs:

- Your radio plays an Exiting Local Site Trunking tone.
- Any call in progress during Local Site Trunking is dropped.
- Display icons and soft keys turn blue.




**Note:** Your service provider can turn on/off all the visual and audio indications, when you exit Local Site Trunking Mode.

## Direct Mode Operation

---

Direct Mode Operation is a mode of simplex operation where radios communicate directly.

**Figure 2: Direct Mode Operation**

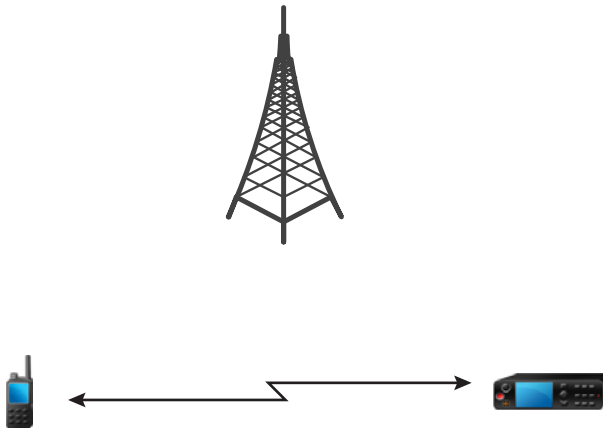

## Entering DMO Mode

To enter the DMO Mode:

- From the home screen, press the **MENU** key. Select **More . . .** → **Networks** → **Direct Mode**.
- From the home screen, select **Optns** → **Direct Mode**.

## Selecting Talkgroups

From the home screen, use one of the following methods:

- Press left or right **NAVIGATION** key. Press **Select** to confirm.
- Select **Optns** → **TG by abc**. Enter a talkgroup name and select the talkgroup name from the list.
- Select **Optns** → **TG by Folder**. Select a folder and then a talkgroup name.
- Press **ROTARY KNOB** and rotate it until the required talkgroup name is displayed. Press **Select** to confirm.





**Note:** If the ROTARY KNOB mode is set to **Scroll**, then you do not need to press it to enter the scrolling mode.



**Note:** Your radio can have an access up to three levels of the folder structure.

## Making Group Calls in DMO

The Group Call is received by all members of the selected group who have their units turned on and are in range.

### Procedure:

- 1 Press and hold the PTT button.
- 2 Wait for the *Talk Permit* tone (if configured) and then speak into the microphone. Release the PTT button to listen.

## Receiving Group Calls in Idle

### Procedure:

- 1 The radio receives a Group Call.



**Note:** The incoming Group Call is signalled by a *Receiving Group Call* tone.

- 2 To respond, press and hold the PTT button.

## Private Call

The Private Call, also called point-to-point, or individual call, enables calling between two individuals. No other radio can hear the conversation. This call type can be carried out in two ways:

- Duplex call (if the system allows), in TMO Mode. Both parties can speak at the same time.
- Simplex call, in TMO or DMO Mode. Only one party can speak at a time.

When a DMO Private Call takes place, radios not involved in this call receive the channel busy indication. The radios are identified using its radio numbers.

### Related Links

[Emergency Individual Calls \(Private or MS-ISDN\)](#) on page 54

## Making Private Calls

### Procedure:

- 1 From the home screen, enter a number.
- 2 If **Private** is not the first type of call presented, press **Ctype** repeatedly to select it.
- 3 When you are in the following mode:
  - a TMO — For simplex calls, press and release the PTT button. You hear a ringing tone. Otherwise, press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen. For duplex calls, press and release the SEND key. You hear a ringing tone.
  - b DMO — Only simplex calls are available. Press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen.
- 4 To end the call, press the END key.

## Private Call With Presence Check

This feature allows you to see if the calling party is available in DMO. When this feature is enabled, you can only initiate a Private Call if the called radio is present on the same channel and responds with a presence check acknowledgement.

Otherwise your radio displays **Party Not Available**.

## Talkgroup for Individual Calls

Talkgroup for Individual Calls is a talkgroup that operates on a separate frequency allocated for individual (private) calls only. Using this talkgroup optimizes frequency resources and helps not to block other talkgroups. The only supported call types are: private calls and emergency calls (both private and group). Use this talkgroup each time you need to make a private call.


When you select a Talkgroup for Individual Calls, your radio is not able to receive or initiate any group or broadcast calls with priority lower than Emergency.

When you have selected a Talkgroup for Individual Calls and press the PTT button to start a Group Call, the radio:

- Rejects the call
- Plays a tone
- Displays the **Individual Calls Only** message

## Communication through Repeaters


Radios that are out of range and cannot communicate directly one with another in DMO Mode can do it through the repeater. The repeater is a radio that repeats all communication on a chosen channel, and as a result increases radios' DMO range.

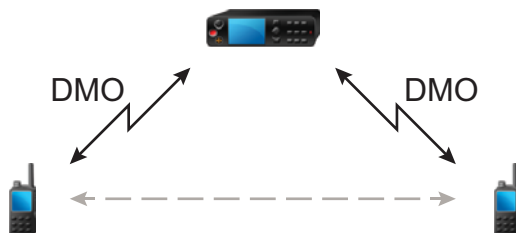

When the radio connects to a repeater, it plays a tone, displays the **Repeater available** message, and shows an appropriate icon. When the radio loses connection with the repeater, it plays a tone, displays the **Repeater not available** message, and the repeater icon is blinking.

## Communication through Gateways

Gateway provides connectivity between radios operating in DMO Mode and the TETRA network, so that the DMO radios can communicate with the TMO radios.

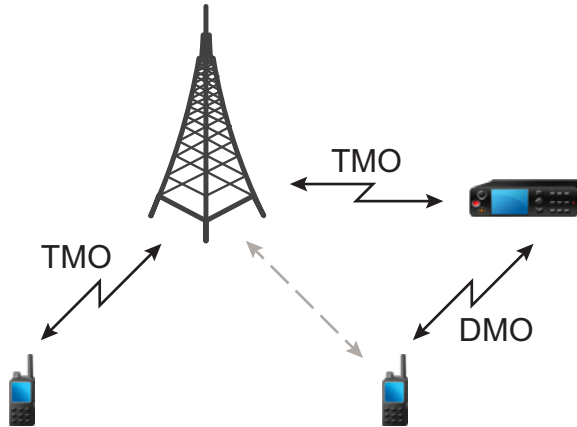

When the radio connects to a gateway, it plays a tone, displays the **Gateway available** message and shows an appropriate icon. When the radio loses connection with the gateway, it plays a tone, displays the **Gateway not available** message, and the gateway icon is blinking.

## Selecting DMO Group Call Options

**When and where to use:** Helps to communicate with other radio users on the same talkgroup through the Gateway or Repeater.

### Procedure:

- 1 From the home screen, press **Optns**.
- 2 Press **Config**.
- 3 Select one of the following:
  - **MS - MS** — Your radio can communicate only with other radios within its range.
  - **Gateway** — Your radio uses a gateway to communicate with the infrastructure.
    - **Automatic** — Your radio uses the first available gateway for that talkgroup.
    - **Specific** — Your radio uses only the Gateway with the specified Gateway address for that talkgroup. If your radio displays **Selected Gateway:None**, press **Edit** to enter the current gateway address.
  - **Repeater** — Uses the first available repeater for that talkgroup.
  - **GW + Rep** — Uses the first available gateway or repeater for that talkgroup.
    - **Automatic** — Uses the first available gateway for that talkgroup.
    - **Specific** — Uses only the Gateway with the specified Gateway address for that talkgroup. If your radio displays **Selected Gateway:None**, press **Edit** to enter the current Gateway address.



**Note:** When the Gateway and the Repeater cannot be communicated even though a talkgroup to use them is configured, the radio attempts the direct MS-MS communication.

When your radio detects the appropriate Gateway and/or the Repeater, the Gateway and/or Repeater icons turn solid, respectively.

## Transmit Inhibit Mode

The Transmit Inhibit Mode is a mode in which the radio sends no radio transmissions. It is recommended to activate the mode in RF sensitive areas, for example hospitals, airplanes, where safety can be jeopardized due to transmission radiation.

To activate, select MENU → **More . . .** → **Networks** → **TXI Mode** → **Activate**.

In this mode, the radio does not transmit under any circumstances except for the Emergency Calls. All the functions and keys which cause transmission, for example registration to the network, changing talkgroup or folder, sending SDS messages, or pressing the PTT button are disabled. Any transmission trial causes the radio to display **Not Allowed In TXI Mode** notification and to play a tone.

Your radio can still receive:

- Group calls.
- Messages — stored in the **Inbox**.
- Private call attempts — stored in the **Missed Calls** list, without the option to respond.

When no danger to safety exists anymore (for example, you leave the RF sensitive area), you can deactivate the Transmit Inhibit Mode and the radio returns to standard operation.

You can deactivate the mode by selecting MENU → **More . . .** → **Networks** → **TXI Mode** → **Deactivate**, pressing One-Touch button, or implicitly when initiating an Emergency Call.



**Note:** RF Transmissions from the radio are prevented under the following conditions:

- TXI Mode is activated.
- Battery is removed.
- The radio is turned off.

On entering or exiting the transmit inhibit mode, when the radio is camped on a cell, it sends a specially designated SDS status message. This SDS message indicates to the SwMI that the radio is entering or exiting transmit inhibit mode.

Mobility procedures that do not require the radio to send an uplink transmission are performed except for cell reselection.

In transmit inhibit mode the radio joins group calls for any group that the radio is monitoring, but the transmitting on that call is still prohibited.

The radio also displays any incoming SDS messages to the user. The missed call feature is active in the transmit inhibit mode and allows checking what calls were missed. However, the radio attempts to prevent call setup retransmission from being recorded as separate calls.

If you initiate an emergency call, the radio immediately leaves transmit inhibit mode and attempts to start the emergency call if the radio is in service.

If the radio is turned off in the transmit inhibit mode, on turning on the radio asks whether to exit the transmit inhibit mode. If you choose **No**, the radio turns off.

## Emergency Operations

---

Emergency Operations are used in critical situations.

Pressing and holding the EMERGENCY button, or entering the Emergency Number and pressing the SEND key, activates one or more services (depending on your service provider settings):

- Emergency Alarm
- SDS Status
- Silent Emergency
- Hot Microphone operation
- Emergency Individual Call (Private or MS-ISDN)
- GPS location information



**Note:** It is possible to turn on the radio by pressing the EMERGENCY button. Depending on the service provider settings, the radio can start Emergency Operations automatically. If the radio is PIN-protected (except for SIM PIN), Emergency Operations will bypass the PIN lock for the duration of the Emergency Operations.

When starting Emergency Operations, any ongoing voice call is aborted or cleared down, and any packet data transfer in progress is aborted. However, the session is kept open.

During Emergency Operations, the radio rejects phone, PABX, and private calls, and does not monitor the talkgroups in the selected scan list.

To terminate Emergency Operations, press the rightSOFT key.

## Emergency Group Call

The Emergency Group Call has the highest communication priority that means it is the pre-emptive kind of call. Emergency Group Call is available in both TMO and DMO. During Emergency Operations, Emergency Group Call can be started by pressing the EMERGENCY button. The radio can also support Hot Microphone operation, which allows the Emergency Call to be conducted without pressing the PTT button.

If the radio receives an incoming group call with emergency priority, the display shows that an emergency call has been received, and a special audio alert is played.

An emergency group call can be configured as:

- A non-tactical call – initiated on a talkgroup preprogrammed by your service provider. When in non-tactical emergency mode, you cannot switch talkgroups.
- A tactical call – initiated on the currently selected talkgroup.

In TMO, if the radio enters Emergency Operations while the Emergency Broadcast Call is active, the radio continues on the call without initiating any calls and sends the Emergency Alarm.

When the Emergency Group Call you participate in terminates, your radio can behave in several ways, depending on your service provider settings:

- If you are the call initiator, the radio can either stay in the Emergency Mode, or return to TMO.
- If you are not the call initiator, the radio always returns to TMO.

## Making Emergency Group Calls

**Prerequisites:** Ensure that your radio is in Emergency Mode.

### Procedure:

- 1 Press and hold the PTT button.
- 2 Wait for the talk permit tone (if configured) and talk.
- 3 Release the PTT button to listen.



**Note:** It is possible to cancel making an emergency group call in TMO. To do this, perform one of the following actions before the talk permit is granted (depending on your service provider settings):

- Release the PTT button.
- Press the END key (default).

When the call is canceled, your radio displays **Call Cancelled** message (if configured by your service provider).

## Receiving Emergency Group Calls

The radio receives an Emergency Group Call from a selected pre-programmed group. An incoming call is indicated by an appropriate tone, status icon, and red color of the display.

## Non-Tactical Emergency

In Non-Tactical Emergency, the radio switches to a designated Emergency talkgroup when starting Emergency Operations. This talkgroup is used for the complete duration of the Emergency Operations (you cannot change the talkgroup).

In TMO, it is possible to configure the radio to make Emergency Non-Tactical Group Calls without sending attachment. If this is set, the radio assumes implicit attachment after receiving a temporary address.

In DMO, the Non-Tactical Emergency proceeds on the same frequency as the previously selected talkgroup. The service provider can designate any ITSI address to be used for Emergency Operations, (this can be an Open Group – broadcast address).

After exiting from Non-Tactical Emergency, the radio goes back to the previously selected talkgroup.

## Emergency Individual Calls (Private or MS-ISDN)

The Emergency Individual Calls are Simplex or Duplex Calls with emergency priority. On pressing the EMERGENCY button, the radio initiates an Individual Call to the provisioned address (private or MS-ISDN). During this kind of call all user indications are unavailable and all other services are rejected. Emergency Operation ends as soon as the Emergency Individual Call is ended.

### Related Links

[Private Call](#) on page 46

## Emergency Alarm

The Emergency Alarm is a special status message sent to the infrastructure while starting the Emergency Operations. The radio can wait for infrastructure acknowledgment for this alarm and attempts retries.

Each time the radio enters the Emergency Operation, it sends the Emergency Alarm. When the Emergency Alarm is sent successfully, the respective audible tone sounds.

In addition, once the radio is in the Emergency Operation on pressing the EMERGENCY button, an additional emergency alarm is sent (exception: during Hot Microphone transmission).

The message can be dispatched both in TMO and DMO.

## Emergency SDS Status

Radio sends a status message with a preprogrammed value to the destination address set by your service provider. Emergency SDS Status is available in TMO only. If no status acknowledgment or negative acknowledgment is received, the radio retries sending the message. Status is not resend if Emergency Alarm or Hot Microphone is configured.

## Emergency Hot Microphone

The Hot Microphone allows you to talk without pressing the PTT button during Emergency Operations. The transmission continues for a provisioned amount of time. Pressing the PTT button before the Hot Microphone time expires ends the Hot Microphone operation. Then normal PTT operation in Emergency group call takes over (that is, the transmission is ongoing for the time the PTT button is held).

Subsequent EMERGENCY button presses during the Emergency Operation restarts the Hot Microphone transmission.

If a talk permit is granted to another member of the group, the Emergency Call received tone is played. If configured, the radio automatically attempts to get talk permit again.

Pressing **EndSOFT** key or END key ends the Hot Microphone operation.

## Alternating Hot Microphone

The Alternating Hot Microphone is an enhancement of the Hot Microphone. After activation, the radio alternately enters transmission phases (your microphone is active) and reception phases (you can only listen) for an amount of time precisely determined by your service provider.

If this feature is enabled, you can initiate the Alternating Hot Microphone by pressing the **EMERGENCY** button. If you want to finish earlier or skip the transmission phase, press the **END** key.

The Alternating Hot Microphone terminates when one of the following conditions is met:

- The radio exits the Emergency Mode.
- The Alternating Hot Microphone timer expires.
- The **PTT** button is pressed.
- The right **SOFT** key is pressed (only during the transmission phase).



**Note:** When the radio goes out of the service, it enters the reception phase and the Alternating Hot Microphone is on hold. When the radio is back to the service, the Hot Microphone transmission and the Alternating Hot Microphone resume.



**Note:** When you are in the Emergency Mode, pressing the **EMERGENCY** button restarts the Alternating Hot Microphone.

## Silent Emergency Mode

The Silent Emergency Mode is a type of emergency services that provides no audible indications and no keypad tones at the entrance. All the display indications are as in the home mode. However, the radio cannot use any services except for:

- Receiving Ambience Listening
- Sending Silent Emergency Alarms
- Sending GPS location reports



**Note:** If you try to activate any other feature, it is blocked.

If the Silent Emergency feature is enabled, the radio enters Silent Emergency Mode on pressing the **EMERGENCY** button. After entering this Mode the radio stays in TMO or switches to it, depending on the actual state. Once in TMO, the radio sends Silent Emergency Alarm.



**Note:** If the radio is in a private or group call, the radio waits until the call ends and then enters the Silent Emergency Mode.

The radio keeps re-sending the alarm until successful sending is confirmed. After the alarm is successfully delivered, the radio stays in Silent Emergency Mode and waits for the Ambience Listening.

Your radio exits the Silent Emergency Mode, under the following conditions:

- Press **MENU** and then **#** key within 3 seconds.
- Press **MENU** simultaneously with right **NAVIGATION** key.
- Press both **SOFT** keys simultaneously.
- No success in sending the Silent Emergency Alarm and the maximum number of retries has been reached.
- The control room terminates the Silent Ambience Listening.
- The Ambience Listening is disconnected due to another reason.

If you turn off the radio in the Silent Emergency Mode, the radio switches to pseudo power off state. In this state, the radio appears to be turned off. However, the radio is still on and in the Silent Emergency Mode. On turning the radio on during the pseudo power off state, the radio acts as during turning on and still is in the Silent Emergency Mode.

## Invisible Emergency

It is possible for the service provider to disable visual and audible indications of performing Emergency Operations on the radio. The purpose of this feature is to hide the fact of using Emergency Operations in a critical situation (e.g. direct attack on the user) and thus to provide additional layer of safety.

## Emergency Mode by Dialing

This feature allows you to trigger Emergency Mode by dialing a predefined number. It initiates the same Emergency services as you would use the EMERGENCY button. Your radio can store up to eight Emergency numbers.



**Note:** If this Emergency Mode was triggered by Emergency number (not by EMERGENCY button), you can press the END key to exit the Emergency Mode.

## Disaster Alert

Disaster Alert call is a broadcast emergency call initiated by the radio, with emergency pre-emptive priority that everyone in a broadcast area can hear. This feature is specifically designed for catastrophic situations, such as earthquakes, and has the highest priority over other calls. All radios under Disaster Alert display emergency notification on their screens. The alert message, its duration and destination talkgroup can be configured in the codeplug.

In order to initiate Disaster Alert, switch the radio to Disaster Alert mode and press PTT button. When the call ends, the radio will exit the Disaster Alert state.

During Disaster Alert, other functionality is impacted:

- When Disaster Alert begins, any other ongoing services are terminated.
- No other services can interrupt this type of call.
- Hot Mic functionality cannot be used.
- Speech can only be in Clear mode, even if any of the encryption services are enabled. The only exception is E2E Encryption.



**Note:** Not all infrastructures support this feature. Please consult with your service provider before enabling this feature.

## Initializing Disaster Alert Calls

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **More . . .** → **Services** → **Disaster Alert**.

Your radio enters Disaster Alert Mode and it displays Disaster Alert icon.

- 3 To start the call press PTT.

Your radio displays **Disaster AlertIn Use**.

## Exiting Emergency Operations

**Prerequisites:** Make sure that your radio is engaged in Emergency Operations.

### Procedure:

- 1 If your radio screen displays **Emergency Mic On**, press **End**.
- 2 Press and hold **Exit**.



**Note:** If an Emergency Operation was triggered by Emergency number (not by EMERGENCY button), you can press the END key to exit the Emergency Operation.



3 If your radio displays **Do you want to exit?**, press **Yes** to exit.  
Your radio exits Emergency Operations.



# Chapter 4

## GPS Location Service

The GPS Location Service feature uses information from Global Positioning System (GPS) satellites orbiting the Earth to determine the approximate geographical location of your radio.

The GPS Location Service availability, accuracy, and the position calculation time vary depending on the environment in which you use the radio. The GPS Location Service can assist your dispatcher or colleagues in many ways such as more efficient deployment of resources or locating your radio when you trigger your emergency service.

The radio can display the location information directly on the screen or send it over the air to your dispatcher to display it in the control center. Check your radio configuration details with your service provider.



**Important:** Where the signals from satellites are not available, the GPS Location Service does not work. This situation usually happens when your radio cannot establish a view of a wide area of open sky, for example, when the GPS antenna is covered or facing the ground. Such situations include being:

- In underground locations
- Inside buildings, trains, or other covered vehicles
- Under any other metal or concrete roof or structure
- Near a powerful radio or television tower
- In extreme temperature outside the operating limits of your radio

Even if your location information can be calculated in such situations, it may take longer to do so. Therefore, in any emergency situation, always report your location to your dispatcher. Where adequate signals from multiple satellites are available, your GPS Location Service feature provides a location, most probably near to your actual location.

The radio can be triggered to send Location Reports in various circumstances, for example:

- Upon a request
- Entering Emergency Mode
- At specified time intervals
- At specified distance intervals

The Location Reports can be sent both in TMO and DMO by using:

- SDS messages
- Packet Data

The radio can be configured to give audio-visual notifications upon sending the Location Reports.

Depending on the radio settings, viewing the radio position and the status of the visible satellites is available. The position may consist of longitude and latitude, UK, or Irish grid coordinates.



**Note:** This is a selling feature.

### Related Links

[Location](#) on page 99

## Enhancing GPS Performance

Sometimes the GPS feature is unable to complete a location calculation successfully. You hear an audible tone indicating that your radio cannot see the satellites.

To maximize the ability of your radio to determine a location fix please note the following guidelines:

- Stay in the open — The GPS feature works best where there is nothing between your radio and a large amount of open sky. If possible, go outside, away from tall buildings and foliage. While the performance in a building is improved by moving closer to windows, glass with certain sun shielding films may block satellite signals.
- Position your radio to enhance reception — Signals from GPS satellites are transmitted to your GPS antenna, which is in your radio antenna. Hold your radio away from your body, giving the antenna clear access to satellite signals. Do not cover the antenna area with your fingers or anything else.
- Stand still — If possible, stand still until your radio is finished determining your location. Moving your radio at a walking pace while your radio is calculating your approximate location may substantially decrease GPS performance.

## Enabling GPS


### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **More . . .** → **Location** → **Interface**.
- 3 Select **On**.



**Note:** Your service provider can enable this feature.

## GPS Icon

When GPS is enabled, the following icon is displayed in the status icon area:  Depending on the current GPS state, the icon can be solid – GPS has a fix, or blinking – GPS is searching for a fix. The blinking GPS icon can be disabled/enabled by your service provider.

## GPS Different Location Displays

**Table 14: Different Location Displays**

Latitude / Longitude	UK Coordinates	Irish Coordinates	UTM Coordinates	MGRS Coordinates
Time	Time	Time	Time	Time
Latitude	2–Letter Code	1–Letter Code	3–Letter Code	3–Letter Code and 2–Letter Code
Longitude	Easting and Northing Coordinate	Easting and Northing Coordinate	Easting and Northing Coordinate	Easting and Northing Coordinate
Altitude	Altitude	Altitude	Altitude	Altitude

*Table continued...*

Latitude / Longitude	UK Coordinates	Irish Coordinates	UTM Coordinates	MGRS Coordinates
Satellites	Satellites	Satellites	Satellites	Satellites

- Time — indicates when the last time the location was calculated. The time is provided in Universal Time Coordinated.
- Letter Code — grid zone or square on the map for different coordinate standard
- Latitude — expressed in degrees, minutes, and seconds.
- Longitude — expressed in degrees, minutes, and seconds.
- Number of satellites — used to calculate the location. In general, more satellites make for better accuracy. The maximum is 12 satellites.
- Easting — refers to the eastward-measured distance expressed in meters.
- Northing — refers to the northward-measured distance expressed in meters.



**Note:** Skipping each digit of easting and northing coordinates decreases the accuracy by the factor of 10.

## Viewing Your Position

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **More . . .** → **Location** → **Position**.
- 3 Scroll to view the results about the last time your location was calculated.



**Note:** To refresh your position:

- Select **Position** — the radio refreshes its position automatically
- Press **Refresh**

## Changing GPS Accuracy

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **More . . .** → **Location** → **Accuracy**.
- 3 Select one of the following:
  - **Medium** (default) — Power consumption optimization is combined with less position accuracy.
  - **High** — Better position accuracy is combined with less power consumption optimization.



**Note:** If connected to an external charging device, the radio automatically enters the **High** mode.

## GPS – Things to Keep in Mind

Where adequate signals from multiple satellites are not available, the GPS feature of your radio does not work. Such situations include but are not limited to:

- In underground locations
- Inside of buildings, trains, or other covered vehicles

- Under any other metal or concrete roof or structure
- Near a powerful radio or television tower
- When your GPS antenna is covered (for example, by your hand or other object) or facing the ground
- In temperature extremes outside the operating limits of your radio

Even where location information can be calculated in such situations, it may take longer to do so. Therefore, in any emergency situation, confirm your location with your dispatcher.

Furthermore, please note that even where adequate signals from multiple satellites are available, your GPS feature provides only an approximate location, often within 20–100 meters from your actual location.

# Chapter 5

## Main Menu

This chapter contains information on items in the main menu.

You can enter the menu items during a call. If you are viewing a menu when a new call starts, the radio exits the menu.



**Important:** Some menu items are model specific and may not be activated or available on your radio.

## Scrolling through the Menu

---

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Scroll to the required item by pressing **NAVIGATION** keys. Press the **SOFT** key assigned as **Select** or right **NAVIGATION** key to select.

If the menu item contains a further set of menu items, repeat step 2.






**Note:** You can use shortcuts to access frequently used items.

## Menu Icons















---

The following icons make it easy to identify the menu items at first glance.

**Table 15: Menu Icons**

Menu Icon	Description
	Main Menu Items / Context Sensitive Menu It is assigned to <b>MENU</b> when the main menu items / context-sensitive menu are active.
	Messages Send status messages, Send text messages (free text or according to user defined or predefined templates), Received messages in <b>Inbox</b> .
	Contacts Add, search, edit, or erase entries in the contact list.

*Table continued...*

Menu Icon	Description
	<p>Browser</p> <p>Starts the WAP browser.</p>
	<p>Security</p> <p>Lets you turn on/off and verify security features, and change passwords.</p>
	<p>Setup</p> <p>Allows you to customize your radio.</p>
	<p>More...</p> <p>Contains additional setup menu items.</p>
	<p>Group Setup</p> <p>Contains additional menu items for Scanning Talkgroups features.</p>
	<p>Favorites</p> <p>Contains shortcuts to frequently used talkgroups and contact numbers.</p>
	<p>My Info</p> <p>Displays information about your radio and its numbers.</p>
	<p>Recent Calls</p> <p>Contains a list of recent calls.</p>
	<p>Shortcuts</p> <p>Allows you to view and manage shortcuts to menu items.</p>
	<p>RUI</p> <p>Allows you to log in and log out of the radio.</p>
	<p>Networks</p> <p>Allows you to select a network.</p>
	<p>Location</p> <p>Displays location of your radio.</p>
	<p>Packet Data</p> <p>Allows you to send data from your radio to other devices.</p>
	<p>Services</p> <p>Allows you to manage Broadcast, Assistance and Disaster Calls.</p>



## Messages

---

This feature allows you to send and receive text messages. A message can contain up to 1000 characters, depending on your service provider settings.

Pressing the PTT button when a message is highlighted can cause one of the following actions, depending on your service provider settings:

- The radio ignores the PTT button request.
- The radio starts a Private Call with the message sender.
- The radio starts a Group Call on a currently selected talkgroup.

### New Message

This menu item allows you to create a new message.

### Sending Messages to Private/Phone

#### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Messages** → **New Message**.
- 3 Enter your message and press **Send**.
- 4 If needed, select **Private/Phone**.
- 5 Enter recipient number or press **abc** to choose it from your contacts.



#### Note:

For **Private** target selection, you can enter either Individual Short Subscriber Identity (ISSI) or Group Short Subscriber Identity (GSSI) of the recipient.

ISSI – a unique, individual ID assigned for each radio.

GSSI – in Dimetra called Group ID or Talkgroup ID.

- 6 Press **Send**, or **SEND** key, or the PTT button.

### Sending Messages to Groups

#### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Messages** → **New Message**.
- 3 Type your message and press **Send**.
- 4 If needed, select **Group**.
- 5 Select a group to send the message.

### Sending Store and Forward Messages

**Prerequisites:** Your service provider enables the Store and Forward feature.

#### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Messages** → **New Message**.
- 3 Press **MENU** key and select **Message Setup** → **On/Offline users**.
- 4 Enter your message and press **Send**.
- 5 If asked for the **Target selection**, select one of the following:

- **Private** – enter the private number or press **abc** to choose the destination number from the contact list.
- **Phone** – enter the phone number or press **abc** to choose the destination number from the contact list.



**Note:** Your service provider can enable to send a Store and Forward message to a talkgroup.

6 Select **Send**, or press SEND key or PTT button.

## Delivery Report

Delivery Report is an acknowledgment that the radio can request upon sending a message to an individual recipient. You can define what type of Delivery Report your radio requests, or turn on/off this feature.

If the Delivery Report is received shortly after the message was sent, the radio:

- Displays a pop-up with one of the following messages:
  - **Message Sent** – if no Delivery Report is requested (and when a Store and Forward message has been received at the Store and Forward server)
  - **Message Delivered** – if the Delivery Report is requested and the message has been received by the target radio
  - **Message Read**
    - if the **Consumed** Delivery Report is requested and the message is opened on the target radio
  - **Message Failed** – if the Delivery Report is requested and the message has not been received by the target radio within a defined time period
- Saves the Delivery Report in **Outbox** along with a copy of the message.

If the Delivery Report is received after a longer period of time, the radio:

- Saves the Delivery Report in **Outbox** along with a copy of the message.
- If Delivery Report Notifications functionality is configured by your service provider, the radio also:
  - Temporarily saves a Delivery Report message in **Inbox**. The notification disappears after it is read.
  - Displays **New Message** icon.
  - Displays **New Delivery Status** notification screen (if possible).

## Viewing Delivery Reports

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Messages** → **Inbox**.
- 3 Find a required message and select **Read**.
- 4 Press MENU key.
- 5 Select **Delivery Status**.

## Configuring Delivery Reports

**Prerequisites:** Your service provider enabled the delivery report configuration.






### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Messages** → **New Message**.
- 3 Press MENU key and select **Delivery Report**.
- 4 Select one of the following:
  - **None** — the radio does not request any delivery report.
  - **Received** — the radio requests reports on your messages that were received.
  - **Consumed** — the radio requests reports on your messages that were read.
  - **Both** — the radio requests reports on your messages that were received and read.

## Inbox

It contains up to 100 new or old incoming messages.

**Table 16: Inbox Icons**

Icon	Description
	Unread (New) Message
	Read (Old) Message
	Sender Information in Message View — name or number
	Time and Date Stamp in Message View — arrival time and date
	Delivery Status Received — delivery status for Store & Forward messages

**Messages** sub-menu indicates the number of the messages. If the indication is for example 2/4, it means that two unread and four read messages are in the **Inbox**.

## Entering the Inbox

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Messages** → **Inbox**.



**Note:** The status (if any) of the list is displayed for a few seconds:

- **No New or Old Messages** — The screen returns to the previous display within a few seconds.
- **Inbox Full** — Select **Ok**.

## Receiving New Messages

### Procedure:

- 1 New message received.  
Your radio displays an animation and plays a *New Mail Received* tone.
- 2 Select one of the following:
  - **Read** — opens the entire message.
  - **Back** — dismisses the message. You can access the message later from the **Inbox**.

## Using Submenus in the Inbox and the Outbox

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Messages** → **Inbox** or **Outbox**.
- 3 Highlight the required message and press **MENU** key.
- 4 Select one of the following:
  - **Store** — Saves a message as a template. Change the default template name and press **Ok**.
  - **Delete** — Deletes the selected message. Press **Yes** to confirm.
  - **Delete All** — Deletes all the messages in the **Inbox/Outbox**. Press **Yes** to confirm.

- **Reply** (only for **Inbox**) — Invokes the edit screen with the old message as default text and the message originator as a recipient. After editing, press **Send**, the PTT button, or the **SEND** key to send.
- **Resend** (only for **Outbox**) — Invokes the edit screen with previously entered text with the same recipient. After editing, press **Send**, the PTT button, or the **SEND** key to send.
- **Forward** — Invokes the edit screen with the old message to send it to a different participant. After editing, press **Send**, the PTT button, or **SEND** key to send.
- **Refresh** — Re-orders the message list and displays the new messages.
- **Delivery Status** (only for **Outbox**) — Shows the date and time of the message when it sent, delivered, read, and expired was not delivered, expired was not read, failed unknown.

## Embedded Number

This feature allows you to call a number from a message or to start a group call with the message sender talkgroup.

## Storing Numbers from Messages

**Prerequisites:** Embedded Number feature is enabled by your service provider.

**When and where to use:** You can save the sender's or embedded number from the message to a new or existing contact.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Messages** → **Inbox**.
- 3 Highlight the required message and select **Read**.
- 4 Press the PTT button.
- 5 Radio displays a list of the numbers (including the senders number).
- 6 Highlight the required number and press **Store**.
- 7 Highlight required contact and press **View**.



**Note:** To store a number for a new contact, select [**New Contact**] and fill out the required fields. Press **Done** to save it..

- 8 Select **Edit**.
- 9 Choose the **Type** of the new number and press **Done**.

## Calling Numbers in Messages

**Prerequisites:** Embedded Number feature is enabled by your service provider.

**When and where to use:** You can return a voice call to the sender of a message or to any number that is embedded in the message text.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Messages** → **Inbox**.
- 3 Highlight the required message and select **Read**.
- 4 Press the PTT button.
- 5 Radio displays a list of the numbers (including the senders number).
- 6 To call, highlight to the required number and press the PTT button or the **SEND** key.
- 7 Select **Ctype** to choose the type of call (**Private**, **Phone**, or **PABX**).
- 8 Press the PTT button or the **SEND** key.

## Making Group Calls on theTalkgroup of the Message Sender

**Prerequisites:** Embedded Number feature is enabled by your service provider.

**Procedure:**

- 1 From the home screen, press the MENU key.
- 2 Select **Messages** → **Inbox**.
- 3 Highlight the required message and press the PTT button.

## Immediate Message

When the new immediate message is received, radio plays the *New Mail Received* tone and displays the content overlapping your previous screen. All immediate messages are stored in the **Inbox**. If the radio is in PIN Lock state, immediate message is displayed after correct PIN is entered.



**Note:** This is a selling feature.

## Outbox

Outbox stores all sent messages.

**Table 17: Outbox Icons**

Icon	Description
	Delivery in Progress
	Delivery Accomplished
	Delivery Failed
	Successful Outgoing Message
	Failed Outgoing Message

## CO Box

**CO Box** contains incoming and outgoing Call-Out messages arranged chronologically with the newest at the top of the list. Clicking **Select** on a Call-Out message headline displays more detailed information on the item.

When the radio is in normal mode, you are able to browse through all messages in the **CO Box**. However, if the radio is in the Call-Out mode, you can only browse through the information regarding the currently ongoing Call-Out message.

### Related Links

[Call-Out](#) on page 112

## RMS Box

RMS Box stores all incoming and outgoing Radio Messaging System (RMS) messages, both Status messages and Free Text messages.

## WAP Box

Each WAP Push message can be loaded immediately or stored as a message in **WAP Box**. Then it can be accessed by pressing MENU → **Messages** → **WAP Box**. All the WAP Push messages are passed to the browser.

## Related Links

[WAP](#) on page 105

[WAP Push](#) on page 112

## Templates

This feature is used to store up to 100 predefined and your message templates. Each of the **Inbox** and **Outbox** message can be stored as a template. Each template name and text can be edited afterwards.

## Sending User-Defined Templates

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Messages** → **Templates**.
- 3 Highlight the required template name and press **Send**.
- 4 Do one of the following:
  - Enter the number or press **abc** to select the name from your contact list. Press **Send**.
  - Select required talkgroup from the **TalkGroup List**.

## Setting User-Defined Templates

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Messages** → **Templates**.
- 3 Highlight the required template and press **MENU**.
- 4 Select one of the following:
  - **View** — Displays template text.
  - **Delete** — Deletes the template.
  - **Edit Text** — Opens edit screen with the template text. Edit the text and press **MENU**. Select **Save Changes** to save edited template, or **Store** to save the edited template as a new one.
  - **Edit Name** — Opens edit screen with the template name. Press **Ok** to save the template.

## Predefined Templates

Predefined message templates are programmed into your radio. You are allowed to perform limited edit operations of the predefined template. You can send it, but you are not able to store the edited template or erase it from the predefined template list.

## Viewing Predefined Templates

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Messages** → **Predefined**.
- 3 Highlight the required template and press **MENU** key.
- 4 Select **View**.

## Sending Predefined Templates

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Messages** → **Predefined**.

- 3 Highlight the required template and press **Send**, the PTT button, or the SEND key.



**Note:** You can edit the predefined template before you send it. Press the MENU key and select **Edit**. Edit screen opens with the template text. You are only allowed to replace the existing text.

## Status Messages

The radio allows you to send two types of status messages: statuses and targeted statuses. Your service provider determines which type is enabled on the radio.

Statuses can be sent either to a selected talkgroup or to a private number programmed by your service provider. Targeted statuses can be sent to any talkgroup defined for the radio or to any private number (from the contact list or entered manually).

## Viewing a Status Message Number

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Messages** → **Send Status**.
- 3 Press the MENU key and select **View**.

## Sending Status Messages

This procedure allows you to send status messages to either a selected talkgroup or a programmed private number. Only one option can be enabled at a time.

### Prerequisites:

- If sending statuses to talkgroups is enabled: switch to the talkgroup to which you want to send a status message.
- If sending statuses to private numbers is enabled: no action is needed, the private number is set up by your service provider

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Messages** → **Send Status**.
- 3 Do one of the following:
  - Highlight the required status message and press **Select**, the PTT button, or the SEND key.
  - If the status list is empty, enter a 5 digit status message number and press **Send**.

## Targeted Status Messages

This feature enables sending status messages to user selectable addresses. By default, targeted status messages can be sent to private or talkgroup addresses. Your service provider may restrict valid addresses to numbers stored in **Contacts**.

## Sending Targeted Status Messages

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Messages** → **Send Status**.
- 3 Do one of the following:
  - Highlight the required status message and press **Select**, the PTT button, or the SEND key.
  - If the status list is empty, enter a 5 digit status message number and press **Send**.
- 4 Do one of the following:
  - Enter the number or press **abc** to select the name from your contact list. Press **Send**.

- Select required talkgroup from the **TalkGroup List**.

The display shows one of the following delivery reports:

- **Status Sent.**
- **Status Failed.**








## Contacts

---

This sub-menu stores all your contact numbers. Each entry requires the following information:

- **Name** — if you store more than one number to one contact, this entry is required.
- **Type** — each contact must be assigned to one of the following types:

**Table 18: Contact Types**

Contact Icon	Description
	<b>Private</b> Cannot have a speed dial number.
	<b>Mobile</b>
	<b>Home</b>
	<b>Work</b>
	<b>PABX</b>
	<b>Other</b>
	<b>Pickers</b> Indicate more than one number in a contact.

- **# (number)** — each contacts entry must contain a number.
- **Speed #** — accept the default Speed Dial number or change it.

## Creating Contacts

### Procedure:

- 1 From the home screen, select **Contcs**.
- 2 Select **[New Contact]**.
- 3 Highlight **Name** and press **Change**. Enter the name of your contact and press **Ok**.
- 4 Highlight **Type** and press **Change**. Select the required type of your contact.



**Note:** You can use the left and right **NAVIGATION** keys to select the type of your contact from the **Contact Details** screen.

- 5 Highlight **# (number)** and press **Change**. Enter the number of your contact and press **Ok**.
- 6 If needed, highlight **Speed #** and press **Change**. Enter the speed dial number (1– 1000) of your contact and press **Ok**.





**Note:** If the entered number exist, the radio displays **Overwrite?** message. Press **Yes** to confirm, or **No** to enter the speed dial number again.

7 Press **Done**.

You have create a contact with one number. To add additional number repeat steps 4–6.

## Editing Contacts

### Procedure:

- 1 From the home screen, press **Contcs**.
- 2 Highlight the contact you want to edit.
- 3 Press the MENU key.
- 4 Press **Edit**.
- 5 Highlight one of the following entries and press **Change** to edit:
  - **Name**
  - **Type**
  - **# (number)**
  - **Speed #**
- 6 Press **Done**.

## Deleting Numbers

### Procedure:

- 1 From the home screen, press **Contcs**.
- 2 Select a contact you want to edit.
- 3 Use left or right NAVIGATION keys to choose the required number.
- 4 Press MENU.
- 5 Select **Delete number**.



**Note:** If an entry contains only one number, deleting the number deletes the entry.

6 Press **Yes**.

## Deleting Contacts

### Procedure:

- 1 From the home screen, select **Contcs**.
- 2 Highlight a contact you want to delete.
- 3 Press the MENU key.
- 4 Select **Delete contact**.
- 5 Select **Yes**.

## Checking Capacity

**When and where to use:** To see how many numbers are stored in the radio.

### Procedure:

- 1 From the home screen, select **Contcs**.
- 2 Press the MENU key.
- 3 Select **Capacity**.
- 4 Select one of the following:

- **Private**
- **Phone / PABX**
- **Contact**

## Dialing through the Contact List

### Procedure:

- 1 From the home screen, press **Contcs**.
- 2 To highlight the required contact, use up and down NAVIGATION keys, or enter up to 12 characters of the contact name.
- 3 If the contact has more than one number, use left and right NAVIGATION keys to select the required number.
- 4 Press the PTT button to initiate a simplex call with a **Private** number. Otherwise use the SEND key to initiate a duplex call.

## Browser

---

This menu item activates a WAP browser that allows you to browse the Internet from your radio.

### Related Links

[WAP](#) on page 105

## Security

---

This sub-menu stores all your security settings.

### PIN Protect

This feature allows you to enable PIN code authentication at the next power on. This code protects your radio against unauthorized use.

If you are unable to unlock the radio, you can only send or receive Emergency Calls and adjust the volume level with the ROTARY KNOB.

### Related Links

[Unlocking Your Radio](#) on page 30

[Changing PIN Codes](#) on page 75

### Protecting the Radio with a PIN Code

#### Procedure:

- 1 From the home screen, press MENU → **Security** → **PIN Protect**.
- 2 Select **On**.
- 3 Enter 4-digit PIN code. By default it is 0000 (four zeros).



**Suggestion:** To increase security, set your own PIN code.

**Post requisites:** Each time you turn on the terminal, PIN code is required.

### Unblocking Your Radio

**Prerequisites:** You blocked your radio by entering incorrect PIN code for three times (by default).

**Procedure:**

- 1 Radio displays **Unit Blocked** Enter **PUK**.
- 2 Enter 8–digit PUK (Personal Unblocking Key) number.



**Note:** The PUK is an eight-digit master code provided by your service provider.

- 3 Enter the new PIN code twice.

## Changing PIN Codes

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **Security** → **Change Code**.
- 3 Radio prompts for the **Old Code**. Enter currently used 4-digit security code (default setting is 0000).
- 4 If the entered code matches the old code, radio prompts for the new code twice.

Your radio displays **Code Accepted**.

**Related Links**

[Unlocking Your Radio](#) on page 30

[PIN Protect](#) on page 74

## Keylock Setup

The keypad lock feature allows locking the keypad to prevent pressing a key accidentally. The keypad lock/unlock can be invoked by using an appropriate option from the radio menu or by using a predefined menu shortcut. By default press **MENU**, and then **\*** key.

Your service provider can determine which of the following elements are additionally inoperative while the keypad is locked:

- The PTT button
- Side buttons
- The **ROTARY KNOB**
- The **ON/OFF/END/HOME** key

The **EMERGENCY** button is always operative.

**Related Links**

[Locking/Unlocking the Keys/Buttons](#) on page 30

## Keypad Lock Notification

When the keypad is locked, your service provider can configure one of the following instructions:

- None — no notification is displayed.
- Notification Only — **Keys Locked** is displayed.
- Notification and Instruction — **Press Menu \* to lock/unlock keypad** is displayed.

## Setting Automatic Keylock Delay

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **Security** → **Keylock Setup** → **Delay**.
- 3 Use up and down **NAVIGATION** keys to change the minutes and press **Done**.

## Setting Keylock on Startup



### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Security** → **Keylock Setup** → **Start Locked**.
- 3 Select **On/Off**.

## Air Encryption

Air Encryption is a feature that enables encryption of entire communication between the radio and infrastructure, which results in increased security of calls, messages, and data.

If configured by your service provider, the radio plays a sound and displays **Call & Data Not Encrypted** when encryption is on and you receive a clear call (unencrypted). This feature provides service confidentiality between you and the system.

In the TMO Mode, when Air Encryption is enabled on you radio but cannot be supported due to an infrastructure failure, the following icon appears on the display: . When encryption is not available in the DMO Mode, the radio displays: .

This menu item allows you only to view air encryption state.



**Note:** This is a selling feature.

### Related Links

[Status Icons](#) on page 26

## Viewing the Air Encryption State

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Security** → **AirEncrypt**.
- 3 Your radio displays:
  - a **Air Encryption Is Off**.
  - b **Air Encryption Is On**.

## Air Encryption Key Deletion

Please check with your service provider whether the radio is provided with Air interface encryption keys. You can delete the Air interface encryption keys from the radio by entering the following sequence: **\*\*00##**.



### Note:

- It takes a minute for this feature to delete all the encryption keys from the radio. During this time, do not remove the battery.
- Deletion is performed in idle TMO/DMO or Emergency Operation.



**Caution:** Using this feature will disable the radio, and your service provider will need to re-enable the radio.

## K Validity

K (Key) is a secret key the infrastructure uses to authenticate the radio in the system. It is part of the authentication that provides service confidentiality between your radio and the system.

## Verifying K Validity

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Security** → **K Validity**.
- 3 Your radio displays:
  - **K is Valid** — the infrastructure can authenticate your radio.
  - **K is Invalid** — the infrastructure is unable to authenticate your radio. Please call your service provider to restore the key to your radio.

## SCK (Air Interface Encryption Class 2)

SCK (Static Cipher Key) is a secret key used for the Air Interface Encryption Class 2. It may be used to encrypt calls and data in TMO and DMO. The SCK air interface encryption provides service confidentiality between radios and infrastructure when in TMO, and between radios when in DMO. A radio is capable of being loaded with up to 32 SCKs. Specific keys are used for encrypting the air interface.

Any mismatch between radios and/or infrastructure impacts communication – only those using the same key as the transmitting party are able to decode and hear the communication.

## TMO SCK

Use of SCKs in TMO needs to be enabled by your service provider. The SCKs used in TMO are called TMSCKs.

## DMO SCK

Use of SCKs in DMO needs to be enabled by your service provider. The SCKs used in DMO are called DMSCKs.

## Changing DMO SCK

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Security** → **DMO SCK**.
- 3 Press **Next**.
- 4 Radio displays **Change to version** .
- 5 Select one of the following:
  - **Yes** — to change the key. Your radio displays **Key version changed**.
  - **No** — to leave the key. Your radio displays **Code Not Changed**.

## Verifying TMSCK Validity

**When and where to use:** To ensure that the TMSCKs in the radio are valid and can be used for the air interface encryption.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Security** → **TMSCK Validity**.
- 3 The radio displays:
  - **TMSCK is Valid** – the radio can work encrypted in TMO.
  - **TMSCK is Invalid** – the radio cannot work encrypted in TMO. Please contact your service provider to restore SCKs to your radio.

## Verifying DMSCK Validity

**When and where to use:** To ensure that the DMSCKs in the radio are valid and can be used for the air interface encryption.

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **Security** → **DMSCK Validity**.
- 3 The radio displays:
  - **DMSCK is Valid** – the radio can work encrypted in DMO.
  - **DMSCK is Invalid** – the radio cannot work encrypted in DMO. Please contact your service provider to restore SCKs to your radio.

## Covert Mode

This feature enables you to completely shut down all visible and audible alerts and notifications making the radio unnoticeable even in a silent and dark environment.

When your radio is in the Covert Mode, you cannot enter the following menu items of the **Setup** menu.

- **Vibrate**.
- **Set Volume**
- **Tones**
- **Backlight** (in **Display** menu item)

When the Covert Mode is turned on:

- All tones are set to **Off** (corresponding to **All Tones** menu entry).
- Group audio is set to **Spkr Cntrl** (corresponding to **Audio Toggle** menu entry).
- The private speaker is set to **Off** (this setting causes all the calls are routed through the earpiece).
- Backlight is set to **Disabled** (corresponding to **Backlight** menu entry).
- The LED indicator is switched off.

The radio powers up in the mode set before turning off. Thus if the Covert Mode was set before turning off, the radio turns on in the Covert Mode .

When the Covert Mode is turned off, all the changed settings are reverted to the previous state.

This feature can be used as the One-Touch Button.

## Activating the Covert Mode

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **Security** → **Covert Mode**.
- 3 Select one of the following:
  - **On** — all tones are set to off, and the backlight and the LED are disabled immediately. The group audio is routed to the earpiece. The radio displays **Covert Mode On**.
  - **Off** — all settings for tones, backlight and audio are restored. The radio displays **Covert Mode Off**.

## Setting to Vibrate in the Covert Mode

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **Security** → **Covert Mode** → **Vibrate**.
- 3 Select one of the following:

- **On** — To restore all vibrations.
- **Off** — To disable all vibrations.

## SDS Remote Control

SDS Remote Control is a feature that enables to remotely control behavior and configuration of the radio via special SDS messages. The messages can be sent both in TMO and DMO (including the Repeater Mode) by any radio capable of controlling other radios. During the execution of the Remote Control messages, depending on your service provider settings, the radio can play a tone, vibrate, or display an appropriate icon in the status icon area.



**Note:** This is a selling feature.

## Setting SDS Remote Control

**When and where to use:** To enable/disable support of special SDS messages that allow remote control of the radio.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Security** → **Remote Control**.
- 3 Select **On** to enable, or **Off** to disable remote control.

## Setup

---

This sub-menu allows you to change your radio configuration.

## Vibrate

This sub-menu allows you to determine if your radio vibrates, or rings, or both vibrates and rings when receiving a call.

## Setting Default Vibrate

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Vibrate**.
- 3 Select one of the following:
  - **Vibe then Ring**
  - **Vibe Only**
  - **Ring Only**

## Setting Detail Vibrate

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Vibrate** → **Details...**
- 3 Select one of the following:
  - **Duplex Calls** — Sets the vibrate settings for Phone, PABX, and Duplex Private calls.
  - **Simplex Calls** — Sets the vibrate settings for Simplex Private Calls.
  - **Group Call** — Sets the vibrate settings for Group Calls.
  - **Messages** — Sets the vibrate settings for status messages and text messages.

- 4 Select the required setting, and press **Select**.



**Note:** If you choose **Duplex Calls**, **Simplex Calls** or **Messages**, the settings available are **Vibe then Ring** (for messages it is **Vibe & Ring**), **Vibe Only** or **Ring Only**. If you choose **Group Call**, the settings available are **Vibe On** or **Vibe Off** only.

## Ring Style

This sub-menu allows you to set the incoming call ring style.

### Setting Ring Style

#### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Ring Style**.
- 3 Select one of the following:
  - **Duplex** — To set the new ring style to all duplex calls.
  - **Simplex** — To set the new ring style to all simplex calls.



**Note:** Upon entry into this sub-menu, the display shows the current ring style used.

- 4 Scroll to the desired style and press **Select**.



**Note:** New ring style is played immediately for a few seconds. If necessary, adjust the volume level.

## Set Volume

This menu item allows you to adjust the **Simplex**, **Duplex**, **Earpiece**, **Speaker**, and **Keypad** tone volume.

#### Related Links

[Volume Adjustment Mode](#) on page 82

### Setting Volume

#### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Set Volume**.
- 3 Select one of the following:
  - **Duplex Vol** — sets the volume level for duplex ringtones.
  - **Simplex Vol** — sets the volume level for simplex ringtones.
  - **Earpiece Vol** — sets the volume level for the earpiece.
  - **Speaker Vol** — sets the volume level for the speaker.
  - **Keypad Vol** — sets the volume level for keypad tones.



**Note:** If the display shows only one option **Volume**, you can adjust all of the above settings at once. You have the option to change the settings individually when the **Volume Adj. Mode** is set to **Individual**.

- 4 Press right or left **NAVIGATION** key to change the value.



**Note:** When the battery level is low it is not recommended to attach the 4 Ohm speaker to the radio as it can cause reset or shutdown of the radio.

#### Related Links

[Setting Volume Adjustment Mode](#) on page 82



## Language

This sub-menu allows you to change the language of the radio.

### Setting Language

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Language**.
- 3 Select desired language.

### Data Setup

This menu item allows you to set up your radio to transmit and receive data from the external device.

To connect your radio accessory connector to the external device, use the PMKN4025 cable. The external device must run an application complying with the TETRA standards.



**Note:**

- Data services are available only in TMO Mode.
- Data services are blocked in TXI Mode.
- When set to **Voice Only**, the built in data modem is disabled to conserve battery power.

### Setting Data Function

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Data Setup**.
- 3 Select one of the following:
  - **Voice Only** — Your radio receives and transmits voice calls only.
  - **Data Only** — Your radio acts as a modem. It rejects incoming and outgoing voice calls (except for Emergency Calls), status and text messages.
  - **Voice & Data** — Your radio acts as a modem but voice calls have priority over data calls and can interrupt them.

## Audio

This menu item allows you to adjust your radio audio settings.

### Audio Profiles

An audio profile is a set of audio parameters, such as the volume of alert tones, that are configured by your service provider to fit a particular operating environment. For example, the audio parameters can be adjusted to situations when the radio operates inside a building or on a noisy street.

If programmed, the radio displays a name of a currently used audio profile (on the home screen) and/or an appropriate icon associated with the profile (in the status icon area).

### Audio Toggle

You can control audio routing (speaker/earpiece) for any private or group call through the dedicated **SPEAKER CONTROL** key. You can also define through the menu to have all group calls in high audio or controlled by the **SPEAKER CONTROL** key.

## Setting Audio Toggle

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Audio** → **Audio Toggle**.
- 3 Select one of the following:
  - a **Always Loud** — The audio sound comes from the speaker (high audio only). **SPEAKER CONTROL** key is disabled.
  - b **Spkr Cntrl** — The audio goes through the earpiece or the speaker. You can switch between low and high audio by pressing **SPEAKER CONTROL** key.

## Volume Adjustment Mode

You can set the volume to **Individual** or **Common**. When it is set to **Individual**, the volume level for **Voice**, **Duplex**, **Simplex**, **Earpiece**, **Speaker** and **Keypad** can be set per user preferences. When set to **Common**, the audio has one setting for all items.

### Related Links

[Set Volume](#) on page 80

## Setting Volume Adjustment Mode

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Audio** → **Volume Adj. Mode**.
- 3 Select one of the following:
  - **Individual** — You can set **Duplex**, **Simplex**, **Earpiece**, **Speaker** and **Keypad** per your preferences in **MENU** → **Setup** → **Set Volume**.
  - **Common** — You can set one value for all the items in **MENU** → **Setup** → **Set Volume**.

### Related Links

[Setting Volume](#) on page 80

## Tones

This field sets the volume level for the tones set.

## Keypad Tone

You can activate/deactivate keypad tone at every key press.

## Setting Keypad Tone

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Tones** → **Keypad Tone**.
- 3 Select one of the following:
  - **On** — Activates keypad tone.
  - **Off** — Deactivate keypad tone.

## All Tones

You can activate/deactivate all tones.

## Setting All Tones

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Tones** → **All Tones**.
- 3 Select one of the following:
  - a **On** — Activates all the tones.
  - b **Off** — Deactivates all the tones.

## Talk Permit

You can set a different tone upon pressing the PTT button.

## Setting Talk Permit

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Tones** → **Talk Permit**.
- 3 Select one of the following:
  - **No Tone** — No tone heard upon pressing the PTT button.
  - **Short Tone** — Short tone heard upon pressing the PTT button.
  - **Normal Tone** — Factory-default tone heard upon pressing the PTT button.

## Clear to Send

You can activate/deactivate tone for the transmitting radio that the receiving radio is ready to accept the transmission.

## Setting Clear to Send

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Tones** → **Clear to send**.
- 3 Select one of the following:
  - **Tone On** — Activate clear to send tone.
  - **Tone Off** — Deactivates clear to send tone.

## Periodic Alert

You can activate/deactivate periodic tone indication for the missed calls, the unread messages, and low battery level. For each notification, your radio generates an unread message tone with the amber LED color indication.

## Setting Periodic Alert

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Tones** → **Periodic Alert**.
- 3 Select one of the following:
  - **Alert** — Activates/deactivates periodic tone.
  - **Period** — Indicates the time between each periodic tone.

## D-PTT Tones

This menu item contains the settings for the Double PTT feature.

The Double PTT feature allows you to send a tone pattern (single, double, or triple) when the radio is in idle or the Group Call mode by pressing the PTT button twice.

After the D-PTT tone is played, the user can press and hold the PTT button once again to get the permission to talk. Otherwise, if the user presses the PTT button while the D-PTT tone is played, it is ignored.

After the D-PTT tone is sent keeping the PTT button pressed, it results in permission to talk. The D-PTT tone is not audible on a sending radio.



**Note:** This feature needs to be enabled by your service provider.

## Setting D-PTT Tones

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Tones** → **D-PTT Tones**.
- 3 Select one of the following:
  - **D-PTT Mode** — Activates/deactivates D-PTT tone.
  - **Tone Style**— Indicates how many times the D-PTT tone is played.

## Display

This menu item allows you to adjust your radio display settings.

### Related Links

[Display](#) on page 25

[Display](#) on page 25

[Setting Time and Date on the Display](#) on page 87

## Setting Flip Display

### When and where to use:

The feature is useful for a user who has to wear the radio on a shoulder, belt, or lapel and at the same time wishes to read the display upside down.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Display** → **Flip Display**.
- 3 Select one of the following:
  - **On** – to activate this feature.
  - **Off** – to deactivate this feature.

## Setting Font Level

**When and where to use:** To increase/decrease text size so you can adjust the interface readability to existing conditions.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Display** → **Font Level**.

3 Select one of the following:

- 1 – small font size
- 2 – medium font size
- 3 – large font size



**Note:** In some languages number of available font levels can be limited.

## Setting Large Idle Font

**When and where to use:** To enable/disable large font on the home screen.

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Setup** → **Display** → **Large Idle Font**.
- 3 Select **On** to enable, or **Off** to disable displaying large font on the home screen.



**Note:** Large Idle Font is not available in some languages.

## Setting Extra Zoom

Enabling Extra Zoom simultaneously changes three settings: switches **Font Level** to the largest possible one, activates **Large Idle Font**, and sets **Extended Status Icons** to **Idle Only**

If you modify any of these settings, for example decrease the font level, the radio leaves the Extra Zoom Mode. However, to restore all the three previous settings, you need to manually change the values of **Font Level**, **Large Idle Font**, and **Extended Status Icons**. If you cannot restore a setting, contact your service provider.

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Setup** → **Display** → **Extra Zoom**.
- 3 Select **On** to enable or **Off** to disable extra zoom.



**Note:** **Extra Zoom** is not available on radios using the SIM card encryption.

## Setting Extended Status Icons

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Setup** → **Display** → **Extended Status Icons**.
- 3 Select one of the following:
  - **Disabled** – the radio always displays icons in normal size.
  - **Idle Only** – the radio displays enlarged icons only on the home screen.
  - **Always** – the radio displays enlarged icons both on the home screen and when browsing through the radio menu.

## Setting Screen Saver

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Setup** → **Display** → **Screen Saver**.

3 Select one of the following:

- **Activate** — To activate/deactivate this feature.
- **Text** — To set the text on the screen saver when this feature is activated.

## Setting Backlight

**When and where to use:** To save the battery power.

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Setup** → **Display** → **Backlight**.
- 3 Select one of the following:
  - **Auto** – backlight is triggered by turning on the radio, by pressing any key on the device or on the accessory that is connected to it. Also charging or getting signal from the services like: Call-Out message, RUA request, DGNA and TX timeout during priority call are going to turn on the backlight.
  - **Semi Auto** – backlight is turning on when you are switching on the radio, pressing assigned button to the backlight feature, or charging.
  - **Disabled** – backlight is disabled and the display is always dimmed.
  - **On** – backlight is always on.



**Note:** Setting the backlight intensity level by pressing the BACKLIGHT key changes the LED, keypad backlight, and EMERGENCY button backlight intensity.

## Setting Wallpaper

**When and where to use:** To change the look of the home screen.

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Setup** → **Display** → **Wallpaper**.
- 3 Select one of the following:
  - **On** — To activate this feature.
  - **Off** — To deactivate this feature.

## Setting Contrast

**When and where to use:** This feature sets the contract of the display to enhanced visibility of the interface.

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Setup** → **Display** → **Contrast**.
- 3 Use left and right NAVIGATION key to change the value.
- 4 Press **Ok**.

## Time and Date

This sub-menu controls the displayed time and date on the home screen.



**Note:** If the Home Display Text Message feature is enabled, Home Mode Display Text may cover time and date, depending on the Configurable Idle Screen settings.



**Note:** Infrastructure synchronizes the time and date. When not within the infrastructure signal range you can set the values manually.

## Setting Time and Date on the Display

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Time & Date** → **Display**.
- 3 Select one of the following:
  - **Time & Date** — Your radio displays time and date.
  - **Time Only** — Your radio displays time only. **Format Date** sub-menu is disabled.
  - **Date Only** — Your radio displays date only. **Format Time** sub-menu is disabled.
  - **Off** — Your radio does not display time nor date. **Format** menu is disabled.

### Related Links

[Display](#) on page 25

[Display](#) on page 84

## Setting the Time Format

**Prerequisites:** If **MENU** → **Setup** → **Time & Date** → **Display** is set to **Time & Date** or **Time Only**.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Time & Date** → **Format** → **Format Time**.
- 3 Select one of the following:
  - **12-Hour** — Displays the time with **am** (before noon) or **pm** (after noon) indication.
  - **24-Hour**.

## Setting the Time Manually

**When and where to use:** If the time cannot update automatically through the infrastructure.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Time & Date** → **Set** → **Set Time**.
- 3 Enter current time using **NAVIGATION** keys or keypad.
- 4 Press **Done**.

## Setting the Date Format

**Prerequisites:** If **MENU** → **Setup** → **Time & Date** → **Display** is set to **Time & Date** or **Date Only**.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Time & Date** → **Format** → **Format Date**.
- 3 Select (D — day, M — month, Y — year):
  - **DD/MM/YY**
  - **MM/DD/YY**
  - **DD-MON-YY**
  - **YY/MM/DD**

## Setting the Date Manually

**When and where to use:** If the time cannot update automatically through the infrastructure.

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Time & Date** → **Set** → **Set Date**.
- 3 Enter current time using **NAVIGATION** keys or keypad.
- 4 Press **Done**.

## Setting Time Offset

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Time & Date** → **Set** → **Time Offset**.
- 3 Enter time offset using **NAVIGATION** keys.



**Note:** You can adjust the offset value, with 15 minute steps, up to 14 hours ahead or behind.

- 4 Press **Done**.

## Setting Automatic Updates for the Time and Date

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Time & Date** → **System Update**.
- 3 Select one of the following:
  - **Off** — All the infrastructure informations are ignored. The radio uses internal time and offset.
  - **Time Only** — Time displayed is calculated from the offset programmed by your service provider added or subtracted from the infrastructure time.
  - **Time & Offset** — Time and offset are updated after receiving from the infrastructure.

## Energy Economy

**Energy Economy** (EE) is a mode of operation to save battery life. Your radio does not monitor all downlink time slots of the Main Control Channel. If the radio is in the charger, **Energy Economy** mode is not needed.

## Enabling Energy Economy

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Energy Economy** → **EE Selection**.
- 3 Select one of the following:
  - **On** — Activates Energy Economy feature.
  - **Off** — Deactivates Energy Economy feature.

## Viewing the Energy Economy Status

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Energy Economy** → **EE Status**.
- 3 The Energy Economy status is displayed as:



- **Energy Economy Is Supported By System**
- **Energy Economy Is Currently Not Supported By System**

## Book On

This menu item allows you to edit RUA/RUI feature settings to automatically accept or reject book on requests.

### Related Links

[RUI](#) on page 97

[RUA/RUI](#) on page 104

## Editing Book On Settings

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Book on Setup**.
- 3 Select one of the following:
  - **Book on Accept** — Radio accepts all the book on requests.
  - **Book on Reject** — Radio rejects all the book on requests without any notification.

## Rotary Knob

This menu item allows you to set all the related functionality of the **ROTARY KNOB**.

## Setting Rotary Knob Mode

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Rotary Knob** → **Rotary Mode**.
- 3 Select one of the following:
  - **Dual** — Both modes are available. Turn the **ROTARY KNOB** to adjust the volume or press and then turn to switch to a different talkgroup.
  - **Volume** — The knob is used only as a volume control. Turn it clockwise to increase the audio volume level.
  - **Scroll** — The knob is used only to change the talkgroup, or in the menu to scroll menu items.



**Note:** If you choose **Scroll** and the display shows:

- **Scroll Selected** — To adjust volume level go to the main menu, select **Setup** → **Set Volume**.
- **Function Keys are set to Adjust Volume** — You can use your programmable **SIDE** buttons to adjust volume.



**Note:** The **ROTARY KNOB** and the **SIDE** buttons are paired. When the **ROTARY KNOB** mode is set to **Volume** or **Dual**, the **SIDE** buttons support the One-Touch Button feature.

### Related Links

[One-Touch Button Feature](#) on page 34

## Setting Rotary Lock

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Rotary Knob** → **Rotary Lock**.
- 3 Select one of the following:

- **Locked** — Locks ROTARY KNOB, you can unlock it by selecting **Unlocked** or by pressing and holding ROTARY KNOB.
- **Unlocked** — Unlocks the ROTARY KNOB.
- **Disabled** — Locking function is unavailable. Your ROTARY KNOB is unlocked all the time.

## Setting In Keypad Lock

**When and where to use:** To set behavior of the rotary knob when the keypad is locked.

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Setup** → **Rotary Knob** → **In Keypad Lock**.
- 3 Select one of the following:
  - **Lock None** — Scrolling and volume setting functionality is available.
  - **Lock Volume** — ROTARY KNOB can be only used for scrolling.
  - **Lock Scroll** — ROTARY KNOB can be only used for setting the volume.
  - **Lock Both** — Scrolling and volume setting functionality is unavailable.

## Setting Rotary Knob Wrap Around

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Setup** → **Rotary Knob** → **Wrap Around**.
- 3 Select one of the following:
  - **On** — Scrolling through the talkgroup list is looped or is moved to the next folder.
  - **Off** — Scrolling through the talkgroup list stops after reaching first or last talkgroup in the current selected folder.



**Note:** Only when **Wrap Around** is set to **On** and the **Scroll Range** is set to **Scroll To Next**, you are able to scroll through all the talkgroups and folders.

## Setting Rotary Knob Scroll Range

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Setup** → **Rotary Knob** → **Scroll Range**.
- 3 Select one of the following:
  - **Stay In Range** — Scrolling through the talkgroups in the current folder only.
  - **Scroll To Next** — Scrolling through all the talkgroups and folders.



**Note:** Only when **Wrap Around** is set to **On** and the **Scroll Range** is set to **Scroll To Next**, you are able to scroll through all the talkgroups and folders.

## Setting Rotary Knob Talkgroup Selection

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Setup** → **Rotary Knob** → **Confirm TG Sel.**
- 3 Select one of the following:
  - **On** — You need to confirm the talkgroup selection by pressing **Select** or pressing the PTT button to immediately start a call on a new talkgroup.

- **Off** — Attaches to the selected talkgroup without any additional prompt

## Setting Rotary Knob Function Keys

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Setup** → **Rotary Knob** → **Function Keys**.
- 3 Select one of the following:
  - **Auto** — Sets the **SIDE** buttons according to the **Rotary Mode**.



**Note:** If the **Rotary Mode** is set to:

- **Dual or Volume** — Display shows **Auto Selected (OTB)**, volume can be set only through **ROTARY KNOB**.
- **Scroll** — Display shows **Auto Selected (Volume)**, volume can be set only through **SIDE** buttons.
- **Volume Adjust.** — Sets the **SIDE** buttons to adjust volume level.
- **OTB Feature** — Sets the **SIDE** buttons to the predefined One-Touch Button features.

## Group Setup

---

This sub-menu allows you to set the scanning and my groups folder.

### Scan

This menu item allows you to activate/deactivate scanning, view the active scan list, and edit the scan lists. This feature is available only for the TMO Mode. Your radio joins any group call as long as this group is defined in the scan list and scan is turned on.

#### Related Links

[Activating Talkgroup Scanning](#) on page 33

## Activating Talkgroup Scanning

**When and where to use:** If you want to monitor any TMO Group Call in the defined talkgroup list.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Group Setup** → **Scan** → **Scanning**.
- 3 Select **Select List** and then a list name.

Your radio displays list name **Selected**.

- 4 Select **Scanning** → **On**.

Your radio is scanning on the predefined scan list.

#### Related Links

[Scan](#) on page 91

## Setting Talkgroups in the Active Scan List

**When and where to use:** If you want to edit talkgroups in the active scan list.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Group Setup** → **Scan** → **Active List**.



**Note:** If **Scanning is Off** is displayed, go to **More . . .** → **Group Setup** → **Scan** → **Scanning** → **On** to enable scanning.

- 3 Select **View** and highlight the required talkgroup.
- 4 Press **MENU**.
- 5 Select one of the following:
  - **Delete** — Erases this group from the active scan list.
  - **Priority** and select new priority to **Low**, **Medium** or **High**.

## Setting Scan Lists

**When and where to use:** If you want to set up any scan list.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Group Setup** → **Scan** → **Scan Lists**.
- 3 Highlight required scan list and press **MENU** to see additional settings:
  - **Rename** — Enters new name for that scan list.
  - **Capacity** — Displays the number of assigned and unassigned talkgroups for the scan list.
  - **Clear** — Deletes all the talkgroup assigned to that scan list.
  - **Add Group** — Adds a talkgroup to the scan list. Select one talkgroup from your talkgroup folders and assign appropriate priority.
  - **Edit** — Changes the priority of the required talkgroup or deletes it.

## Deleting Talkgroups from Scan Lists

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Group Setup** → **Scan** → **Scan Lists**.
- 3 Highlight the required scan list and press **MENU** → **Edit**.
- 4 Highlight the required talkgroup and press **MENU** → **Delete**.

## My Groups

**My Groups** is equivalent to **Favorites** (next section). Both menu items contain shortcuts to favorite talkgroups and contact numbers, as well as allow to perform the same operations. For a detailed description of the feature, please refer to **Favorites**.

## Favorites

---

**Favorites** contains shortcuts to frequently used talkgroups and contact numbers that are organized in favorite folders.

To quickly access favorite folders, from the home screen press the up **NAVIGATION** key. To scroll through items inside favorite folders, you can either use the **NAVIGATION** keys or the **ROTARY KNOB**.

## Favorite Folders

Favorite talkgroups and contact numbers are stored in favorite folders. The folders are common for all types of talkgroups and contact numbers, which means that in one folder you can have items available in different modes. Additionally, to indicate the type of each item, the radio displays a small icon next to it.

By default the radio has one favorite folder that can store up to 128 favorite items. However, you can create two additional folders inside **Favorites** and give them meaningful names reflecting their content.

If **Favorites** contains only one favorite folder and it is empty, the only operations you can perform are adding an item to the folder, renaming the folder, and creating a new folder.

## Favorite Talkgroups

You can add any talkgroup programmed in the radio to **Favorites**. The radio adjusts the mode it is in according to the currently selected favorite talkgroup. For example, if the radio is in DMO and you select a TMO talkgroup, the radio switches to TMO, and vice versa.

Scrolling through favorite talkgroups during an ongoing group call does not terminate the call. Also deleting a currently selected talkgroup from **Favorites** during an ongoing call does not lead to the call termination.

If before powering off the last selected talkgroup was a talkgroup from **Favorites**, the radio:

- On powering up in DMO attaches to the last selected favorite DMO talkgroup.
- On powering up in TMO attaches to the last selected favorite TMO talkgroup.

To make a call on a favorite talkgroup, use the standard procedures for group calls described in this document.

## Favorite Contact Numbers

You can add any contact number from **Contacts** to **Favorites**. In case of contacts containing more than one contact number, you need to use the right or left NAVIGATION key to specify which particular contact number to add. There are no limitations regarding adding single contact numbers assigned to one contact – you can add all contact numbers as separate entries. Removing a single contact number from **Contacts** automatically removes it from **Favorites**. Similarly, removing a contact from **Contacts** automatically removes all the related contact numbers from **Favorites**.

It is impossible to make a call to a favorite contact number during emergency operations.

## Making Private Calls to Favorite Contact Numbers

### Procedure:

- 1 To select a contact number you want to call, from the home screen do one of the following:
  - Press the right or left NAVIGATION key.
  - Go to **Optns** → **TG by Folder**, select the required favorite folder, and highlight the contact number.
- 2 When you are in the following mode:
  - a TMO — For a simplex call, press and release the PTT button. You hear a ringing tone. Otherwise, press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen. For a duplex call, press and release SEND key. You hear a ringing tone.
  - b DMO — Only simplex call is available. Press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen.
- 3 To end the call, press the END key.

## Adding Folders to Favorites

**Prerequisites:** **Favorites** contains less than three favorite folders.

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **More . . .** → **Favorites**.
- 3 Select **[New Folder]**.
- 4 Enter a name and select **Ok**.

## Adding Contact Numbers to Favorites

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Contacts**
- 3 Highlight a contact that you want to add to **Favorites** and using the left or right **NAVIGATION** key select the required number.
- 4 Press the **MENU** key and select **Add to Favorites**.
- 5 Select a folder you want to add the contact number to and press **Select**.

## Adding Talkgroups to Favorites

### Prerequisites:

To add a DMO talkgroup, ensure that the radio is in DMO.

To add a TMO talkgroup, ensure that the radio is in TMO.

### Procedure:

- 1 From the home screen, press the **Optns** key.
- 2 Select one of the following:
  - **TG by Folder** – contains talkgroups arranged by folders.
  - **TG by abc** – contains talkgroups arranged alphabetically.
- 3 Find and highlight a talkgroup that you want to add to **Favorites**.
- 4 Press the **MENU** key and select **Add to Favorites**.
- 5 Select a folder you want to add the talkgroup to and press **Select**.

### Related Links

[Entering DMO Mode](#) on page 48

## Managing Folders in Favorites

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Favorites**.
- 3 Highlight a required folder.
- 4 Press the **MENU** key.
- 5 Select one of the following:
  - **Rename Folder** – changes the name of the folder. Enter a new folder name and press **Ok**.
  - **Delete Folder** – removes the selected folder from **Favorites**. Press **Yes** to confirm deletion.



**Note:** You cannot delete the last favorite folder or a folder that contains at least one non-erasable item.

## Deleting Items from Favorites Folder

**When and where to use:** To delete a single contact number or a talkgroup from a favorite folder.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Favorites**.
- 3 Select a folder containing the item you want to remove.
- 4 Highlight the item and select **Delete**. Press **Yes** to confirm deletion.

## Deleting All Items from Favorite Folders

**When and where to use:** To delete all contact numbers and talkgroups stored in a favorite folder.

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Favorites**.
- 3 Select a required folder.
- 4 Press the **MENU** key and select **Delete All**. Press **Yes** to confirm deletion.

## My Info

---

This sub-menu allows you to view your own private, phone, and radio info.

## Viewing and Modifying Personal Information

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **My Info**.
- 3 Select one of the following:
  - **My Private Num** – displays your radio private number.
  - **My Phone Num** – displays your radio phone number.



**Note:** To modify the displayed phone number, select **Edit**. Type the number and press **Ok**.

- **Radio Info** – displays radio information: manufacturer, product type, ISSI, TEI, Serial Number, and OPTA.



**Note:** OPTA information is optional.

## Recent Calls

---

You can view the history of all calls:

- **Dialed** — calls you initiated.
- **Received** — calls you answered.
- **Missed** — calls you received but not answered or rejected.

Each list of calls may contain up to 50 numbers, the most recent call being at the top of the list. If the number of a recent call is stored in the contact list, the name associated with the number appears in the recent calls list. A number dialed more than once, appears only once in the list.

## Viewing Recent Calls

**Procedure:**

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Recent Calls**.
- 3 Select one of the following:
  - **Dialed**
  - **Received**

- **Missed**
- 4 Select a required call from the list.
  - 5 Press the **MENU** key.
  - 6 Select **View**.



**Suggestion:** Press down **NAVIGATION** key to bypass first two steps.



**Note:** Call time information is only available if the time and date are set in the radio. Call duration is not available in the missed calls list.

## Calling from Recent Calls

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Recent Calls**.
- 3 Select one of the following:
  - **Dialed** (from the home screen press **SEND** key to access **Dialed Calls** list)
  - **Received**
  - **Missed**



**Note:** From the home screen press down **NAVIGATION** key, to access **Recent Calls** menu item.

- 4 Highlight the required call and press the **PTT** button for private calls or press the **SEND** key to make a phone call.



**Note:** Phone calls are only available in **TMO** Mode.

## Storing Recent Calls to Contacts

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Recent Calls**.
- 3 Select **Dialed**, **Received** or **Missed**.
- 4 Press **Store**.



**Note:** If **Store** is not assigned to the left **SOFT** key, the number is already stored in your contact list.

- 5 To store the number as a new entry, select **[New Contact]**. Or, to store the number to an existing entry, select the entry, and press **View** then select **Edit**.
- 6 With the contact type field highlighted, scroll left or right to display the contact type you want to assign the number.
- 7 Select **Done**.

## Deleting Recent Calls

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Recent Calls**.
- 3 Select **Dialed**, **Received** or **Missed**.
- 4 Press **MENU** on the required call.
- 5 Select **Delete**.





**Note:** To erase all the calls, select **Delete All**.

## RUI

---

This menu item allows you to log in/out to the radio.

### Related Links

[RUA/RUI](#) on page 104

[Book On](#) on page 89

## Logging On

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **RUI** → **Log on**.
- 3 Highlight:
  - **User ID** and press **Select** to enter **User ID List**. If you are a new user on this radio, select **[New User ID]** and enter your user ID. Otherwise select your user ID from the list.
  - Second line and press **Edit**, to enter user ID and press **Ok**.
- 4 Select **User PIN**, enter your credentials, and press **Ok**.
- 5 Logging screen is displayed.

## Logging Off

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **RUI** → **Log off**.
- 3 Press **Accept**.

## Networks

---

This menu item allows you to switch between the radio operation modes.

### Related Links

[Entering TMO / DMO Mode](#) on page 31

[Selecting Network Operation Mode](#) on page 97

## Selecting Network Operation Mode

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Networks**.
- 3 Select one of the following:
  - **Networks Sel** — Selects the network to which the radio is allowed to register.
  - **Trunked Mode** — Switches to the mode using infrastructure.
  - **Direct Mode** — Switches to the mode without using infrastructure.
  - **TXI Mode** — Select **Activate** to stop sending any radio transmission.



**Note:** If the radio is in **TXI Mode**, it is not possible to switch from **Direct Mode** to **Trunked Mode**.

### Related Links

[Entering TMO / DMO Mode](#) on page 31

[Networks](#) on page 97

## Selecting Your Network

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Networks** → **Networks Sel** → **Home Only**.
- 3 Your radio registers to the home network. If several home networks are defined, the radio registers to the first available network on the list.

## Using the Select Net Registration

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Networks** → **Networks Sel** → **Select Net**.
- 3 Select the required network from the list.

Your radio registers to the selected network.

## Using the Foreign Network Registration

**When and where to use:** Use this feature to migrate to another predefined network, when you are out of the range of your network and your radio displays the **No Service** message.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Networks** → **Networks Sel** → **Foreign Nets**.

## Using Any Network

**When and where to use:** Your radio has lost its home network coverage and can register to any network. Only clear authentication is supported on any network.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Networks** → **Networks Sel** → **Any Network**.
- 3 Your radio selects and registers to the network automatically from the predefined list.

## Using the Migrate To Registration

**When and where to use:** Use this feature to migrate to another predefined network, when you are out of the range of your network and your radio displays the **No Service** message.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Networks** → **Networks Sel** and choose one of the following option:
  - **Migrate to...** — Selects the required network form the list. To view the network ID press **MENU** key then press **Select**.
  - **Auto** — Your radio automatically attaches to the predefined network.

## Location

---

See the GPS Location Service for more information.

### Related Links

[GPS Location Service](#) on page 59

## Viewing Your Position

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Location** → **Position**.
- 3 Scroll to view the results about the last time your location was calculated.



**Note:** To refresh your position:

- Select **Position** — the radio refreshes its position automatically
- Press **Refresh**

## Changing GPS Accuracy

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Location** → **Accuracy**.
- 3 Select one of the following:
  - **Medium** (default) — Power consumption optimization is combined with less position accuracy.
  - **High** — Better position accuracy is combined with less power consumption optimization.



**Note:** If connected to an external charging device, the radio automatically enters the **High** mode.

## Packet Data

---

The Packet Data (PD) Service allows you to transfer data in a TETRA system using the Internet Protocol (IP).



**Note:** To transfer data from a standard computer over the air, connect the computer via the data cable PMKN4025 with your radio. Your service provider has to setup additional applications on your computer.

If set up by your service provider it is possible to accelerate the transmission by using the Multi-Slot Packet Data (MSPD) Service.



**Note:** This is a selling feature.

## Viewing Data Statistics

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Packet Data**.



**Note:** Data services are only available in TMO Mode. The data option must be set to **Voice & Data** or **Data Only**.

3 Select one of the following:

- **Sent Data** — the number of KBs sent and throughput since current Packet Data activation is displayed.
- **Received Data** — the number of KBs received and throughput since current Packet Data activation is displayed.
- **Bandwidth** — active data session percentage is shown.
- **Failed Transfer** — the percentage of failed sent/received packets.



**Note:** N.A. — standby packet data session.

## Viewing Encryption Status

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **More . . .** → **Packet Data** → **Encryption**.
- 3 The encryption state of the ongoing packet data session is displayed:
  - **Packet Data Channel Clear**
  - **Packet Data Channel Encrypted**
  - **EncryptionN/A** (clear)

# Chapter 6

## Features

### Private Call

---

The Private Call, also called point-to-point, or individual call, enables calling between two individuals. No other radio can hear the conversation. This call type can be carried out in two ways:

- Duplex call (if the system allows), in TMO Mode. Both parties can speak at the same time.
- Simplex call, in TMO or DMO Mode. Only one party can speak at a time.

When a DMO Private Call takes place, radios not involved in this call receive the channel busy indication. The radios are identified using its radio numbers.

#### Related Links

[Emergency Individual Calls \(Private or MS-ISDN\)](#) on page 54

### Making Private Calls

#### Procedure:

- 1 From the home screen, enter a number.
- 2 If **Private** is not the first type of call presented, press **Ctype** repeatedly to select it.
- 3 When you are in the following mode:
  - a TMO — For simplex calls, press and release the PTT button. You hear a ringing tone. Otherwise, press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen. For duplex calls, press and release the **SEND** key. You hear a ringing tone.
  - b DMO — Only simplex calls are available. Press and hold the PTT button. Wait for the talk permit tone before talking, and release the PTT button to listen.
- 4 To end the call, press the **END** key.

### Radio Messaging System (RMS)

---

The Radio Messaging System (RMS) feature enables radio to receive and send RMS messages through the TETRA network using the Short Data Service.

There are two types of RMS messages:

- RMS Status – a predefined code that is sent bidirectionally between the radio and the service provider. The radio can have up to ten statuses that are assigned to numeric keys from 0 to 9. The latest received or sent RMS status is kept on the home screen until the next power cycle. A received RMS status is displayed in blue color font on the home screen.

RMS Free Text – a unidirectional message containing free text that is sent to the radio by the service provider. Since this type of message is longer, the radio displays only its beginning on the home screen and to read its

remaining part, you need to go to **Menu** → **Messages** → **RMS Box**. The latest RMS free text is kept on the home screen until the next power cycle.

RMS free text messages and incoming and outgoing RMS statuses (with the exception of RMS statuses sent) are stored in the **RMS Box**. Its capacity is maximum ten entries for incoming and outgoing RMS messages. If the **RMS Box** is full, any new incoming or outgoing RMS message overwrites the oldest message (received or sent).





The radio receives and sends RMS messages only from and to the numbers predefined by your service provider.



**Note:** This is a selling feature.

## RMS Icons

**Table 19: RMS Icons**

Icon	Description
	RMS Status Received Indicates a new RMS status message just arrived.
	RMS Status Sent
	RMS Box Read Message
	RMS Box Unread Message

## Sending an RMS Status

**Prerequisites:** Your service provider enabled this feature and the radio is in the RMS mode.

**When and where to use:** To send a predefined RMS status using numeric keys.

**Procedure:**

- 1 Press and hold a required key. If you press the key for too short, the radio initiates a Private/Phone/PABX call.

## One-Touch Dial

This feature allows you to call by pressing and holding one of the keys (1-9).



**Note:** If the One-Touch Button feature is enabled, One-Touch Dial is disabled. If no feature is assigned to a button, your radio displays an **Unassigned Button** message.

## Talkgroup Dialing by Index

This feature allows you to attach to any talkgroup by dialing its index, instead of choosing it from the talkgroup folders and lists.



**Note:** It is also known as Talkgroup Speed Dial.

## Viewing the Talkgroup Speed Number

### Procedure:

- 1 From the home screen, press **Optns**.
- 2 Select one of the following:
  - **TG by Folder** then select the folder and highlight the required talkgroup.
  - **TG by abc** enter up to 15 characters to narrow the talkgroup names and highlight the required talkgroup.
- 3 Press **MENU** → **View**.

### Example:

Radio displays **SpeedNum1\***, which means that this talkgroup speed number is 1.

## Selecting Talkgroups by Index

### Procedure:

- 1 From the home screen, enter talkgroup speed number and \*.
- 2 Press **Attach**.



**Suggestion:** To start a group call, press the PTT button.

## Phone and PABX Calls

---

The Phone Call allows you to call a landline telephone number or a cellular mobile phone number. The Private Automatic Branch Exchange (PABX) Call allows you to call local (office) extension numbers.

## Making Phone or PABX Calls

### Procedure:

- 1 From the home screen, enter the number.
- 2 If **Phone** or **PABX** are not the first type of call presented, press **Ctype** repeatedly to select it.
- 3 Press **SEND** key.

## Phone/PABX Speed Dial

---

This feature allows you to dial Phone/PABX by a shortened number of up to three digits instead of the full number. The Phone/PABX **Speed #** number is assigned when the dialed number is added in the contact list.



**Note:** This feature is available only in TMO Mode.

## Using the Phone/PABX Speed Dial

### Procedure:

- 1 From the home screen, enter the predefined Phone/PABX speed dial number and # key.
- 2 Press **SEND** key.

## DTMF Overdial

---

This feature allows you to communicate with an automated answering device (for example, the voice mail or answering machine) during an on-going private, phone or PABX call.

While in an on-going private, phone or PABX call, press the DTMF keys (0-9, \*, #). When pressed, the DTMF key sounds a tone and the entered digit is displayed on the screen.

## Short Number Dial

---

This feature allows you to dial part of the full number of the person you wish to call. Your radio automatically completes the number.

Your radio number is 4282564.

- 1 Dial 564 (instead of 4282564, the full number).
- 2 To place the call, press the PTT button or the SEND key.

## RUA/RUI

---

Radio User Assignment (RUA) and Radio User Identity (RUI) enables authentication service. Only the successful logon on any temporary radio, provides the full access and your permanent radio functionality, so you can be still reached with your permanent number. A logon failure results in limited service.

You can differentiate the RUA/RUI state by the interface color:

- Blue — you are logged on
- Gray — you are logged off

### Radio States

- Full Service — user logon was successful. Your radio has full functionality.
- Limited Service — user not logged on. Specified by the service provider.
- Pseudo Log On — occurs only in the Local Site Trunking (LST). Your radio has full functionality available (depending on the service provider settings) except some services like forwarding calls. The RUI Pseudo Log On icon is displayed.

### Book On

Your service provider assigns particular radio to one person for a predefined period of time. You are only going to see the screen with your login and the full service is granted.

### Force Off

Your service provider can log you off. Radio displays **Force Off**.



**Note:** This is a selling feature.

### Related Links

[RUI](#) on page 97

[Book On](#) on page 89



## WAP

---

Wireless Application Protocol (WAP) is a standard for application layer network communications in a wireless communication environment such as TETRA network. The protocol is used to access the mobile web from a radio through a WAP browser.



**Note:** This is a selling feature.

### Related Links

[WAP Box](#) on page 69

[WAP Push](#) on page 112

## WAP Browser

The Openwave Mobile Browser is a WAP-compliant user agent. The WAP browser provides all of the basic services of a computer-based web browser. Whenever any preemptive display interrupts the browser session, the browser needs manual reactivating to return. The WAP browser does not support right-to-left languages (as Arabic and Hebrew); English is used instead. For the content in these languages, the characters are not displayed.



**Note:** Depending on the radio configuration and the network conditions, the WAP browser may not display images properly (or may display them with a delay).

## Entering the Browser

**Prerequisites:** From the home screen, press the **MENU** key. Set **Setup** → **Data Setup** to **Data Only** or **Voice & Data**.

### Procedure:

- 1 From the home screen, press the **MENU** key.
- 2 Select **Browser**.
- 3 Optional: Exit the browser by pressing and holding the **END** key.

## Entering Browser Menu Panes

**Prerequisites:** You are in the browser.

### Procedure:

- 1 Press **Menu** or **MENU** key.
- 2 Usually, it brings up the **Navigate** pane, or the last browser menu pane.



**Note:** If the web page you navigated to has two or more soft keys/options, the **Options** pane pops up. From here, you may scroll to other panes with the left or right navigation keys Or you may select **Browser Menu** and then scroll to the required pane.

## Tips for Browsing

Create and use the following for easy browsing.

## Creating Bookmarks through the Navigate Pane

### Procedure:

- 1 Enter the browser and browse to the required page.
- 2 Press **Menu** to enter the browser menu.
- 3 Select **Mark Page**.

- 4 The screen displays the title and URL of the marked page.
- 5 To save it:
  - a Press **Save** (or **Select**) to save the page in bookmarks.
  - b Select **Menu** and select an option:
    - **Save** — Confirms the bookmark creation.
    - **Edit** — Allows you to edit the title, folder, choice, and URL of the created bookmark.

## Creating Bookmarks through the Bookmarks Pane

### Procedure:

- 1 Enter the browser.
- 2 Scroll to **Bookmarks** pane.
- 3 Select **Organise** (if there are no saved bookmarks), or **More...**
- 4 Select **Menu**.
- 5 Scroll to **New Bookmark**.
- 6 Enter the bookmark title and URL, and select its location.
- 7 Press **Save**.

## Using Bookmarks

### Procedure:

- 1 Enter the browser.
- 2 Scroll to **Bookmarks** pane.
- 3 Scroll to the required bookmark and select **Go**. The bookmark downloads the selected page from the web.

## Creating Hotkeys

### Procedure:

- 1 Enter the browser.
- 2 Scroll to **Bookmarks** pane.
- 3 Scroll to the required bookmark.
- 4 Press **MENU**. Select **Hotkeys**.
- 5 Select an unassigned key (0–9).
- 6 Click **Assign**. The display shows the bookmark and its assigned hotkey.

## Using Hotkeys

### Procedure:

- 1 Enter the browser.
- 2 Press and hold a hotkey to download the corresponding bookmarked page from the web.

## Saving Pages

**When and where to use:** Save a page for off-line browsing.

### Procedure:

- 1 Enter the browser and browse to the required page.
- 2 Press **Menu**.
- 3 Scroll to **Tools** pane.
- 4 Select **Save Page**. Edit the proposed page title if required. Scroll down and select **Save**. The page will be saved in the **Bookmarks Saved Pages** folder.

## Selecting Saved Pages

### Procedure:

- 1 Enter the browser.
- 2 Scroll to **Bookmarks** pane.
- 3 Select **Organise** (if there are no saved bookmarks), or **More...**
- 4 Select **Go** to enter the Saved Pages folder.
- 5 Select a saved page and press **Ok**. The display shows the saved page. Depending on the saved page, you may browse the web from here.

## Disabled Packet Data Service

If there is no Packet Data Service, your radio displays **Error:No Network Available** when entering the browser for the first time. Select left **SOFT** key to retry entering, or right **SOFT** key to enter the browser menu.

When re-entering the browser with previously available Packet Data, the radio displays the last browsed page, or the last page to which you navigated off-line.

## Disabled Browser Entry

Browser entry is disabled:

- During any type of voice call, except Ambience Listening Call
- In DMO Mode
- During Emergency Mode
- During PIN lock
- Service provider has not configured this feature
- When the radio is disabled



### Note:

- Browser entry is enabled during Ambience Listening (AL) Call. If you navigate to previously stored pages, the AL state remains.
- When you activate Packet Data for the first time, AL is disconnected, and you have the same look and feel as if you were not in AL before.

## Keys Usage

When the browser is active, the following usage described occurs inside or outside the editor.

**Table 20: Browser Keys Usage**

Key Press	Action
0–9 key	In the editor: enters a digit and/or character depending on the text entry mode selected. Outside the editor: in a numbered list, selects the required item list.
0–9 key (hold)	In the editor: standard use. Outside the editor: hotkey for navigating to the numbered bookmark.
* key (press or hold)	In the editor, inserts a space.

*Table continued...*

Key Press	Action
# key (press or hold)	Brings up the Text Input pane, while in editor. Otherwise, sounds a wrong key press.
Left or right SOFT key	Selects the option that appears in the display directly above the left and right soft key (part of the page).
Up NAVIGATION key	While in list of options, moves up one line.
Up NAVIGATION key (hold)	Moves up on page.
Down NAVIGATION key	While in list of options, moves down one line.
Down NAVIGATION key (hold)	Moves down on page.
Left NAVIGATION key	Moves to the previous pane. In the editor: moves left.
Left NAVIGATION key (hold)	Functions as backward.
Right NAVIGATION key	Moves to the next pane. In the editor: moves cursor to the right and inserts space if at the end of the word.
Right NAVIGATION key (hold)	Functions as forward.
Center of NAVIGATION keys (hold)	Auto-repeat.
MENU key	Brings up the browser menu.
END key	Press to deactivate the browser.
SEND key	Disabled in browser active state.
ROTARY KNOB	Used for volume adjustment only.
EMERGENCY button	Deactivates the browser. The radio enters Emergency Mode.

## Browser Menu Panes Overview

The browser menu includes the following panes:

**Table 21: Browser Menu Panes**

Menu Pane	Description
Navigate	Provides access to the home page and commonly used items.
Bookmarks	Provides access, editing, and storage options to stored bookmarks and saved pages.
History	Provides access to recently visited pages and shows the position of the currently loaded page in the history stack.
Tools	Provides access to applications and utilities.

The following panes are displayed according to the context:

**Table 22: Additional Menu Panes**

Menu Pane	Description
Options	Displayed only when there are additional options for the pane or page.
Image	Displayed only when an image is selected. Provides access to image details, storage, and display use.
Input Text	Displayed only in text entry mode. Provides access to text entry mode (for example: symbol).

## Navigate Pane

You can select one of the following items:

- **Home** — for loading the home page.
- **Open Page** — for entering the URL.
- **Search** — item disabled.
- **Mark Page** — for creating (saving) a bookmark for the current document. A title and URL for the bookmark are displayed, and the root folder is chosen for the location.
- **Forward** — for navigating to the document located one step forward in the navigation history. If there is no forward history, this item is disabled.
- **Reload** — for reloading the current document.
- **Advanced...** — see following section.

## Advanced...

From the Navigation pane select **Advanced...** to see the following options:

- **Settings...**
  - **Downloads** — for setting download preferences. You may deactivate the downloading of images and objects. The browser displays a special icon instead of the images and objects.
  - **Scroll Mode** — for setting the scrolling mode and speed.
  - **Key Press Timeout** — for setting key press time-out. This time-out is used for text entry.
  - **Set Proxy** — select the WAP Proxy (1, 2, 3). The browser connects to the web via the selected proxy or gateway. The network provider installs and configures the proxy. To establish a secure session, select a secure proxy. Please ask your service provider which proxy is configured for a secure session. Though you can choose your home page, the service provider may decide to force its own home page on your terminal.
  - **Circuit Prompt** — for turning on/off the circuit prompt.
  - **Resend Data Prompt** — for turning on/off the data re-send prompt.
- **Security...**
  - **Secure Prompt** — for enabling/disabling the browser to inform you that it replaced a non-secure connection with a secure connection, and the other way around.
  - **Current Certificate** — for viewing the digital certificate identifying the server that delivers the current document. A Certificate Authority (CA) digitally signs and thus authenticates this certificate. Up to ten additional custom WTLS certificates can be added to the default list of certificates installed. Please ask your service provider if you wish to have these custom WTLS certificates added.
  - **CA Certificates** — for viewing the digital certificates installed in the browser and digitally signed by Certificate Authorities (CA).
  - **Send Referrer** — for turning ON/OFF sending of the HTTP Referrer header as part of HTTP requests. The Referrer header provides the URL of the link source to the server.
  - **Authentication** — for turning ON/OFF the caching of HTTP Authentication credentials. HTTP Authentication protects access to content on the server. If you try to access a protected content, you enter your credentials (user name or password).

- **Clear...** — for clearing of browser data: history, cache cookies, or auto-fill.
- **Restart Browser** — for restarting the browser.
- **About...** — for showing the information about the current version of Openwave Mobile Browser.

## Bookmarks Pane

If there are bookmarks in the root folder, select **More...** to access the Options pane. If the root folder is empty, select **Organise...** then press **MENU** key to access the Options pane. The Options pane allows you to manage bookmarks. The **Saved Pages** folder contains snapshots of saved pages.

## Working with the Options Pane for Selected Bookmarks

### Procedure:

- 1 From the Bookmarks pane select **More...**
- 2 Scroll to a bookmark.
- 3 Press **MENU** to open the Options pane for that bookmark.
- 4 Select one of the following:
  - **Back** — for displaying the page associated with the bookmark (page is downloaded if not available in cache).
  - **Details** — for modifying the bookmark title and URL.
  - **Delete** — for deleting the bookmark.
  - **New Bookmark** — for creating a new bookmark.
  - **New Folder** — for creating a new folder.
  - **Move** — for moving this bookmark to a new folder (or in Bookmarks).
  - **Delete All** — for deleting all bookmarks.
  - **Hotkeys** — for assigning hotkeys to available bookmarks.

## Working with the Saved Pages Folder

### Procedure:

- 1 From the Bookmarks pane select **Saved Pages** folder.
- 2 The browser displays the page (snapshot) saved using Save Page in Tools pane.
- 3 Scroll to a saved page.
- 4 Press **Menu** to open the Options pane for the saved page.
- 5 Select one of the following:
  - a **Back** — for displaying this page saved on its cache.
  - b **Details** — for modifying the page title and URL of the saved page.
  - c **Update Page** — for replacing the saved version with the current version (to be downloaded from server).
  - d **Delete** — for deleting this page from its cache.
  - e **Delete All** — for deleting all the saved pages from its cache.
  - f **Cancel** — for exiting this pane and returning to the last page displayed.

## History Pane

This pane displays the list of recently visited pages (up to nine history entries can be listed). Each history entry shows its title, if present. Otherwise, **No Title** is displayed.

## Navigating to Recently Visited URLs

### Procedure:

- 1 Select the URL.
- 2 Press **Ok**.

## Tools Pane

### Procedure:

- 1 From the Tools pane select **More...**
- 2 Scroll to a document.
- 3 Select **MENU** key to open the Options pane for that document.
- 4 Select one of the following:
  - **Show URL** — For displaying the current page URL.
  - **Save Page** — For creating a snapshot for the current document.
  - **Find Text** — For finding a text string in the current document.
  - **Copy Text** — For copying text from the current document to the clipboard.

## Options Pane

This pane is specific to the page or pane being displayed.

## Image Pane

This pane appears in the browser menu when you enabled the download of images through Navigate pane > **Advanced...** > **Settings...** .

The following items are available:

- **Save** — for saving the image in the terminal.
- **[Send]** — for sending the image to the destination of your choice.
- **Reload** — for reloading the image.
- **Details** — for displaying the image details.
- **Show Image** — for showing the image on its own page.

## Text Input Pane

**Prerequisites:** This pane is visible when the browser menu is opened and text entry field is active.

**When and where to use:** To input the text for the URL.

### Procedure:

- 1 Select the URL.
- 2 Press **abc**.

The text input pane opens up.

- 3 Select **www**.
- 4 Scroll the required extension (for example: **.com**).
- 5 Press **.com**. The screen displays the URL with the selected extension.

**Table 23: Browser Text Input Icons**

Mode	Soft Key	Action
Alphabetic characters - lower case	<b>abc</b>	Enter text in lowercase.
Alphabetic characters - upper case	<b>ABC</b>	Enter text in uppercase.
Numeric	<b>123</b>	Enter numbers and symbols.
http mode	<b>www</b>	Enter

## WAP Push

WAP push allows WAP content to be pushed to a radio. This push is carried out by sending a specially formatted (Push Access Protocol) XML document to the Push Proxy Gateway, that in turn forwards the document to the radio.

A WAP push message is an encoded message including a link to a WAP address. On receiving a WAP push, a WAP enabled radio automatically gives the option to access the WAP content. The implemented WAP push is compliant to WAP 2.0 standard.

The radio supports WAP 2.0 through a proxy only. Proxy-less connections are not supported.

This is a selling feature.

### Related Links

[WAP Box](#) on page 69

[WAP](#) on page 105

## New WAP Messages

Types of the WAP Messages and their priorities:



**Note:** Your service provider sets the priority of the message.

- Push Message
  - High — animation and the icon (blinking) are displayed with the New WAP Message tone.
  - Medium — animation and the icon are displayed with the New WAP Message tone.
  - Low — icon is displayed with the New WAP Message tone.
  - Delete — available only if you are in WAP Box, the text **WAP Message deleted remotely** is displayed, otherwise there is no indication.



**Note:** Animation is not displayed if you are in a call, or in Emergency Mode, or in Call Out, or in message editor, or PIN lock state, or switching to DMO.

- Load Push Message
  - High — browser opens to the user with the New WAP Message tone.
  - Low — the icon is displayed with the New WAP Message tone.



**Note:** Browser does not open if you are in a call, or in Emergency Mode, or in Call Out, or in message editor, or PIN lock state, or switching to DMO.

## Viewing WAP Messages

### Procedure:

- 1 From the home screen, press the MENU key.
- 2 Select **Messages** → **WAP Box**.
- 3 Select the required message.
- 4 Select **Go to** to view the message in the browser.

## Call-Out

---

This feature allows you to receive Call-Out alerts. On receiving the Call-Out messages, the radio interrupts current services and attends to the Call-Out alert without any further delay. After call-out alert has been cleared, the radio exits Call-Out mode and reverts to normal mode. During Call-Out mode you are only able to receive Emergency Calls.





**Note:** To read an entire Call-Out message, scroll down the screen by pressing the down NAVIGATION key. The length of the message is indicated by the vertical red bar on the left of the screen.

**Figure 3: Call-Out Message**



**Note:** This is a selling feature.

### Related Links

[CO Box](#) on page 69

## Types of Call-Out Alerts

There are four types of the Call-Out alerts:

- Normal Call-Out – an alert message that is sent by a dispatcher either to a single radio or to a group of radios.
- Storm Plan – an alert message that is sent by a dispatcher to a group of radios. To raise its reliability, it is sent several times. You are not able to respond to the Call-Out alert and any key press takes you to the information phase.
- Fallback Mode – an alert message that is limited only to voice communication. To initiate this type of Call-Out, press a One-Touch key predefined by your service provider. It can be cleared manually.



**Note:** Fallback is only possible when the radio is in Local Site Trunking.

- Test Call-Out – a special Call-Out alert that is sent by the dispatcher to test this feature. On receiving the Test Call-Out, the radio plays a tone and displays **Test Call-Out**. To respond and clear the alert, press the **Test OKSOFT** key.

## Call-Out Modes Interaction

Call-Out feature operation is different in other modes:

- TXI Mode — you can read the message but you cannot respond to it. You have an option to leave the TXI Mode by pressing soft key or reject the Call-Out message.
- DMO Mode — Call-Out is not supported.
- Emergency Mode — all Call-out alerts are ignored.

## Call-Out Service Phases

In the Call-Out mode there are following phases:

- Alerting phase — receives a Call-Out message. The alarm tone indicates the message. Text is displayed and you have following options to use: **Accept**, **Reject** or MENU. If you accept the alert, no other service from this point can interrupt.



**Note:** You can stop the alert tone by pressing PTT or any of the soft keys.

- Information phase — you are still in the Call-Out mode and you can receive more detailed information about the incident that occurred through subsequent text or the voice message. You can query for more information using

voice group call or Call-Out text function which enables you to send a text message. You can always respond and send back the text or the voice message using voice group call.

## Shadow Groups (Address Bundle)

---

The Shadow Groups feature (also known as Address Bundle) offers a way of sending messages to multiple destinations or recipients simultaneously. Three types of messages are supported by the feature:

- Status messages (including Emergency Alarms)
- GPS LIP (TETRA Location Information Protocol) reports
- RMS/FMS messages

### Shadow Groups in TMO

Each Shadow Group may contain up to four target addresses. Each talkgroup may be configured to send status messages, GPS LIP reports, or RMS/FMS messages to a specific Shadow Group.

### Shadow Groups in DMO

In DMO, the Shadow Group contains one target address. Each talkgroup may be configured to send status messages or GPS LIP reports to a specific Shadow Group.

Each radio can store up to 255 Shadow Groups (both in TMO and DMO).

The Shadow Groups feature may affect Emergency Calls setup time to be slightly elongated.



**Note:** This is a selling feature and needs to be enabled by your service provider.

# Appendix A

## Tones

**Table 24: Radio Tones**









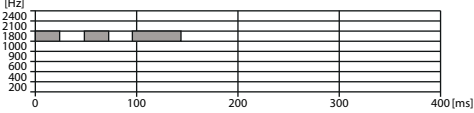
Tone Name	Default Tone Diagram
Back to Coverage Back to Full Service	
Clear-to-send	
Bad Key Pressed	
From Out-of-Service to In Service	
In Emergency	
Talk Permit	
<ul style="list-style-type: none"> <li>• Talk prohibit</li> <li>• System busy</li> <li>• Time-out timer expire</li> <li>• Called radio not available or busy</li> </ul>	
Call Disconnected or Failed Due to Network	


Table continued...

**Tone Name** **Default Tone Diagram**


Toggling Between DMO and TMO

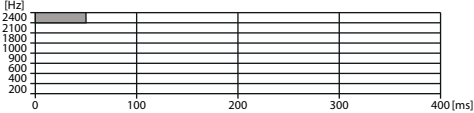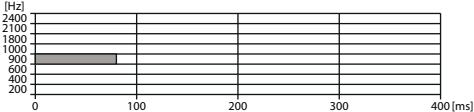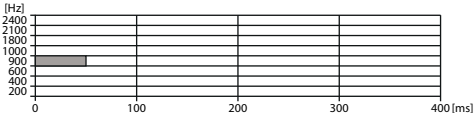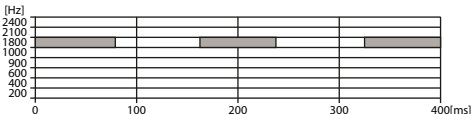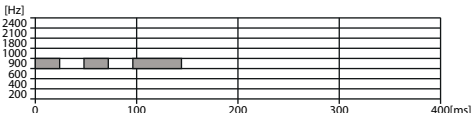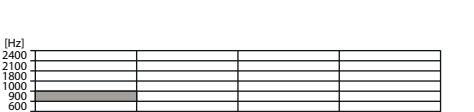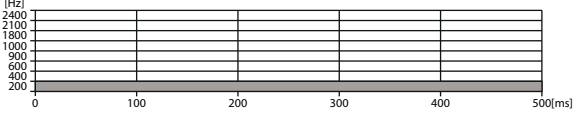


Entering/Exiting Local Site Trunking

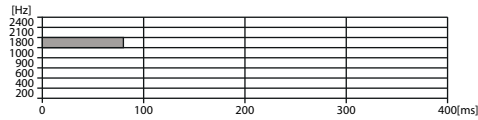


Receiving/Sending Emergency Alarm




Emergency Alarm Failed

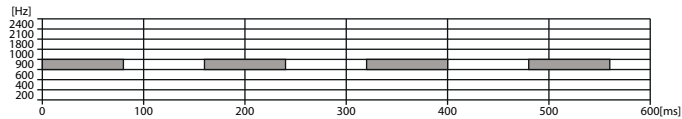


Entering Emergency

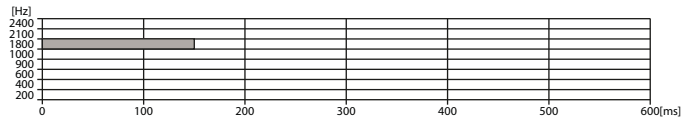

Exiting Emergency




Entering/Exiting TXI

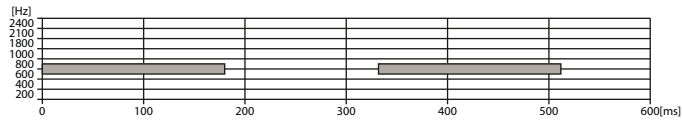

Low Battery Alert



Remote Control

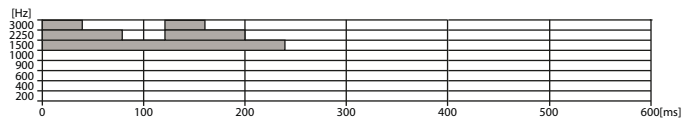

**Note:** All the audible indications can be disabled by your service provider.

# Appendix

# B

## LED Indications

**Table 25: LED Indications**

Indication	Status
Solid green	In use
Blinking green	In service
Solid red	Out of service
Blinking red	Connecting to the network Entering DMO
Solid orange	Transmit inhibit in service Channel busy in DMO
Blinking orange	Incoming call
No indication	Idle Radio powered down



# Appendix

## C

### Troubleshooting

Your radio displays the following messages:

**Table 26: Displayed Messages**

Message	Message Description
...-Received	Call received but not answered, or rejected.
Attachment Failed	Your radio could not perform talkgroup attachment. It keeps on trying. If it does not succeed, try another talkgroup.
Authenticate Failure	Your radio could not register on an authenticated system (for example, the Authentication Key is incorrect, or authentication is disabled).
Battery level too low.	The battery charge level is too low to perform the required operation.
Call Cancelled	You have canceled the call.
Call Ended	<ul style="list-style-type: none"><li>Faulty channel. Please try later.</li><li>You have ended the call.</li></ul>
Call Forwarding	The radio you are trying to call is not available and the call is being forwarded to another radio.
Call Modified	The call you are participating in has been modified.
Call Preempted	Channel being used for priority.
Decryption Failed:	An error occurred while decrypting a message or call.
Emergency In Use Wait For Mic	The Hot Microphone feature is active, but the channel transmit grant has been given to another Emergency call on the same talkgroup. Your radio microphone is not active during this time, but it automatically tries to regain talk permit after a predetermined time.
Emgcy Mic Ended	The Hot Microphone timer automatically expired, or you pressed the PTT button to cancel the Hot Microphone feature.
Emergency Mic On	The Hot Microphone feature is active, and your radio is automatically transmitting hands free emergency audio.
Empty Entry	The speed number you dialed does not exist, or the number exists but the group is non-selectable.
Faulty Unit Error	Self-test failed. An operational fault has been detected with your radio. Record the error number. Turn your radio off and contact service.
Gateway available	Your radio has connected to a gateway.

*Table continued...*

Message	Message Description
<b>Gateway not available</b>	Your radio cannot connect to a gateway, or connection has been lost.
<b>This group already exists</b>	The group you are attempting to add exists in the <b>My Groups</b> folder.
<b>Individual Calls Only</b>	You can make only individual (private) calls.
<b>Insufficient visible data</b>	Your radio is in the process of determining your location. This process may take several minutes to complete.
<b>Insufficient visible satellites</b>	Your radio is in the process of determining your location. This process may take several minutes to complete.
<b>Invalid ID</b>	The entered number is not valid.
<b>Invalid Shortcut Position</b>	The entered number is not valid.
<b>Limited Service</b>	Emergency Calls, Emergency Alarms, and mobility operations (for example group attachment) are allowed. All other incoming and outgoing call and data services are blocked.
<b>List Empty</b>	There are no programmed entries in the scrolling list. Type the entry.
<b>List Not Attached</b>	All talkgroups in the scan list are not attached.
<b>List Partially Attached</b>	The scan list is active, but not all talkgroups are attached to it.
<b>Message Delivered</b>	Indicates mail successfully delivered.
<b>Message Failed</b>	Indicates mail delivery failure.
<b>New Delivery Status</b>	You have received a new Delivery Status.
<b>No Service</b>	Your radio is outside coverage. Return to coverage.
<b>Not allowed in repeater mode</b>	The service or feature is not available in the Repeater Mode..
<b>My Groups Is Empty</b>	You cannot view/delete groups when the <b>My Groups</b> folder is empty.
<b>My Groups Is Full</b>	You are not allowed to add a group to the <b>My Groups</b> folder as it already contains the maximum allowed number of groups.
<b>Network Trouble</b>	Network problems. Please try again later.
<b>No Answer</b>	The called party does not answer.
<b>No Entries</b>	This message is displayed when accessing an empty list.
<b>No Group</b>	<ul style="list-style-type: none"> <li>Attachment failed. Your radio detached from current talkgroup. Please wait until it attaches again to the current talkgroup.</li> <li>Displayed when you are out of the normal coverage area of your selected talkgroup. Please select a new talkgroup that is valid for your working location.</li> <li>Indicates a favorite group was removed from the <b>My Groups</b> folder.</li> </ul>
<b>No List</b>	The network list is empty.
<b>No New or Old Messages</b>	Indicates there are no new or old messages in the <b>Inbox</b> .

*Table continued...*



Message	Message Description
<b>No Selected Scan List</b>	You selected an empty network list.
<b>No Service</b>	Your radio is out of coverage.
<b>Not Allowed To Initiate Call</b>	You are not allowed to dial a number which is not in the address book.
<b>Not Allowed To Transmit</b>	Release the PTT button and try again later. You are not allowed to send a text message or a status message to a number which is not in the address book.
<b>Single TalkGroup Only</b>	There is only one programmed entry in the scrolling list.
<b>Overheating, Please Turn Radio Off</b>	Your radio turns off. Keep it turned off for 5 minutes.
<b>Party Busy</b>	Called radio is busy.
<b>Party Not Available</b>	Called radio is out-of-range or turned off. Please try again later.
<b>Please Try Again</b>	You could not call.
<b>Please Wait Connecting</b>	A message during startup.
<b>Registration Failure</b>	Your radio could not register within the system. Please try again later.
<b>Repeater available</b>	Your radio has connected to a repeater.
<b>Repeater not available</b>	Your radio cannot connect to a repeater, or connection has been lost.
<b>Service Denied</b>	Invalid number. Call your service provider.
<b>Service Not Available</b>	This service is not available on the current network.
<b>Service Restricted</b>	This service or feature is restricted by your service provider, it has not been purchased, or it is not available.
<b>TalkGrp ... cannot be deleted</b>	Your service provider set this group so you cannot delete it from the favorite talkgroup folder.
<b>Try Again Later</b>	The requested service is temporarily unavailable.
<b>Radio Disabled</b>	Check with your service provider.
<b>Unit is OK Warn:</b>	Self-test error. A minor fault has been detected. Your radio is still fully operative. If this error recur, note the error code and contact service.
<b>Unit Not Attached</b>	You radio could not attach to the system. The talkgroup may not be defined in the system. Please try another group.
<b>Unassigned Button</b>	The message is displayed when no feature is assigned to a button.



# Appendix

## D

### Maintenance



**Suggestion:**

- Before using your radio for the first time, remove the plastic lens protector from the display, and charge the battery until the LED green light appears.
- Battery charging must occur only in non-hazardous areas.
- Clean the connector frequently and before the programming procedure for example, with a soft brush (do not use fluids).

### Storage

---

- Do not store the battery where the temperatures exceed +65 °C or fall below -20 °C.
- New Lithium-Ion batteries may be stored in ventilated, cool and dry areas with some capacity loss in the life cycle.
- It is not recommended to store the batteries when they are fully charged or discharged.

### Extending Battery Life

---

A battery is an expendable part and may need replacing during the life of the radio. To ensure maximum service life of your radio, always replace the battery with a genuine Motorola replacement. In order to ensure maximum life for your battery:

- Do not charge it unless necessary (low battery indication).
- Charge it until full charge indication is on.

### Battery Charging Temperature

---

When the battery is fitted to the radio, it charges within the temperature range of 0 °C to 45 °C. When the battery is charged separately (without the radio), the temperature range of battery operation is from 0 °C to +45 °C in charger mode, and from -10 °C to +60 °C in discharge mode.

If, during charging, the temperature is out of range, the battery might not be fully charged since the charging is temporarily stopped until the temperature becomes suitable.

## Battery Charging Rules

---

Generally, to reduce the number of charge cycles as much as you can, wait for the **Low Battery** message to charge, as it ensures maximum battery life. Do not use your charger as a radio holder or leave your radio and fully charged battery connected to the charger while not charging. Continuous charging shortens the battery life.

## Additional Battery Warnings/Cautions

---

- Battery storage above 60 °C and below -20 °C is not recommended.
- To prevent injury, do not allow metal objects to touch the battery contacts.
- Do not disassemble.
- Do not throw in fire.
- Do not dispose of battery in household waste.

## Looking after Your Radio

---

Never leave your radio or battery in extreme temperatures (over 60 °C), for example, behind a windscreen in direct sunlight.

Do not immerse your radio in water.

To clean your radio, use a moistened or antistatic cloth.