

**CLS SERIES CHARGERS
HCTN4002
PMPN4528A**


Safety Instructions Leaflet



MN007288A01-AB



PMPN4528A

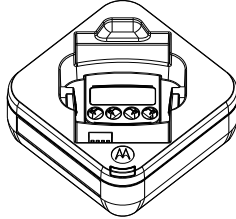

Note: In any way. Take it to a qualified Motorola Solutions service representative.

- Do not disassemble the charger. It is not repairable and replacement parts are not available.
- Disassembly of the charger may result in risk of electric shock or fire.
- To reduce risk of electric shock, unplug the charger from the AC outlet before attempting any maintenance or cleaning.
- To reduce risk of injury, charge only the rechargeable Motorola Solutions Authorized Batteries listed in Online User Manual. Other batteries may explode, causing personal injury and damage.
- Use of accessories not recommended by Motorola Solutions may result in risk of fire, electric shock, or injury.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2020 Motorola Solutions, Inc. All rights reserved. Printed In

en-US

IMPORTANT SAFETY INSTRUCTIONS

This document contains important safety and operating instructions. Please read these instructions carefully and save them for future reference. Before using the battery charger, read all the instructions and cautionary markings on (1) the charger and (2) the battery.


- Ensure the area behind the mounting surface is always free of electrical wires, cables, and pipes before cutting, drilling, or installing the mounting screws.
- Do not install the product where the weight cannot be supported. If the strength of the location where the wall mount is installed is not strong enough, it can fall off and cause an injury.
- Do not install on a structure that is prone to vibration, movement, or chance of impact.

OPERATIONAL SAFETY GUIDELINES

- Turn off the radio when charging the battery.
- Connect the charger/power supply to a nearby and easily accessible power outlet.

harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

HCTN4002

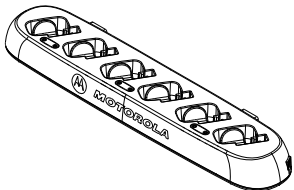

WARNING

- To reduce risk of damage to the power cords, pull the plug rather than the cord when disconnecting from the AC outlet or the charger.
- An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in risk of fire and electric shock. If an extension cord must be used, make sure that the cord size is 18 AWG for lengths of up to 6.5 feet (2.0 m), and 16 AWG for lengths up to 9.8 feet (3.0 m).
- To reduce risk of fire, electric shock, or injury, do not operate the charger if it has been broken or

- This equipment is not suitable for outdoor use. Use only in dry locations and conditions.
- Maximum ambient temperature around the charger must not exceed 40 °C (104 °F).
- Connect the charger only to an appropriate power supply listed in the Online User Guide.
- Make sure the power cord is located where it will not be stepped on, tripped over, or subjected to water, damage, or stress.
- Connect the power cord only to an appropriately fused and wired AC outlet with the correct voltage, as specified on the product.
- Disconnect from line voltage by removing the power cord from the AC outlet.

ADDITIONAL INFORMATION

The complete Online User Guide is available at <https://www.motorolasolutions.com> through publication part number:
MN006468A01 – CLS Single-Unit Charger/CLS Multi-Unit Charger

INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

Ce document contient d'importantes directives relatives à la sécurité et au fonctionnement de l'appareil. Veuillez lire attentivement cette notice et la conserver pour vous y référer ultérieurement.

Avant d'utiliser le chargeur de batterie, lisez toutes les directives et les marquages d'avertissement sur (1) le chargeur et (2) la batterie.



WARNING

• Afin de réduire la possibilité d'endommager les cordons d'alimentation, tirez sur la prise et non sur le cordon au moment de le débrancher de la prise c.a. ou du chargeur.

- Il n'est pas recommandé d'utiliser une rallonge, sauf en cas de nécessité absolue. L'utilisation d'une rallonge inappropriée pourrait causer un risque d'incendie et de décharge électrique. Si une rallonge doit être utilisée, assurez-vous que le format du cordon est de calibre 18 lorsque sa longueur est de 2,0 m (6,5 pieds) ou moins et

chargeur de la prise c.a. avant de procéder à une maintenance ou à un nettoyage.

- Pour réduire les risques de blessure, ne chargez que les batteries rechargeables agréées Motorola Solutions apparaissant dans le guide d'utilisation en ligne. Les batteries non agréées pourraient exploser et causer des blessures corporelles et d'autres dommages.
- L'utilisation d'accessoires non recommandés par Motorola Solutions pourrait occasionner des risques d'incendie, de décharge électrique ou de blessure.

DIRECTIVES D'UTILISATION SÉCURITAIRE

- Éteignez la radio lorsque vous chargez la batterie.
- Branchez le chargeur/bloc d'alimentation sur une prise murale située à proximité et facilement accessible.
- Cet équipement n'est pas conçu pour une utilisation à l'extérieur. Ne l'utilisez que dans des emplacements secs et sous des conditions sans risque d'humidité.
- La température ambiante maximale autour du chargeur ne doit pas dépasser 40 °C (104 °F).

de calibre 16 lorsque sa longueur est de 3,0 m (9,8 pieds) ou moins.

- Pour réduire le risque d'incendie, de décharge électrique ou de blessure, n'utilisez pas le chargeur s'il est brisé ou endommagé de quelque manière que ce soit. Portez-le chez un représentant de service Motorola Solutions.
- Ne désassemblez pas le chargeur. Il ne peut pas être réparé et aucune pièce de rechange n'est disponible. Le désassemblage du chargeur pourrait occasionner des risques de décharge électrique ou d'incendie.
- Pour réduire les risques de décharge électrique, débranchez l'alimentation du

REMARQUE :

Cet équipement a fait l'objet de tests et a été déclaré conforme aux limites établies pour un appareil numérique de classe B, conformément à la section 15 des règlements de la FCC. Ces limites sont fixées afin d'offrir une protection suffisante contre des interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie de radiofréquence et, s'il n'est pas installé ou utilisé conformément aux instructions, il peut provoquer un brouillage nuisible aux communications radio. Cependant, il est impos-

sible de garantir qu'il n'y aura aucune interférence dans une installation particulière. Si cet appareil cause une interférence nuisible à la réception de la radio ou de la télévision, ce qui peut être déterminé en éteignant et en allumant l'appareil, vous êtes encouragés à remédier à la situation en prenant une ou plusieurs des mesures suivantes :

- Réorienter ou déplacer l'antenne réceptrice.
- Augmenter la distance entre l'équipement et le récepteur.

RENSEIGNEMENTS COMPLÉMENTAIRES

Le guide d'utilisation complet est disponible à l'adresse <https://www.motorolasolutions.com> sous le numéro de publication :

MN006468A01 – Chargeur individuel CLS/ Chargeur multi-unités CLS

NOTES

NOTES

-Brancher l'appareil dans une autre prise sur un circuit différent de celui du récepteur.
-Consulter un revendeur ou un technicien de radio ou de télévision chevronné pour obtenir de l'aide.