


Mag One M34i Digital Two-Way Radio Quick Reference Guide

This Quick Reference Guide covers the basic operation of the radio. Check with your dealer or system administrator because your radio may have been customized for your specific needs.

For more operational details and information on warnings and safety, refer to the refer to the *MN010451A01 Mag One M34i Digital Two-Way Radio User Guide* at <https://learning.motorolasolutions.com>.

Radio Overview

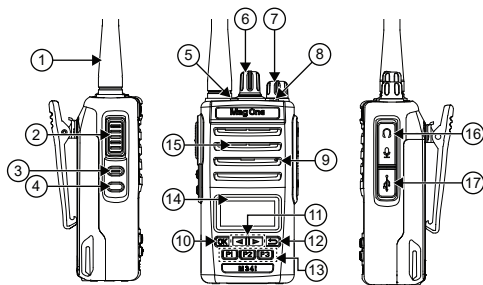

No	Description
1	Antenna
2	PTT Button
3	Side Key 1 (SK1)
4	Side Key 2 (SK2)

No	Description
5	Top Key Button (TK)
6	Channel Selector Knob
7	On/Off/Volume Control Knob
8	LED Indicator
9	Microphone
10	Menu Button
11	Navigation Button
12	Back Button
13	Programmable Buttons
14	Display
15	Speaker
16	Audio Accessory Connector
17	USB-C Connector

Programmable Buttons

Programmable buttons allow you to activate a preprogrammed function through the **Top Key (TK)**, **Side Key (SK1)**, or **Side Key (SK2)**. Your dealer programs the programmable buttons as shortcuts to radio functions.

Getting Started

Attaching the Antenna

Set the antenna in the receptacle and turn clockwise.



NOTE: It is not recommended to operate the radio without the antenna.

Attaching the Battery

1. Align the battery with the rails on the back of the radio.
2. Press the battery firmly and slide upwards till the latch snaps into place.

Removing the Battery

1. Turn the radio off.
2. Slide the battery latch into unlock position.
3. Remove the battery from the slot at the bottom of the radio.

Charging the Battery

If you are charging the radio with a battery, turn the radio off.

1. Charge the battery by using the desktop charger.
2. Insert the battery or the radio with a battery into the charging dock.
The red LED illuminates.

Attaching the Belt Clip

Screw the belt clip provided with the radio into the screw holes.

Removing the Belt Clip

To detach the belt clip, remove the two screws from the screw holes.

Turning the Radio On and Off

Rotate the **On/Off/Volume Control** knob clockwise or counterclockwise until a click sounds.

Adjusting the Volume

Turn the **On/Off/Volume Control** knob clockwise to increase the volume, or counterclockwise to decrease the volume.

Connecting a Headset

1. Remove the accessory connector cover.
2. Plug the headset into the accessory connector on the radio.

Transmitting and Receiving Calls

1. Select the desired channel by toggling the **Channel Selector** knob.
2. Press and hold the **PTT** button, then start talking into the microphone.
3. Release the **PTT** button to listen.

Regulatory Compliance Information

The radio transmitting equipment type approval code is indicated on the equipment label.

Trademark

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.

© 2024 Motorola Solutions, Inc.

All rights reserved.



MN010522A01-AA

Printed in




Mag One M34i 디지털 양방향 무전기 빠른 참조 설명서

이 빠른 참조 설명서는 무전기의 기본 작동 방법을 다룹니다. 무전기를 특정 요구에 맞게 사용자 정의했을 수 있으므로 대리점이나 시스템 관리자에게 문의하십시오.

자세한 작동 정보와 경고 및 안전에 대한 자세한 내용은 <https://learning.motorolasolutions.com>의 MN010451A01 Mag One M34i 디지털 양방향 무전기 사용 설명서를 참조하십시오.

무전기 개요

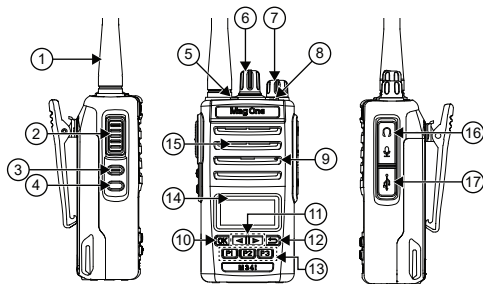

번호	설명
1	안테나
2	PTT 버튼
3	측면 키 1(SK1)
4	측면 키 2(SK2)

번호	설명
5	상단 키 버튼(TK)
6	채널 선택 노브
7	켜기/끄기/볼륨 조절 노브
8	LED 표시등
9	마이크
10	메뉴 버튼
11	탐색 버튼
12	뒤로 버튼
13	프로그래밍 가능 버튼
14	디스플레이
15	스피커
16	오디오 액세서리 커넥터
17	USB-C 커넥터


프로그래밍 가능 버튼

프로그래밍 가능 버튼을 사용하면 **상단 키(TK)**, **측면 키(SK1)** 또는 **측면 키(SK2)**를 통해 미리 프로그래밍된 기능을 활성화할 수 있습니다. 대리점에서는 프로그래밍 가능 버튼을 무전기 기능의 바로 가기로 프로그래밍합니다.

시작하기

안테나 장착

소켓에 안테나를 삽입하고 시계 방향으로 돌립니다.

 **참고:** 안테나 없이 무전기를 작동하지 않는 것이 좋습니다.

배터리 장착

1. 배터리를 무전기 뒤쪽의 레일에 맞춥니다.
2. 배터리를 꼭 누르고, 고정쇠가 끼워질 때까지 배터리를 위로 밀니다.

배터리 분리

1. 무전기를 끄십시오.
2. 배터리 고정쇠를 잠금 해제 위치로 밀니다.
3. 배터리를 무전기 하단에 있는 슬롯에서 분리합니다.

배터리 충전

배터리로 무전기를 충전하는 경우 무전기를 끕니다.

1. 탁상용 충전기를 사용하여 배터리를 충전합니다.
2. 충전 독에 배터리 또는 배터리가 장착된 무전기를 삽입합니다.
빨간색 LED가 켜집니다.

벨트 클립 장착

무전기와 함께 제공된 벨트 클립을 나사 구멍에 끼웁니다.

벨트 클립 제거

벨트 클립을 분리하려면 나사 구멍에서 나사 2개를 분리합니다.

무전기 켜기 및 끄기

딸깍 소리가 날 때까지 **켜기/끄기/볼륨 조절** 노브를 시계 방향 또는 반 시계 방향으로 돌립니다.

볼륨 조절

켜기/끄기/볼륨 조절 노브를 시계 방향으로 돌려 볼륨을 높이거나 반 시계 방향으로 돌려 볼륨을 줄입니다.

헤드셋 연결

1. 액세서리 커넥터 덮개를 분리합니다.
2. 헤드셋을 무전기의 액세서리 커넥터에 연결합니다.

호출 송신 및 수신

1. **채널 선택** 노브를 전환하여 원하는 채널을 선택합니다.
2. **PTT** 버튼을 길게 누른 다음 마이크에 대고 말하기 시작합니다.
3. 상대방의 말을 들으려면 **PTT** 버튼을 놓습니다.

규정 준수 정보

무선 송신 장비 유형 승인 코드는 장비 라벨에 표시되어 있습니다.

상표

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.

© 2024 Motorola Solutions, Inc.

All rights reserved.



MN010522A01-AA

인쇄:

