

Xi10 QUICK START GUIDE

en-US ja-JP



MN003384A01-AB

This document is copyright protected. Duplications for the purpose of the use of Motorola products are permitted to an appropriate extent. Duplications for other purposes, changes, additions or other processing of this document are not permitted. Only this electronically-saved document is considered to be the original. Duplications are considered merely copies. Motorola Solutions, Inc., and its subsidiaries and affiliates do not vouch for the correctness of such kinds of copies.


MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license.

The Bluetooth word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and are used under license. All other trademarks are the property of their respective owners. © 2016 Motorola Solutions, Inc. All rights reserved.



GETTING STARTED


CONNECTING TO THE RADIO

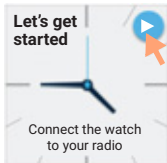

Important: Make your radio discoverable. Ensure that the Bluetooth® name, MSI SW, is included in the radio codeplug.

1. Press and hold the side power button to turn on the smart watch.
2. Tap the **Start** button at the **Let's get started** screen.
3. The smart watch scans for devices.
4. Tap your radio from the list of found devices.
5. The smart watch attempts connecting to the radio.
6. Tap the **Checkmark** button to confirm that the PIN codes match.
7. When the connection is successful, the smart watch displays a positive notification.
8. Swipe from left to right to dismiss the positive notification.


CONNECTING TO THE RADIO FROM THE HOME SCREEN

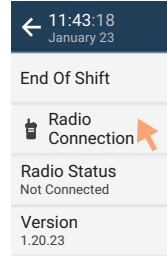


Important: Make your radio discoverable. Ensure that the Bluetooth name, MSI SW, is included in the radio codeplug.

1. Tap the **Settings** button at the Home screen.
2. Tap the **Radio Connection** button.
3. Tap the **Connect** button.
4. The smart watch scans for devices.
5. Tap your radio from the list of found devices.
6. The smart watch attempts connecting to the radio.
7. Tap the **Checkmark** button to confirm that the PIN codes match.
8. When the connection is successful, the smart watch displays a positive notification.
9. Swipe from left to right to dismiss the positive notification.


RECEIVING A PTT CALL

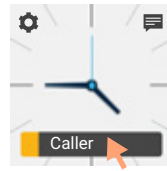


1. The Home screen displays the name of the caller, indicating an incoming Push-To-Talk (PTT) call.
2. Tap the name of the caller to enter the PTT screen.

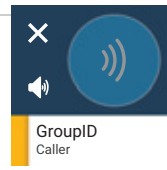

3. The PTT screen is displayed. When a call is received, the bar changes to yellow.

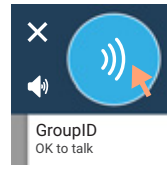


4. When the caller stops talking, the bar changes back to gray.
5. Press and hold the **PTT** button to talk.

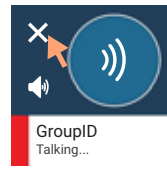


6. When you are pressing down the **PTT** button to talk, the bar changes to red.
7. Tap the **Close** button to close the screen.

CHANGING THE VOLUME LEVEL

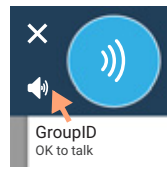

1. When in the PTT screen, tap the **Volume** button to change the volume.
2. The current volume level is highlighted.

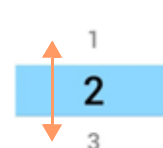


3. Scroll up or down to browse the volume levels.
4. Tap the desired value.

CHANGING THE RADIO TALKGROUP OR CHANNEL




1. Tap the talkgroup at the Home screen.
2. Tap the talkgroup at the PTT screen.
3. Select the talkgroup from the list.

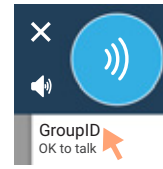

4. Tap the **Close** button to close the PTT screen.
5. The Home screen displays the new talkgroup.


RECEIVING AND QUICK REPLYING TO MESSAGES

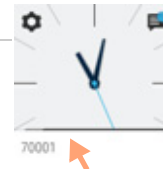


1. Tap the Message Notification at the Home screen to view the complete message.
2. Select a quick reply from the list.
3. The Message Notification at the Home screen is hidden.

Note: The Message Notification can be dismissed by swiping it from left to right.

RECEIVING AND REPLYING TO MESSAGES

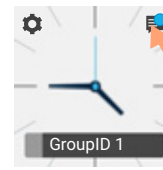


1. At the Home screen, the **Messages** button changes the state to indicate an unread message.
2. Tap the **Messages** button to view the conversation thread.
3. Tap the **Reply** button.

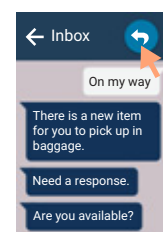


4. Select a quick reply from the list.
5. The selected reply is displayed in the conversation thread.
6. Tap the **Back** button to return to the Home screen.

CHECKING THE RADIO BATTERY STATUS

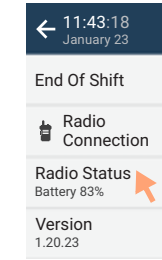


1. Tap the **Settings** button at the Home screen.
2. The radio battery status is displayed at the **Radio Status** button.
3. Tap the **Radio Status** button to view other statuses of the radio.

ENDING THE SHIFT

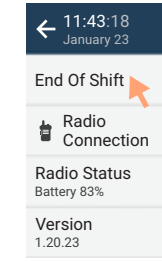

1. Tap the **Settings** button at the Home screen.
2. Tap the **End Of Shift** button.
3. Tap the **Proceed** button.
4. Wait for **Data cleared** and **Radio disconnected** to complete.
5. When **End Of Shift** is successful, the smart watch displays a positive notification.

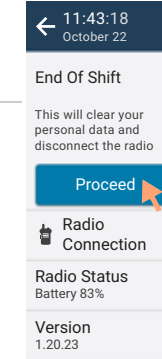

6. The display returns to the **Let's get started** screen.

ICONS

Icons and Descriptions			
Messages, normal state	Messages, unread state	Settings button	Radio, Connected state
Radio, Not connected state	Start button	Done button	PTT button
			-
Volume button	Reply button	Search again	-

Xi10 クイック スタート ガイド

en-US

ja-JP



MN003384A01-AB

本書は著作権で保護されています。Motorola 製品を使用する目的上での複製については、適切な範囲内に限り認められています。その他の目的で複製する場合、本書の変更、追加、その他プロセスでの使用は認められません。電子的に保存された本書のみがオリジナルとなります。複製した文書はコピーにすぎません。Motorola Solutions, Inc. およびその関連会社はこの種のコピーの正確性を保証しません。

MOTOROLA、MOTO、MOTOROLA SOLUTIONS および図案化された M ロゴは、Motorola Trademark Holdings, LLC の商標または登録商標であり、ライセンスの下に使用されています。

Bluetooth、ワードマークおよびロゴは、Bluetooth SIG, Inc. が所有する登録商標で、ライセンスに基づいて使用されています。その他すべての商標は、個々の商標権者に帰属します。

© 2016 Motorola Solutions, Inc.
All rights reserved.



最初のステップ

無線機への接続



重要：無線機を検出可能な状態にしてください。Bluetooth® 名 (MSI SW) が無線機コードプラグに含まれていることを確認してください。

1. スライド式の電源ボタンを押したままにして、スマートウォッチの電源をオンにします。
2. **それでは始めましょう**画面で **[スタート]** ボタンをタップします。
3. スマートウォッチがデバイスをスキャンします。
4. 見つかったデバイスのリストから無線機をタップします。
5. スマートウォッチが無線機に接続しようとしています。
6. **[チェックマーク]** ボタンをタップして、PIN コードと一致することを確認します。
7. 接続が成功すると、スマートウォッチにポジティブ通知が表示されます。
8. 左から右にスワイプすると、ポジティブ通知が解除されます。

ホーム画面からの無線機への接続




重要：無線機を検出可能な状態にしてください。Bluetooth 名 (MSI SW) が無線機コードプラグに含まれていることを確認してください。

1. ホーム画面で **[設定]** ボタンをタップします。
2. **[無線機との接続]** ボタンをタップします。
3. **[接続]** ボタンをタップします。
4. スマートウォッチがデバイスをスキャンします。
5. 見つかったデバイスのリストから無線機をタップします。
6. スマートウォッチが無線機に接続しようとしています。
7. **[チェックマーク]** ボタンをタップして、PIN コードと一致することを確認します。
8. 接続が成功すると、スマートウォッチにポジティブ通知が表示されます。
9. 左から右にスワイプすると、ポジティブ通知が解除されます。


PTT コールの受信



1. ホーム画面に、発信者名が表示されるプッシュアウトーク (PTT) コールが着信したことを示します。
2. 発信者の名前をタップして、PTT 画面に入ります。



3. PTT 画面が表示されます。着信に出ると、バーが黄色になります。



4. 発信者が通話を止めると、バーの色がグレーに戻ります。




5. 話すには、**[PTT]** ボタンを押し続けます。
6. 会話するために **[PTT]** ボタンを押し下げると、バーが赤くなります。
7. **[閉じる]** ボタンをタップすると画面が閉じます。

音量レベルの変更



1. PTT 画面で、**[音量]** ボタンをタップして音量を調整します。
2. 現在の音量レベルが強調表示されます。

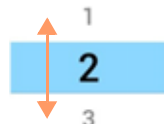


3. 上下にスクロールして、音量レベルを参照します。
4. 任意の値をタップします。

無線機のグループまたはチャンネルの変更



1. ホーム画面でグループをタップします。
2. PTT 画面でグループをタップします。
3. リストからグループを選択します。
4. **[閉じる]** ボタンをタップすると PTT 画面が閉じます。
5. ホーム画面に、新しいグループが表示されます。

メッセージの受信とクイック返信

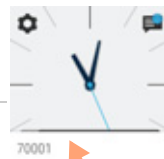


1. ホーム画面でメッセージ通知をタップして、メッセージ全文を表示します。
2. リストからクイック返信を選択します。
3. ホーム画面でメッセージ通知が表示になります。

注：メッセージ通知を解除するには、通知を左から右にスワイプします。

メッセージの受信および返信



1. ホーム画面で、**[メッセージ]** ボタンが未読のメッセージがあることを示すステータスに変わります。
2. **[メッセージ]** ボタンをタップして会話スレッドを表示します。
3. **[返信]** ボタンをタップします。
4. リストからクイック返信を選択します。
5. 選択した返信が会話スレッドに表示されます。
6. **[戻る]** ボタンをタップして、ホーム画面に戻ります。

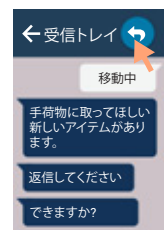

無線機のバッテリー状態の確認





1. ホーム画面で **[設定]** ボタンをタップします。
2. **[電波受信状況]** ボタンでバッテリー状態を確認します。
3. **[電波受信状況]** ボタンをタップして、無線機の状態を表示します。

シフトの終了



1. ホーム画面で **[設定]** ボタンをタップします。
2. **[シフトの終了]** ボタンをタップします。
3. **[続行]** ボタンをタップします。
4. **データのクリアと無線機の切断**が完了するまで待ちます。
5. **シフトの終了**が成功すると、スマートウォッチにポジティブ通知が表示されます。
6. ディスプレイがそれでは始めましょう画面に戻ります。

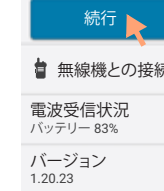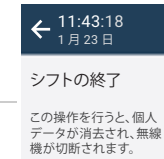

アイコン

アイコンと説明			
メッセージ、通常の状態	メッセージ、未読の状態	設定ボタン	無線機、接続状態
無線機、接続していない状態	スタートボタン	完了ボタン	PTT ボタン
			-
音量ボタン	返信ボタン	再検索	-