



MOTOROLA SOLUTIONS

MINITOR 7 Quick Reference Guide



en-US

fr-CA

OCTOBER 2023

© 2023 Motorola Solutions, Inc. All Rights Reserved.



MN009978A01-AA

Your Quick Reference Guide

This Quick Reference Guide covers the basic operation of your device.

For more operational details and information, refer to the *MN010351A01 MINITOR 7 User Guide* at <https://learning.motorolasolutions.com>.

Device Overview

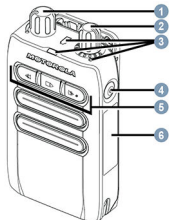



Table 1: Device Overview

No	Description
1	On/Off/Volume Control Knob
2	Function Switch
3	LED Indicators
4	Reset Button
5	Stored Voice Operation Controls
6	Identification Label Area

Attaching or Removing the Belt Clip


Attaching the Belt Clip

Align the rails on the clip to the grooves on the back of your device. Press downward until you hear a click.

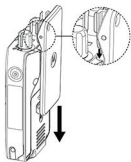

Removing the Belt Clip

To remove the clip, press and slide the belt clip latch upwards.

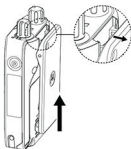

Attaching or Removing the Battery

For optimal performance, fully charge the lithium-ion battery pack before using.



IMPORTANT: To avoid damage and comply with warranty terms, charge the battery pack using a Motorola Solutions-approved charger. See the *MN010321A01 MINITOR 7 Standard Charger User Guide* and *MN010322A01 MINITOR 7 Amplifier Charger User Guide*.

Attaching the Battery


1. Press and hold the belt clip down.
2. Align the battery pack to the back of your device.
3. Slide the battery pack upwards to the maximum. Slide the latch to the locked position.

Removing the Battery

1. Press and hold the latch down. Slide the latch to the left to the unlocked position.



2. Press and hold the belt clip down. Slide the battery pack downwards.

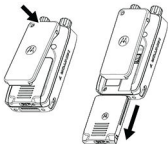

Turning the Device On or Off

Turning the Device On

Rotate the **On/Off/Volume Control Knob** clockwise until you hear a click.



When your device is turned on, you hear audible beeps, and the red and yellow LED blink simultaneously four times.



NOTE: Ensure that your battery is properly charged and attached. If your device fails to turn on after repeating a few times, contact your dealer.

Turning the Device Off

Rotate the **On/Off/Volume Control Knob** counterclockwise beyond the white volume level indicator until you hear a click.

Notes

Guide de référence rapide

Ce guide de référence rapide décrit le fonctionnement de base de votre appareil.

Pour plus de détails et de renseignements sur le fonctionnement, consultez le *Guide d'utilisation MN010351A01 MINITOR 7* à l'adresse <https://learning.motorolasolutions.com>.

Aperçu de l'appareil

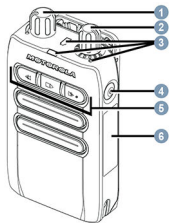



Tableau 1 : Aperçu de l'appareil

Non	Description
1	Bouton Marche/Arrêt/Volume
2	Interrupteur de fonction
3	Voyants à DEL
4	Bouton de réinitialisation
5	Commandes de la boîte vocale
6	Zone d'étiquette d'identification

Fixation ou retrait de la pince de ceinture


Fixation de la pince de ceinture

Alignez les rails de la pince sur les encoches à l'arrière de l'appareil. Appuyez vers le bas jusqu'à ce que vous entendiez un clic.

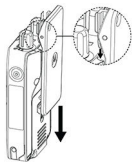

Retrait de la pince de ceinture

Pour retirer la pince, appuyez et faites glisser le loquet de la pince de ceinture vers le haut.

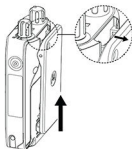

Installation et retrait de la batterie

Pour des performances optimales, chargez complètement la batterie au lithium-ion avant de l'utiliser.



IMPORTANT :

Pour éviter tout dommage et vous conformer aux conditions de la garantie, chargez la batterie au moyen d'un chargeur approuvé par Motorola Solutions. Reportez-vous au *Guide d'utilisation du chargeur standard MN010321A01 MINITOR 7* et au *Guide d'utilisation du chargeur amplificateur MN010322A01 MINITOR 7*.

Installation de la batterie

1. Appuyez sur la pince de ceinture et maintenez la pression.
2. Alignez la batterie à l'arrière de votre appareil.
3. Faites glisser la batterie vers le haut jusqu'au maximum. Faites glisser le loquet en position de verrouillage.

Retrait de la batterie

1. Tenez le loquet enfoncé. Faites glisser le loquet vers la gauche jusqu'à la position déverrouillée.



2. Appuyez sur la pince de ceinture et maintenez la pression. Faites glisser la batterie vers le bas.



Allumer et éteindre l'appareil

Allumer l'appareil

Tournez le **Bouton Marche/Arrêt/Volume** dans le sens horaire jusqu'à ce que vous entendiez un clic.



Lorsque votre appareil est allumé, vous entendez des bips et les voyants à DEL rouge et jaune clignotent simultanément quatre fois.



REMARQUE :

Assurez-vous que la batterie est correctement chargée et fixée. Si votre appareil ne s'allume pas après quelques reprises, contactez votre détaillant.

Éteindre l'appareil

Tournez le **Bouton Marche/Arrêt/Volume** dans le sens contraire des aiguilles d'une

montre au-delà de l'indicateur de volume blanc
jusqu'à ce que vous entendiez un clic.



MOTOROLA SOLUTIONS



MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2023 Motorola Solutions, Inc. All Rights Reserved.

Printed in