

## 2-Wire Surveillance Kit with Translucent Tube Earpiece PMLN8645 User Manual



MN010346A01-AA



MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.

© 2024 Motorola Solutions, Inc.  
All rights reserved.

Printed In

### Attention!

Before using this product, read the RF Energy Exposure and Product Safety Guide that ships with the radio which contains instructions for safe usage and RF energy awareness and control for compliance with applicable standards and regulation.

### Acoustic Safety

Exposure to loud noises from any source for extended periods of time may temporarily or permanently affect your hearing. The louder the radio volume, the less time is required before your hearing can be affected. Hearing damage from loud noise is sometimes undetectable at first and can have a cumulative effect. To protect your hearing:

- Use the lowest volume necessary to do your job.
- Turn up the volume only if you are in noisy surroundings.
- Turn down the volume before attaching headset or earpiece.
- Limit the amount of time you use headsets or earpieces at high volume.

- When using the radio without a headset or earpiece, do not place the radio speaker directly against your ear.

- If you experience hearing discomfort, ringing in your ears, or speech that is muffled, you should stop listening to your radio through your headset or earpiece, and have your hearing checked by your doctor.

To change the volume level, refer to Radio Product Safety Leaflet or CPS for Surveillance Kit Configurations.



Caution

### Operation

- Turn off the device while attaching and detaching the earpiece.

### Earpiece Overview

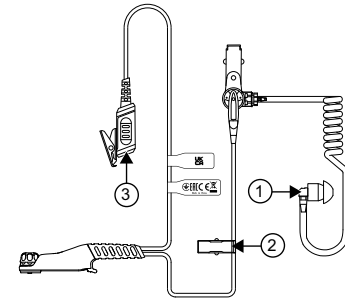


Table 1: Earpiece Overview and Description

Indicator	Description
1	Translucent Acoustic Tube (Replaceable)
2	Metal Clip
3	Push-to-Talk, Microphone and Programmable Button Module


### Recommended Practice

- Do not cover the microphone port for optimum performance.
- Do not fill the earpiece with water.
- Clean the earpiece with soft damp cloth.
- Do not use the earpiece until completely dry.





Caution


### Push-to-Talk, Microphone, and Programmable Button Module Overview and Description

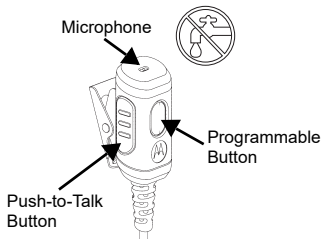


### Recommended Wearing Position

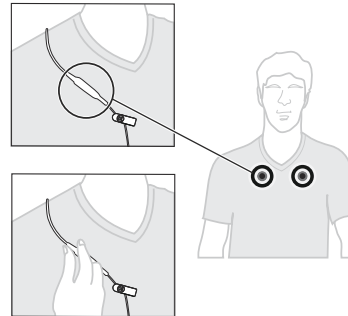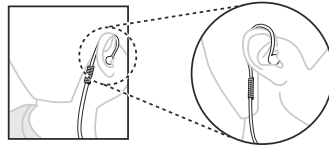

### Cable Management

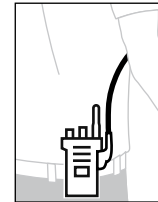

Recommended

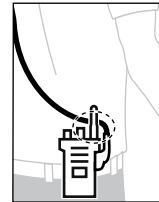

Not Recommended

To ensure optimum range and user experience, it is recommended to avoid crossing accessory cable with the radio antenna.

**Replaceable Parts****Table 2: Earpiece Replaceable Parts**

Part Number	Quantity per Pack	Description
PMLN8079_	10	Cloth Clip
RLN6242_	1	Acoustic Tube
RLN4760_	1	Right Earpiece (Size S)
RLN4761_	1	Right Earpiece (Size M)
RLN4762_	1	Right Earpiece (Size L)
RLN4763_	1	Left Earpiece (Size S)
RLN4764_	1	Left Earpiece (Size M)
RLN4765_	1	Left Earpiece (Size L)
RLN6511_	1	Ultra Earplugs (Size S)
RLN6512_	1	Ultra Earplugs (Size M)
RLN6513_	1	Ultra Earplugs (Size L)

**Warranty**

Motorola Solutions offers warranty for your accessory. Refer to your Motorola Solutions dealer or point-of-purchase for detailed information.

**NOTE:** Warranty is void after customer replacement of any parts other than replacement parts listed.

**For More Information**

Contact Motorola Authorized Dealer or visit us [www.motorolasolutions.com](http://www.motorolasolutions.com).

**Contact Address****EU Contact:**

Motorola Solutions, Czerwone Maki 82, 30-392 Krakow, Poland

**UK address:**

Motorola Solutions UK Ltd., Nova South, 160 Victoria Street, London, SW1E 5LB, United Kingdom.

**NOTES****NOTES****NOTES****NOTES****NOTES****NOTES**