

1-Wire xL Clear Tube Earpiece, PMLN8082



MN006608A01-AB

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.
© 2020 Motorola Solutions, Inc. All rights reserved.

Refer to manual MN006614A01 for other languages:
<https://learning.motorolasolutions.com/>



EU Contact: Motorola Solutions,
Czerwone Maki 82, 30-392 Krakow, Poland

Printed in



Caution

Recommended Practice

- Do not cover the microphone port for optimum performance.
- Do not fill the earpiece with water.

- Clean the earpiece with soft damp cloth.
- Do not use the earpiece until completely dry.

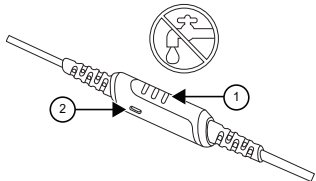


Table 1: Earpiece Module Overview and Description

Indicator	Description
1	Push-to-Talk Button
2	Microphone

Attention!


Before using this product, read the RF Energy Exposure and Product Safety Guide that ships with the radio which contains instructions for safe usage and RF energy awareness and control for compliance with applicable standards and regulation.

Acoustic Safety

Exposure to loud noises from any source for extended periods of time may temporarily or permanently affect your hearing. The louder the radio volume, the less time is required before your hearing can be affected. Hearing damage from loud noise is sometimes undetectable at first and can have a cumulative effect. To protect your hearing:

- Use the lowest volume necessary to do your job.
- Turn up the volume only if you are in noisy surroundings.

Recommended Wearing Position

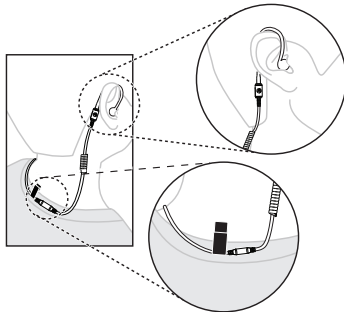

• Turn down the volume before attaching headset or earpiece.

- Limit the amount of time you use headsets or earpieces at high volume.
- When using the radio without a headset or earpiece, do not place the radio speaker directly against your ear.
- If you experience hearing discomfort, ringing in your ears, or speech that is muffled, you should stop listening to your radio through your headset or earpiece, and have your hearing checked by your doctor.

To change the volume level, refer to Radio Product Safety Leaflet or CPS for Surveillance Kit Configurations.




Caution


Operation

- Turn off the device while attaching and detaching the earpiece.


Earpiece Overview

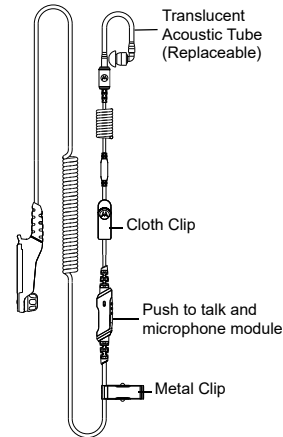

Cable Management

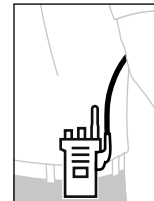


Recommended

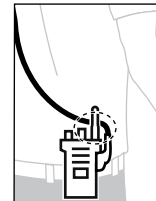

Not Recommended

To ensure optimum range and user experience, it is recommended to avoid crossing the accessory cable with the radio antenna.

Translucent Acoustic Tube Replacement

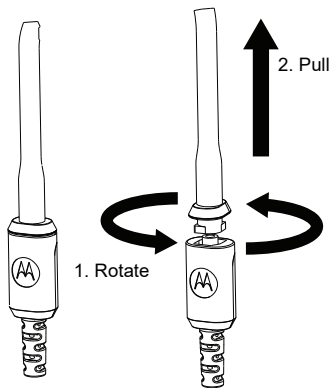

NOTES

Replaceable Parts

Table 2: Earpiece Replaceable Parts

Part Number	Quantity per Pack	Description
PMLN8079_	10	Cloth Clip
PMLN8092_	1	Acoustic Tube with Rubber Earbud
RLN4760_	1	Right Earpiece (Size S)
RLN4761_	1	Right Earpiece (Size M)
RLN4762_	1	Right Earpiece (Size L)
RLN4763_	1	Left Earpiece (Size S)
RLN4764_	1	Left Earpiece (Size M)

NOTES

Table 2: Earpiece Replaceable Parts (Continued)

Part Number	Quantity per Pack	Description
RLN4765_	1	Left Earpiece (Size L)
RLN6511_	1	Ultra Earplugs (Size S)
RLN6512_	1	Ultra Earplugs (Size M)
RLN6513_	1	Ultra Earplugs (Size L)

NOTES

Warranty Support

Motorola Solutions offers warranty for your accessory. Refer to your Motorola Solutions dealer or point-of-purchase for detailed information.

NOTE: Warranty is void after customer replacement of any parts other than replacement parts listed.

For More Information

Contact Motorola Solutions Authorized Dealer or visit us at www.motorolasolutions.com.

NOTES