

2-Wire xL Clear Tube Earpiece, PMLN8083



MN006609A01-AB

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.



© 2020 Motorola Solutions, Inc.
All rights reserved.

Refer to manual MN006616A01 for other languages:
<https://learning.motorolasolutions.com/>

EU Contact: Motorola Solutions, Czerwone Maki 82,
30-392 Krakow, Poland

Printed In



Attention!

Before using this product, read the RF Energy Exposure and Product Safety Guide that ships with the radio which contains instructions for safe usage and RF energy awareness and control for compliance with applicable standards and regulation.

Acoustic Safety

Exposure to loud noises from any source for extended periods of time may temporarily or permanently affect your hearing. The louder the radio volume, the less time is required before your hearing can be affected. Hearing damage from loud noise is sometimes undetectable at first and can have a cumulative effect. To protect your hearing:

- Use the lowest volume necessary to do your job.
- Turn up the volume only if you are in noisy surroundings.
- Turn down the volume before attaching headset or earpiece.
- Limit the amount of time you use headsets or earpieces at high volume.

- When using the radio without a headset or earpiece, do not place the radio speaker directly against your ear.
- If you experience hearing discomfort, ringing in your ears, or speech that is muffled, you should stop listening to your radio through your headset or earpiece, and have your hearing checked by your doctor.

To change the volume level, refer to Radio Product Safety Leaflet or CPS for Surveillance Kit Configurations.



Caution

Operation

- Turn off the device while attaching and detaching the earpiece.

Earpiece Overview

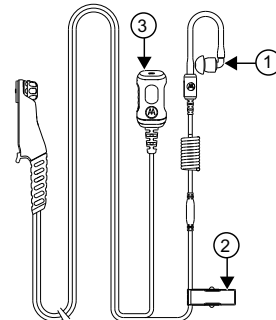


Table 1: Earpiece Overview and Description

| Indicator | Description |
|-----------|---|
| 1 | Translucent Acoustic Tube (Replaceable) |
| 2 | Metal Clip |
| 3 | Push-to-Talk, Microphone and Programmable Button Module |


Recommended Practice

- Do not cover the microphone port for optimum performance.
- Do not fill the earpiece with water.
- Clean the earpiece with soft damp cloth.
- Do not use the earpiece until completely dry.





Caution


Push-to-Talk, Microphone, and Programmable Button Module Overview and Description

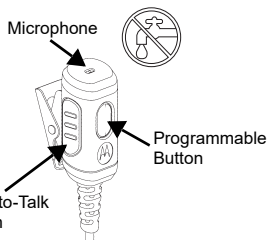


Recommended Wearing Position

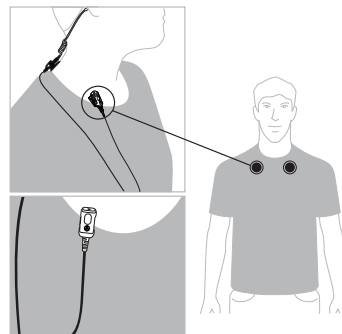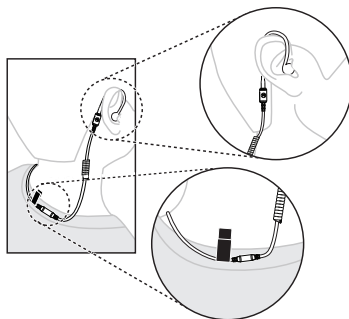

Cable Management

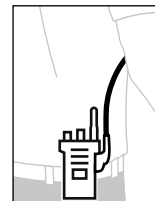


Recommended

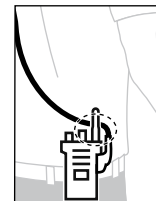

Not Recommended

To ensure optimum range and user experience, it is recommended to avoid crossing accessory cable with the radio antenna.

Translucent Acoustic Tube Replacement

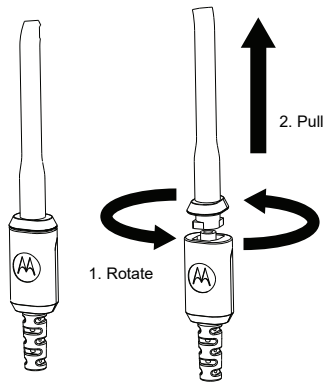

Replaceable Parts
Table 2: Earpiece Replaceable Parts

| Part Number | Quantity per Pack | Description |
|-------------|-------------------|----------------------------------|
| RLN4760_ | 1 | Right Earpiece (Size S) |
| RLN4761_ | 1 | Right Earpiece (Size M) |
| RLN4762_ | 1 | Right Earpiece (Size L) |
| RLN4763_ | 1 | Left Earpiece (Size S) |
| RLN4764_ | 1 | Left Earpiece (Size M) |
| RLN4765_ | 1 | Left Earpiece (Size L) |
| RLN6511_ | 1 | Ultra Earplugs (Size S) |
| RLN6512_ | 1 | Ultra Earplugs (Size M) |
| RLN6513_ | 1 | Ultra Earplugs (Size L) |
| PMLN8092_ | 1 | Acoustic Tube with Rubber Earbud |

Warranty

Motorola Solutions offers warranty for your accessory. Refer to your Motorola Solutions dealer or point-of-purchase for detailed information.

NOTE: Warranty is void after customer replacement of any parts other than replacement parts listed.

For More Information

Contact Motorola Authorized Dealer or visit us www.motorolasolutions.com.

NOTES

NOTES

NOTES

NOTES

NOTES