

**Rx Only Over-The-Ear Earpiece with GCAI-mini
MLN8248 User Manual**



MN007437A01-AB

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.
© 2020 Motorola Solutions, Inc. All rights reserved.

Refer to manual MN007439A01 for other languages:
<https://learning.motorolasolutions.com/>

EU Contact: Motorola Solutions,
Czerwone Maki 82, 30-392 Krakow,
Poland

Printed in



- When using the radio without a headset or earpiece, do not place the radio speaker directly against your ear.
- If you experience hearing discomfort, ringing in your ears, or speech that is muffled, you should stop listening to your radio through your headset or earpiece, and have your hearing checked by your doctor.

To change the volume level, refer to Radio Product Safety Leaflet or Customer Programming Software for Surveillance Kit Configurations.



Operation

Turn off the radio while attaching and detaching the earpiece.

Recommended Practice

- Do not fill the earpiece with water.
- Clean the earpiece with soft damp cloth.
- Do not use the earpiece until completely dry.

Description

This kit comes with an optional ear tip in three sizes for a better fit when used with the earpiece. You can rotate the ear tip to fit your left or right ear.

180 Degrees Arbitrary Rotation

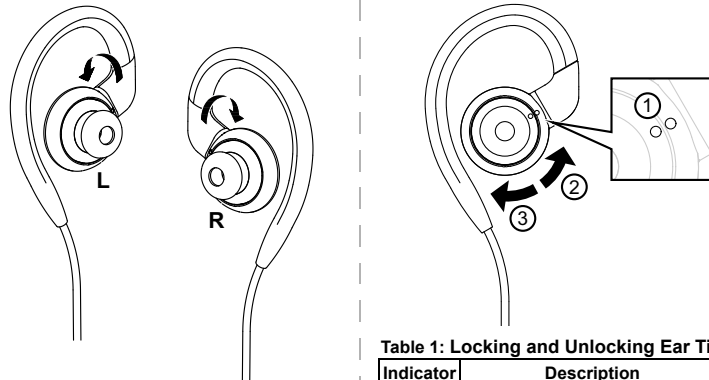


Table 1: Locking and Unlocking Ear Tip

Indicator	Description
1	Lock indicator
2	Turn counterclockwise to unlock
3	Turn clockwise to lock

Attention!


Before using this product, read the RF Energy Exposure and Product Safety Guide that ships with the radio which contains instructions for safe usage and RF energy awareness and control for compliance with applicable standards and regulation.

Acoustic Safety


Exposure to loud noises from any source for extended periods of time may temporarily or permanently affect your hearing. The louder the radio volume, the less time is required before your hearing can be affected. Hearing damage from loud noise is sometimes undetectable at first and can have a cumulative effect. To protect your hearing:

- Use the lowest volume necessary to do your job.
- Turn up the volume only if you are in noisy surroundings.
- Turn down the volume before attaching headset or earpiece.
- Limit the amount of time you use headsets or earpieces at high volume.


Earpiece Overview

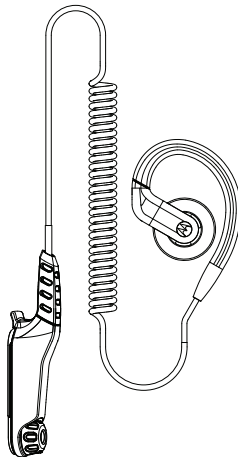


Ear Tip Attachment

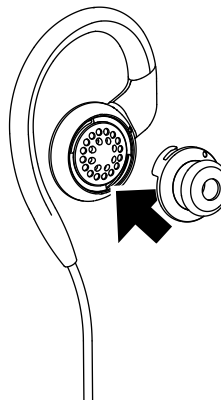

Cable Management

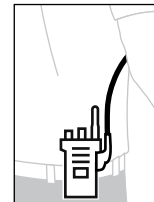

Recommended

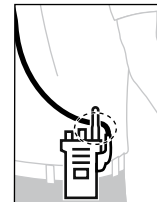

Not Recommended

To ensure optimum range and user experience, it is recommended to avoid crossing accessory cable with the radio antenna.

Replaceable Parts

Alternative sizes and their respective measurements are available in the following table.

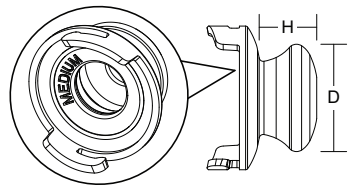


Table 2: Ear Tip Size and Measurement

Size	Height (H)	Diameter (D)
Small	6.1 mm	12.5 mm
Medium	7.0 mm	13.0 mm
Large	8.5 mm	14.0 mm

NOTES

NOTES

NOTES

Table 3: Earpiece Replaceable Part

Part Number	Quantity (Per Pack)	Description
PMLN8068_	5	Ear Tip (Size S)
PMLN8069_	5	Ear Tip (Size M)
PMLN8070_	5	Ear Tip (Size L)

NOTES

NOTES

NOTES

Warranty

Motorola Solutions offers warranty for your accessory. Refer to your Motorola Solutions dealer or point-of-purchase for detailed information.

NOTE: Warranty is void after customer replacement of any parts other than replacement parts listed.

For More Information

Contact Motorola Solutions Authorized Dealer or visit us at www.motorolasolutions.com.