

3-Wire Surveillance Kit with **Translucent Tube Earpiece** PMLN8646 User Manual

MN010347A01-AA



MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2024 Motorola Solutions, Inc. All rights reserved.

Printed in



### Table 1: Earpiece Overview and Descriptions

Indicator	Description	
1	Translucent Tube	
2	Metal Clip	
3	Push-to-Talk, and Programmable Button Module	
4	Microphone Module	



## Recommended Practice

 Do not cover the microphone port for optimum performance. Caution •Do not fill the earpiece with water.

- · Clean the earpice with soft damp cloth.
- Do not use the earpiece until completely dry.

### Attention!

Before using this product, read the RF Energy Exposure and Product Safety Guide that ships with the radio which contains instructions for safe usage and RF energy awareness and control for compliance with applicable standards and regulation.

## **Acoustic Safety**

Exposure to loud noises from any source for extended periods of time may temporarily or permanently affect your hearing. The louder the radio volume, the less time is required before your hearing can be affected. Hearing damage from loud noise is sometimes undetectable at first and can have a cumulative effect. To protect your hearing:

- · Use the lowest volume necessary to do vour iob.
- Turn up the volume only if you are in noisy surroundings.

## Operation

Caution

- •Turn off the device while attaching and detaching the earpiece.

· Turn down the volume before attaching

headsets or earpieces at high volume.

· When using the radio without a headset

or earpiece, do not place the radio

If you experience hearing discomfort.

ringing in your ears, or speech that is muffled, you should stop listening to

To change the volume level, refer to Radio

vour radio through your headset or

earpiece, and have your hearing

Product Safety Leaflet or CPS for

Surveillance Kit Configurations.


checked by your doctor.

speaker directly against your ear.

· Limit the amount of time you use

headset or earpiece.


## **Earpiece Overview**

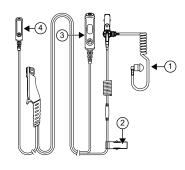


## Microphone Module Overview




## Push-to-Talk and Programmable **Button Module Overview**

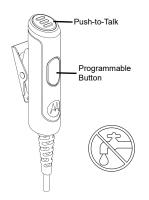


# **Recommended Wearing Position**

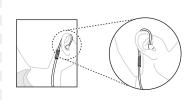

### **PTT Wear Position**

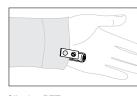

Clipping PTT

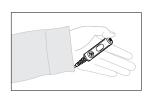

Taking Out PTT



Pressing PTT



**Mic Wear Position** 





**Cable Management** 





Recommended Not Recommended To ensure optimum range and user experience, it is recommended to avoid crossing the accessory cable with the radio antenna.

# Replaceable Parts

Table 2: Earpiece Replaceable Parts			
Part Number	Quantity per Pack	Description	
PMLN8079_	10	Cloth Clip	
RLN6242_	1	Acoustic Tube with Rubber Earbud	
RLN4760_	1	Right Earpiece (Size S)	
RLN4761_	1	Right Earpiece (Size M)	
RLN4762_	1	Right Earpiece (Size L)	
RLN4763_	1	Left Earpiece (Size S)	
RLN4764_	1	Left Earpiece (Size M)	
RLN4765_	1	Left Earpiece (Size L)	

Table 2: Earpiece Replaceable Parts			
Part Number	Quantity per Pack	Description	
RLN6511_	1	Ultra Earplugs (Size S)	
RLN6512_	1	Ultra Earplugs (Size M)	
RLN6513_	1	Ultra Earplugs (Size L)	
		,	

## **Warranty Support**

Motorola Solutions offers warranty for your accessory. Refer to your Motorola Solutions dealer or point-of-purchase for detailed information. NOTE: Warranty is void after customer replacement of any parts other than replacement parts listed.

Contact Motorola Solutions Authorized Dealer or visit us at www.motorolasolutions.com.

# **Contact Address**

**EU Contact:** Motorola Solutions, Czerwone Maki 82.

For More Information

UK address:

30-392 Krakow, Poland Motorola Solutions UK Ltd., Nova South, 160 Victoria Street, London, SW1E 5LB, United Kingdom.

### **NOTES**